




ClareVision Video  
Surveillance

## **Value and Performance Series Fixed Lens Turret Camera Installation Guide**

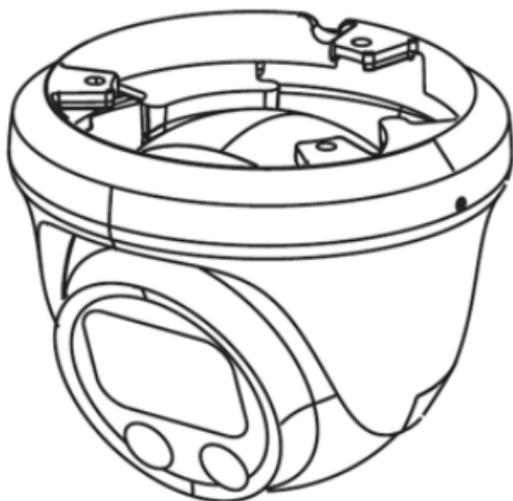

For Setting up cameras and complete user manuals, please scan these QR codes:

### Quick Start Guide



<https://bit.ly/34bIIIND>

### User Manual



<https://bit.ly/34eKmsq>

## Box Contents

- Camera
- Mounting template
- Mounting kit
- Accessory kit

## Required Equipment

- Phillips head screwdriver
- Power source: Ethernet cable
- Drill with 1/4" drill bit

## Inspection

Ensure that the device is in good condition and all the assembly parts are included.

- Make sure that all equipment is powered off during installation.
- Ensure the mounting surface is strong enough to withstand three times the weight of the camera and the mount.
- If the product does not function properly, please contact technical support. **Do not disassemble the camera for repair or maintenance.**



WARNING: This product can expose you to chemicals including cadmium, which which is known to the State of California to cause cancer. For more information, go to [www.p65warnings.ca.gov](http://www.p65warnings.ca.gov).


# Overview

Before installing, familiarize yourself with the parts of the camera.

## Performance Series Cables




Ethernet Adapter

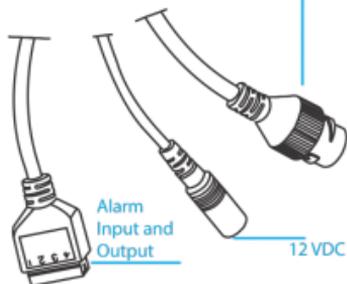

Alarm Input and Output


12 VDC

## Value Series Cables

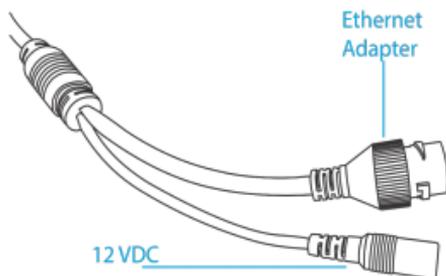

Ethernet Adapter


12 VDC

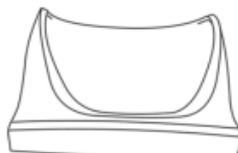

Skirt




Camera Body

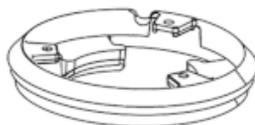

Base

## Installation


1. Drill a cable hole and  $\frac{1}{4}$ " pilot holes, using the supplied template.
2. Using the provided hex-key, loosen the machine screw on the side and remove the base.

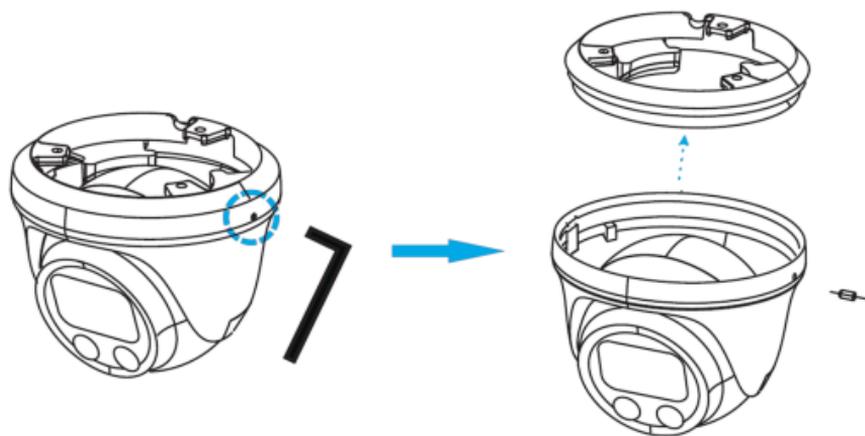


**Note:** When removing the base, do so on a flat surface to avoid dropping the camera body.

## Installation

3. Insert the drywall anchors. Secure the base to the mounting surface using provided screws.

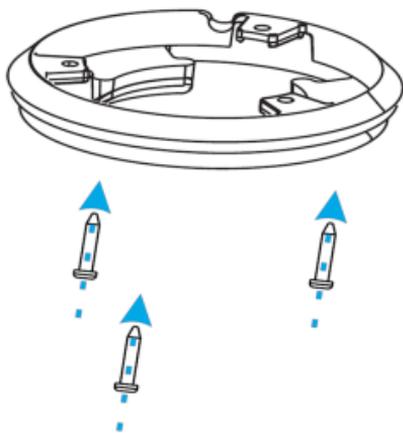


4. Connect an ethernet cable that is connected to the desired POE enabled network into the camera's ethernet adapter.

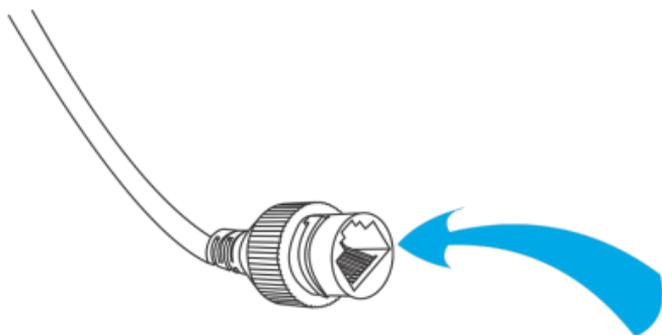

## Installation

5. Rotate the camera body to the desired viewing angle.
6. Snap the camera body into the base.
7. Using the provided hex-key, tighten the machine screw on the side until the camera body is secured firmly to the base.

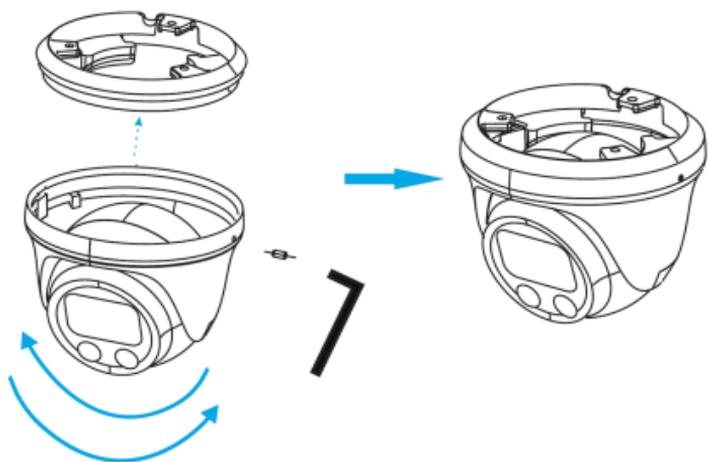

**Note:** A small “lip” is present on the inside of the base. Secure the interlocking ridges underneath this lip before attempting to snap into place.

## Camera Setup & Default Password

**IMPORTANT NOTE:** The default camera setup password is the **FIRST 6 Characters of the UUID/SN.**

You will be prompted to change the password when setting up the camera. Please refer to the Quick Start Guide for complete setup instructions or by visiting: <https://bit.ly/34bIIND>

## Support

### **For additional help:**

Integrator/Dealer Support:

**Phone:** 941.404.1072

**Email:** [claresupport@clarecontrols.com](mailto:claresupport@clarecontrols.com)

For more information, instructional videos, or support documentation, visit our Help Center and view your item's product page:

<https://www.clarecontrols.com/helpcenter>

## Contact Information

### **Clare Controls, LLC.**

7519 Pennsylvania Ave, Suite 104

Sarasota, FL 34243

**General:** 941.328.3991

**Fax:** 941.870.9646

[www.clarecontrols.com](http://www.clarecontrols.com)

## Warranty Information

Clare Controls offers a two (2) year limited warranty on original Clare Controls components, from the date of shipment from Clare Controls. To view complete limited warranty details, including limitations and exclusions, please visit:

[www.clarecontrols.com/warranty](http://www.clarecontrols.com/warranty)

## Camera Information

Please provide this guide to the customer and notate the camera installation location and new camera password. This guide includes important camera details.

Camera Password: \_\_\_\_\_

Installattion Location: \_\_\_\_\_

Camera Details:

