

Vertiv™ Liebert® EXL S1

Installer Guide

 $250\;\text{kVA}$ – $1200\;\text{kVA}$, $60\;\text{Hz}$, Three-Phase UPS, Single-Module and Multi-Module (Distributed Bypass)

The information contained in this document is subject to change without notice and may not be suitable for all applications. While every precaution has been taken to ensure the accuracy and completeness of this document, Vertiv assumes no responsibility and disclaims all liability for damages resulting from use of this information or for any errors or omissions. Refer to other local practices or building codes as applicable for the correct methods, tools, and materials to be used in performing procedures not specifically described in this document.

The products covered by this instruction manual are manufactured and/or sold by Vertiv This document is the property of Vertiv and contains confidential and proprietary information owned by Vertiv. Any copying, use or disclosure of it without the written permission of Vertiv is strictly prohibited.

Names of companies and products are trademarks or registered trademarks of the respective companies. Any questions regarding usage of trademark names should be directed to the original manufacturer.

Technical Support Site

If you encounter any installation or operational issues with your product, check the pertinent section of this manual to see if the issue can be resolved by following outlined procedures.

Visit https://www.Vertiv.com/en-us/support/ for additional assistance.

TABLE OF CONTENTS

1 Important Safety Instructions	!
2 Mechanical Installation	3
2.1 Pre-Installation Planning	3
2.2 Preliminary Checks	3
2.3 Environmental Considerations	3
2.3.1 UPS Room	3
2.3.2 Storing the UPS and Batteries for Delayed Installation	5
2.3.3 Installation Altitude	6
2.4 Positioning	6
2.4.1 Moving the Cabinets	6
2.4.2 Clearances	7
2.4.3 Raised-Floor Installations	7
2.4.4 Floor Anchors—Optional	7
2.4.5 Kick Plate Installation—Standard	7
2.4.6 Special Considerations for 1+N Parallel Systems	7
2.4.7 Unpacking and Unloading the Cabinet from the Pallet	8
2.5 System Configuration	9
2.6 Power Cable Busbars	10
2.7 Attaching Input/Output Cabinets	13
2.7.1 Moving Input/Output Cabinets into Position	13
3 UPS Electrical Installation	15
3.1 External Protective Devices	15
3.1 External Protective Devices 3.2 Power Cables	
	15
3.2 Power Cables	15
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS	15 16 16
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds	15 16 16
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches	15 16 16 16
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection	15 16 16 16
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground	15 16 16 16 17 18
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground 3.5 DC Power Connections	
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground 3.5 DC Power Connections 3.6 Configuring Ground Connections	15 16 16 16 16 17 18 19 20 20
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground 3.5 DC Power Connections 3.6 Configuring Ground Connections 3.6.1 Three-Wire Input Connections	15 16 16 16 16 17 18 19 20 21
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground 3.5 DC Power Connections 3.6 Configuring Ground Connections 3.6.1 Three-Wire Input Connections 3.6.2 Recommended Grounding Configuration, Battery Systems 3.6.3 High-Resistance Ground Systems 3.7 Distributed Static Switch (1+N) System Cabling Layouts	15 16 16 16 16 17 18 19 20 21 22 22
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground 3.5 DC Power Connections 3.6 Configuring Ground Connections 3.6.1 Three-Wire Input Connections 3.6.2 Recommended Grounding Configuration, Battery Systems 3.6.3 High-Resistance Ground Systems 3.7 Distributed Static Switch (1+N) System Cabling Layouts 3.8 Control Cable and Communication	15
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground 3.5 DC Power Connections 3.6 Configuring Ground Connections 3.6.1 Three-Wire Input Connections 3.6.2 Recommended Grounding Configuration, Battery Systems 3.6.3 High-Resistance Ground Systems 3.7 Distributed Static Switch (1+N) System Cabling Layouts 3.8 Control Cable and Communication 3.8.1 Slots for Vertiv™ Liebert® IntelliSlot™ Cards—SLOT1 and SLOT3	15 16 16 16 17 18 19 20 21 22 23 25
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground 3.5 DC Power Connections 3.6 Configuring Ground Connections 3.6.1 Three-Wire Input Connections 3.6.2 Recommended Grounding Configuration, Battery Systems 3.6.3 High-Resistance Ground Systems 3.7 Distributed Static Switch (1+N) System Cabling Layouts 3.8 Control Cable and Communication 3.8.1 Slots for Vertiv™ Liebert® IntelliSlot™ Cards—SLOT1 and SLOT3 3.8.2 Slot for Vertiv™ Liebert® LIFE Services Products—SLOT2	15
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground 3.5 DC Power Connections 3.6 Configuring Ground Connections 3.6.1 Three-Wire Input Connections 3.6.2 Recommended Grounding Configuration, Battery Systems 3.6.3 High-Resistance Ground Systems 3.7 Distributed Static Switch (1+N) System Cabling Layouts 3.8 Control Cable and Communication 3.8.1 Slots for Vertiv™ Liebert® IntelliSlot™ Cards—SLOT1 and SLOT3 3.8.2 Slot for Vertiv™ Liebert® LIFE Services Products—SLOT2 3.8.3 Serial Interface for Liebert LIFE Services Cards (Serial Input/Output)—XP6	15 16 16 16 16 17 18 19 20 21 22 23 25 25 25 25
3.2 Power Cables 3.3 Sizing the Input Breaker that Feeds the UPS 3.3.1 Single or Dual Input Feeds 3.3.2 Automatic Transfer Switches 3.4 Input Power Cable Connection 3.4.1 Equipment Ground 3.5 DC Power Connections 3.6 Configuring Ground Connections 3.6.1 Three-Wire Input Connections 3.6.2 Recommended Grounding Configuration, Battery Systems 3.6.3 High-Resistance Ground Systems 3.7 Distributed Static Switch (1+N) System Cabling Layouts 3.8 Control Cable and Communication 3.8.1 Slots for Vertiv™ Liebert® IntelliSlot™ Cards—SLOT1 and SLOT3 3.8.2 Slot for Vertiv™ Liebert® LIFE Services Products—SLOT2	15 16 16 16 16 17 18 19 20 21 22 23 25 25 25 25

3.8.6 Customizable Input Dry Contacts—AP30/AP202 XP11	29
3.8.7 Connector for Parallel UPS Connection—AP30-XP71A, 71B, AP30-XP72A, 72B	3
3.8.8 RJ-45 Interface for Synchronization with External Signal—AP30-XP31	32
3.8.9 UPS Control Contacts with Battery Cabinet or Module Battery Disconnect	32
3.8.10 UPS Control Contacts with Global Maintenance Bypass	32
3.9 Top Entry Low-Voltage	33
3.10 Bottom Entry Low-Voltage	33
4 Optional Equipment	35
4.1 Options	35
4.2 Rectifier Feed Breaker (RFB)	36
4.21 Remote Back-Feed Breaker	36
4.3 Multi-Module System Options and Accessories	37
4.3.1 Paralleling Cable Kit	38
4.3.2 Multi-Bus Synch Module (MBSM)	38
5 Specifications	39
Appendices	57
Appendix A: Technical Illustrations	57



1 IMPORTANT SAFETY INSTRUCTIONS

SAVE THESE INSTRUCTIONS

This manual contains important instructions that should be followed during installation of your Vertiv[™] Liebert® EXL S1 UPS. Read this manual thoroughly, paying special attention to the sections that apply to your installation, before working with the UPS. Retain this manual for use by installing personnel.



WARNING! Risk of electrical shock. Can cause personal injury or death. This UPS has several circuits that are energized with high DC as well as AC voltages. Check for voltage with both AC and DC voltmeters before working within the UPS. Check for voltage with both AC and DC voltmeters before making contact. Only properly trained and qualified personnel wearing appropriate safety headgear, gloves, shoes and glasses should be involved in installing the UPS or preparing the UPS for installation. When performing maintenance on any part of the equipment under power, service personnel and test equipment should be standing on rubber mats. In case of fire involving electrical equipment, use only carbon dioxide fire extinguishers or those approved for use in fighting electrical fires.



WARNING! Extreme caution is required when performing installation and maintenance. Special safety precautions are required for procedures involving handling, installation and maintenance of the UPS system. Observe all safety precautions in this manual before handling or installing the UPS system. Observe all precautions in the Operation and Maintenance Manual, SL-26090, before as well as during performance of all maintenance procedures. Observe all DC safety precautions before working on or near the DC system.



WARNING! Risk of heavy unit falling over. Improper handling can cause equipment damage, injury or death. Exercise extreme care when handling UPS cabinets to avoid equipment damage or injury to personnel. Locate the center of gravity symbols and determine the unit's weight before handling each cabinet. Test lift and balance the cabinets before transporting them. Maintain minimum tilt from vertical at all times. Slots at the base of the module cabinets are intended for forklift use. Base slots will support the unit only if the forks are completely beneath the unit. Read all of the following instructions before attempting to move, lift or remove packaging from the unit, or to prepare the unit for installation. The UPS module weighs up to 4667 lb. (2117 kg).



WARNING! Risk of electrical shock and fire. Can cause equipment damage, personal injury or death. Only normal safety precautions are necessary under typical operation and with all UPS doors closed. The area around the UPS system should be kept free of puddles of water, excess moisture and debris. Only test equipment that is designed for troubleshooting should be used. This is particularly true for oscilloscopes. Always check with an AC and DC voltmeter to ensure safety before making contact with the UPS or using tools to work on any UPS component. Dangerously high potential electric charges may exist at the capacitor banks and at the DC connections even when input power is turned Off. All wiring must be installed by a properly trained and qualified electrician. All power and control wiring must comply with all applicable national, state and local codes. One person should never work alone, even if all power is disconnected from the equipment. A second person should be standing nearby to assist and to summon help in case of an accident.

1

NOTICE

This unit complies with the limits for a Class A digital device, pursuant to Part 15 Subpart J of FCC rules. These limits provide reasonable protection against harmful interference in a commercial environment. This unit generates uses and radiates radio frequency energy and, if not installed and used in accordance with this instruction manual, may cause harmful interference to radio communications. Operation of this unit in a residential area may cause harmful interference that the user must correct at his own expense.

NOTE: Materials sold hereunder cannot be used in the patient vicinity (e.g., use where UL, cUL or IEC 60601-1 is required). Medical applications such as invasive procedures and electrical life support equipment are subject to additional terms and conditions.



2 MECHANICAL INSTALLATION

2.1 Pre-Installation Planning

This section describes the requirements that must be taken into account when planning the positioning and cabling of the UPS and related equipment.

Installing personnel should observe these general procedures and practices. The particular conditions of each site will determine the applicability of such procedures.



WARNING! Risk of electrical shock. Can cause injury or death. Special care must be taken when working with the batteries associated with this equipment. When the batteries are connected together, the battery-terminal voltage will exceed 400VDC and is potentially lethal.

NOTE: All equipment not referred to in this manual is shipped with details of its own mechanical and electrical installation.

NOTICE

Risk of incorrect input power connection. Can cause equipment damage.

The standard Liebert® EXL S1 is suitable for connection to 60Hz, 3-phase, 3-wire-plus-ground input power.

NOTE: Do not apply electrical power to the UPS equipment before the arrival of the commissioning engineer. Connecting power before the commissioning engineer determines the system is properly installed may void the warranty.

2.2 Preliminary Checks

Before installing the UPS, carry out the following preliminary checks:

- Visually examine the UPS equipment for transit damage, both internally and externally. Report any damage to the shipper and to your Vertiv™ representative immediately.
- Verify that the correct equipment is being installed. The equipment supplied has an identification tag on the interior of the doors stating the type, size, and main-calibration parameters of the UPS.
- Verify that the UPS room satisfies the environmental conditions stipulated in the equipment specification, paying particular attention to the ambient temperature and air exchange system.

2.3 Environmental Considerations

2.3.1 UPS Room

The UPS should be installed vertically, on a level and even concrete or other non-combustible surface, and in an area protected from extremes of temperature and humidity. Refer to Specifications on page 39 for detailed product specifications.

The Liebert EXL S1 is intended for indoor installation and should be located in a cool, dry, clean-air environment with adequate ventilation to keep the ambient temperature within the specified operating range (see **Table 5.3** on page 42).

NOTE: Vertiv™ will not accept liability or pay costs, fees, or damages arising from storing or operating the UPS outside of the specified environmental, performance, or operating ranges and conditions as set forth herein or in other product documentation. Please contact Vertiv Technical Support for more information.

The UPS is cooled with the aid of internal fans. Do not cover the ventilation openings. Cooling air must enter and exit the cabinets freely to prevent overheating or malfunctioning.


The UPS is equipped with air filters behind the front doors. A schedule for inspection of the air filters is required. The period between inspections will depend upon environmental conditions.

When using bottom-entry cabling, the conduit plate must be installed.

Keep all protective shrink wrap on the unit and remove it only when required. If the unit does not have an external, temporary filter (Grainger Part Number 2JTA8 or equivalent) installed on top of the unit (see **Figure 2.1** below contact Vertiv Technical Support.

The UPS is shipped with external filter material that must remain attached to the UPS to protect potential areas of foreign debris ingress to the UPS. In addition to the external filter material, filters installed on the top and front of the UPS must not be removed during construction activities. All filter media is necessary to prevent debris and dust entry to the UPS throughout the installation process. The external temporary filter at the top of the UPS will be removed by a Vertiv Customer Engineer during startup and must be reinstalled whenever the UPS is not operating during construction activities.

Figure 2.1 Liebert® EXL S1 with Temporary Filter Installed

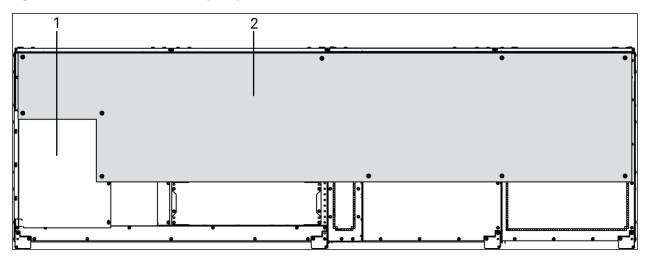

item	Description
1	Top of UPS; 625-800kVA unit shown
2	Filter coverage area

NOTICE

Foreign material inside or in the vicinity of the UPS module presents a potential risk to the operational integrity of an installed UPS system.

This risk is especially high if any conductive material finds its way inside the UPS module.

The risk potentially involves damage to the installed UPS equipment and subsequent degradation or loss of power to the connected critical site load.



Vertiv™ applies the highest safety standards in equipment design to ensure that no live parts are exposed to external contact, and also to ensure that the equipment is protected against the introduction of foreign bodies during operation. However, it is not possible for Vertiv to ensure that foreign bodies will not be introduced during on-site installation, or when the UPS doors and covers are open and the electrical terminals are exposed to allow power line connections to be made by the electrical contractor/installer.

To prevent major disruption to site operations and risk to property and personnel, including the possibility of a fatality, each site's facility manager or construction manager must prevent foreign bodies from being introduced into the UPS module.

All UPS modules are thoroughly inspected by Vertiv engineers before being placed into service and testing on-site. However, the person responsible for the site must ensure that the UPS module and the immediate surroundings are kept clean and free from any possible conductive material such as metal foil, food wrappers, cable shields, washers and other hardware, scrap metal and dust.

If the UPS system is shut down after placement into service and testing is completed, the UPS room must be kept clean to avoid the possibility (during restart) of the considerable volume of airflow produced by UPS operation to dislodge and/or drag any foreign bodies into the equipment, which can result in system failure and possible supply interruption to the critical site load, and several hours of downtime resulting from the damage typically associated with such events.

If the UPS is left running/operational after placement into service and testing, the room must be kept clean to prevent foreign bodies from entering the UPS module via its forced-air flow.

NOTE: Ensure that the top of the UPS is protected from any metal shavings and debris by using the temporary external filter material that shipped with the UPS. The installer is responsible for ensuring that no conductive material enters the unit. The installer will be billed at Vertiv's prevailing labor wage for any cleaning or unit or component failure as a result of debris entering the unit.

2.3.2 Storing the UPS and Batteries for Delayed Installation

If the UPS system will not be installed immediately, store it indoors in a clean, dry and cool location (see **Table 5.3** on page 42). If the system includes a battery cabinet, the batteries' requirements dictate the storage conditions. Unpack, install, and charge batteries as soon as possible after delivery.

NOTICE

Risk of failure to properly charge the batteries. Can cause permanent damage to the batteries and void the warranty.

Batteries will discharge during storage. Batteries must be recharged as recommended by the battery manufacturer. A notice of "Charge Before Date" is affixed to each cabinet that has batteries inside. The "Charge Before Date" is calculated based on storing the batteries at 77°F (25°C). Storage at a higher temperature will increase the rate of self-discharge, which requires earlier recharging. Consult the battery manufacturer on how to determine when the batteries need to be recharged.

2 Mechanical Installation

2.3.3 Installation Altitude

The maximum operating altitude of the UPS, without derating, is 3300 ft (1000 m). At higher altitudes the load must be reduced according to **Table 2.1** below.

Table 2.1 Altitude derating

Altitude, ft. (m)	Derating Factor
3281 (1000)	1.000
3937 (1200)	0.990
4922 (1500)	0.975
6566 (2000)	0.950
8203 (2500)	0.925
9843 (3000)	0.900
11,483 (3500)	0.875
11,811 (3600)	0.870
13,124 (4000)	0.850
13,780 (4200)	0.840
14,764 (4500)	0.825
16,405 (5000)	0.800

2.4 Positioning

The cabinet is structurally designed to permit lifting from the base with a forklift, pallet jack or similar equipment.

Access to the power terminals, auxiliary terminal blocks and power switches is from the front and top.

The doors and top low-voltage cover can be opened for access to the power connection bars, auxiliary terminal blocks and power isolators. The front door can be opened 90 degrees for more flexibility in installations.

2.4.1 Moving the Cabinets

Plan the travel route between the point of arrival and the unit's position to make sure that all passages are wide enough for the unit and that floors are capable of supporting its weight. For instance, check that doorways, lifts, ramps and so on are adequate and that there are no impassable corners or changes in the level of corridors that would prevent passage.

Ensure that the UPS weight is within the designated surface weight loading (kg/cm2) of any handling equipment. For weight details, see **Table 5.2** on page 41.

Move the UPS with a forklift or similar equipment to ease the relocation and to reduce unit vibration. The bottom structure of the UPS will support the unit only if the forks are completely beneath the unit. The optional battery cabinets also should be moved with a forklift or similar equipment.

Ensure that any equipment used in moving the UPS cabinet has sufficient lifting capacity to transport the unit. Care must be taken to protect the panels. Do not tilt the UPS or other system cabinet more than 15 degrees.

Handling with straps is not authorized.





WARNING! Risk of heavy unit falling over. Improper handling can cause equipment damage, injury or death. Because the weight distribution in the cabinet is uneven, use extreme care while handling and transporting. Take extreme care when handling UPS cabinets to avoid equipment damage or injury to personnel. Locate the center of gravity symbols and determine the unit's weight before handling each cabinet. Test lift and balance the cabinets before transporting them. Maintain the minimum tilt from vertical at all times. The UPS module weighs up to 4667 lb. (2117kg).

2.4.2 Clearances

The UPS has no ventilation grilles at either side or at the rear. Leave a distance of 24 in. (610 mm) between the top of the UPS and any overhead obstacles for service and adequate circulation of air from the unit. Clearance around the front of the equipment should be sufficient to enable free passage of personnel with the doors fully opened, about 50 in. (127cm). In the rare instance of module replacement, 50 in. (127cm) of clearance is required for the Service team to perform module replacement. 50 in. (127 cm) allows adequate clearance for both the module and the heavy duty lift used by the Service team to remove and replace the modules. If 50 in. (127cm) is not available, then the Service team will instead replace components and subassemblies in the modules as part of their repair process.

2.4.3 Raised-Floor Installations

If the equipment will be installed on a raised floor, mount the UPS on a pedestal suitably designed to accept the equipment point-loading. Refer to the base view to design this pedestal.

2.4.4 Floor Anchors—Optional

For seismic-resistant installations, special floor anchors must be used for the UPS and matching battery cabinets; see **5** on page 39.

2.4.5 Kick Plate Installation—Standard

Kick plates must be installed. If the unit will be installed in a position that does not permit access to rear of the UPS, install the kick plates before the unit is placed in its final position.

2.4.6 Special Considerations for 1+N Parallel Systems

Consider the grounding configuration of your system before finalizing module placement; see Configuring Ground Connections on page 19.

The cabling impedance must be closely matched to ensure proper load-sharing. Mismatched impedance may cause an overload on one module in a 1+N system, triggering a shutdown and loss of power to the connected load. Mismatched cable impedance is amplified when a 1+N system is operating on bypass because the power on the bypass path is not controlled. We recommend matching the impedance in the bypass path of paralleled systems as closely as possible to ensure good bypass current sharing.

The 1+N UPS Bypass Current Sharing Inductor option can be used to minimize the effects of cable impedance mismatch.

The impedance mismatch can also be minimized by controlling the wiring length of each unit. The design and the layout of the UPS system and associated panels and cabling should be examined closely to ensure that cable lengths and impedance are closely matched.

For Liebert® EXL S1 systems, the total combined cable length of the bypass feeder cables and the module output cables for each module must be within 5% from maximum to minimum. The combined cable length is the sum of the length from the common source feeding all the modules to the common output switchboard.

If the cabling impedance must to be greater than 5% or the total, planned system load exceeds more than 85% per module, contact your Vertiv™ representative to calculate whether the system will result in an overload condition when operating on bypass.

When bringing a 1+N system on line for the first time or after removing one unit, we recommend checking the bypass current mismatch. To check the bypass current mismatch:

- 1. Place a load on the bypass of each UPS module.
- 2. View the output current of each unit.

The accuracy of the currents displayed on the UPS module is sufficient for this check. If the mismatch is greater than 5%, the bypass impedance must be balanced or the load must be limited to less than the maximum rating.

The output switchboard for any 1+N system must be configured with one Module Output Circuit Breaker (MOB) for each UPS module that is to be connected to that switchboard. The breaker must be equipped with auxiliary contacts that will be monitored by the UPS in order for interlocks to function properly and for the HMI to indicate the bypassed status of the module.

We recommend selecting breakers that work with current levels that may occur when switching a module onto the active bus. Breakers with adjustable instantaneous settings should be adequate to achieve this.

For further information about matching cable impedance or refer to Performance Improvements with Sharing Inductors in Distributed Static Switch UPS Systems on the Liebert EXL S1 product page at www.Vertiv.com, or contact Vertiv support, http://www.Vertiv.com/en-us/support/.

2.4.7 Unpacking and Unloading the Cabinet from the Pallet

Take the utmost care when removing the packaging to prevent damage to the equipment. Check all packaging materials to ensure that no important items are discarded.

Once the packaging is removed, take the UPS off the pallet by removing the retaining screws securing it to the pallet. Refer to page 5 of the appropriate illustration included in Technical Illustrations on page 57. 2.5 on the facing page, lists the relevant drawings by number.

Once the retaining screws are removed from the pallet, lift the unit off with a forklift.

Do not remove the retaining brackets from the UPS because they are used to fasten the UPS to the floor, except where seismic compliance is required and the optional seismic anchoring kits are used.



2.5 System Configuration

A UPS system is composed of a number of equipment cabinets, depending on the individual system design requirements. In general, all the cabinets in an installation will be the same height.


NOTE: If you are bolting cabinets together, remove the side panels before beginning installation.

- UPS with connected battery cabinets—Shown in Figure 2.2 below. The battery cabinets are connected to the UPS and internally wired. The battery cabinets must be installed on the right of the UPS in a connected system. On 600kVA and lower models, the battery wiring cabinet is a separate cabinet installed on the right side of the UPS between the UPS and battery cabinets.
- Stand-alone, interconnected battery cabinets—Shown in Figure 23 on the next page, with the battery junction cabinet on one end. The battery cabinets are interconnected with the battery wiring cabinet, but are not connected to the right side of the UPS. In this configuration, the battery junction cabinet may be on either end or between the battery cabinets.
- Stand-alone battery system—The battery cabinet system stands alone. In this configuration, there is no junction cabinet and the battery cabinets are not connected to the UPS. Battery power cables are routed directly to the DC busbars in the UPS I/O cabinet.

NOTE: Make sure that you complete all of the connections detailed in the "Interconnection Details" drawing before making any power-cabling connections. The interconnects are very hard to access after the power wiring is complete. See Technical Illustrations on page 57, for the appropriate drawing for your system


The detailed arrangement and cabinet dimensions for your UPS system is described in the installation drawings. Refer to the appropriate illustrations for your unit included in Technical Illustrations on page 57.

Figure 2.2 Connected and Internally Wired UPS System

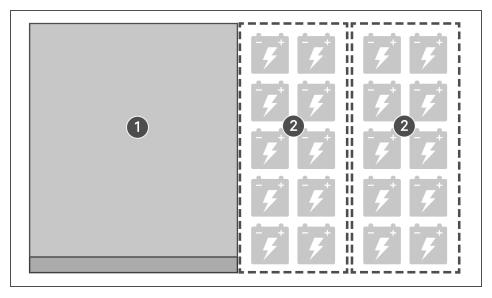

Item	Description
1	UPS
2	Battery cabinets

Figure 2.3 Stand-Alone, Interconnected Battery Cabinets

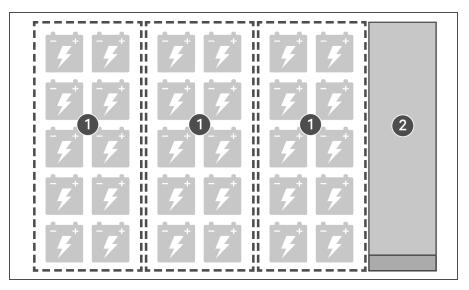

item	Description
1	Battery cabinet
2	Junction cabinet

2.6 Power Cable Busbars

10

Cables can enter the UPS cabinet from bottom or top into the input/output (I/O) section of the unit. Various battery cabinet arrangements are illustrated in **2.5** on the previous page, to **2.5** on the previous page.

The detailed cabling and connection for your UPS system is described in the installation drawings. In addition to the following instructions, refer to the appropriate illustrations for your unit included in Technical Illustrations on page 57. 25 on the previous page, lists the drawings by number, UPS model and options.

Input power, from utility power or from a DC system, connects to the UPS through an input/output cabinet. When Liebert® battery cabinets are attached to the UPS, Vertiv[™] supplies the busbars and cables for the power connections.

- A UPS with static bypass utilizes only Input/Output Cabinet 1.
- A UPS with back-feed disconnect, common mode choke, bypass sharing inductors or any combination of these options, utilizes Input/Output Cabinet 2 or Input/Output Cabinet 3.

The battery cabinets connect to the input/output cabinet with busbars.

- UPS models with static bypass only employ busbars that enter below the cabinet roof line. Those busbars are enclosed by the battery cabinet and the input/output cabinet.
- UPS models with back-feed disconnect, common mode choke, bypass sharing inductors or with any combination of these options, employ busbars that extend through openings in the tops of the adjacent battery cabinet and input/output cabinet. These busbars require a protective, factory-supplied shroud that is attached to the input/output cabinet and the adjacent attached battery cabinet. The protective, factory-supplied shroud is shown in Figure 2.5 on page 12.




To connect power to the UPS from the attached battery system:

- 1. Remove the panels from the right side of the input/output cabinet and from the left side of the adjacent battery cabinet.
- 2. Position the cabinets and bolt them together.
- 3. Remove two interconnect straps and the M10 mounting hardware from the battery cabinet. Keep straps and hardware for possible future use.
- 4. Use the hardware supplied in the cable kit to connect the output busbars from the battery cabinet to the input busbars in the input/output cabinet.

NOTE: Busbar connections vary depending on the system rating. For details, refer to the submittal drawings that shipped with the battery system and to **Figure 2.4** below and **Figure 2.5** on the next page.)


- 5. Torque the busbar and cable connectors to 480 in-lb. (54Nm).
- 6. On systems connecting to Input/Output Cabinet 2 or 3, install the protective shroud using the four factory-supplied M6 x 12mm self-tapping screws to attach the shroud and enclose the busbars, see Figure 2.5 on the next page.

Figure 2.4 Battery Cabinet Busbar Connections to Input/Output Cabinet 1

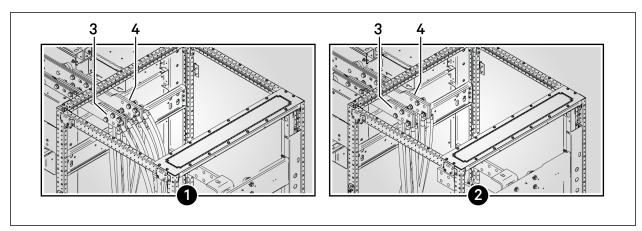

Item	Description	
1	1 1000kVA to 1200kVA models	
2	500kVA to 800kVA models	
3	3 Connect to negative battery bus in I/O cabinet	
4	Connect to positive battery bus in I/O cabinet	

Figure 2.5 Battery Cabinet Busbar Connections to Input/Output Cabinet 2 or 3 (1200kVA model shown)

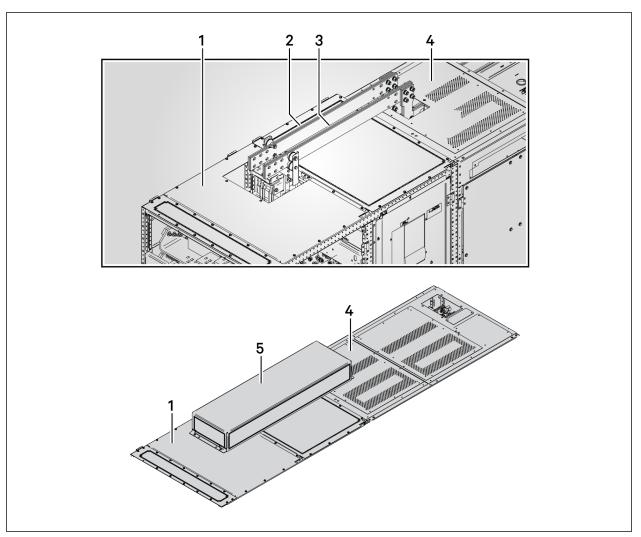

Item	Description
1	Input/output cabinet
2	Busbar x 3
3	Busbar x 3
4	Battery cabinet
5	Busbar shroud



2.7 Attaching Input/Output Cabinets

The UPS utilizes input/output cabinets for electrical connections.

A UPS with static bypass only utilizes Input/Output Cabinet 1.

A UPS with the optional back-feed disconnect, the optional common mode choke, the optional bypass sharing inductors or with any combination of those options utilizes Input/Output Cabinet 2 or 3.

The connection points and shipping splits for your UPS system are described in the installation drawings. Refer to the appropriate illustrations for your unit included in Technical Illustrations on page 57.

The following table lists relevant drawings by number, UPS model and options.

Table 2.2 Connection and Shipping-Split Drawings

Drawing Number	model/options
559322P1	Mechanical installation, 800 and 1200kVA UPS with Input/Output Cabinet 1
561763P1	Mechanical installation, 800 and 1200kVA UPS with Input/Output Cabinet 2 or 3

2.7.1 Moving Input/Output Cabinets into Position

An input/output cabinet must be moved toward the UPS cabinet from the end. Damage may occur if it is moved straight back along the shipping split.

Before moving an input/output cabinet into position, three input fuses must be removed. For the location, refer to the appropriate illustrations for your unit included in Technical Illustrations on page 57. Table 2.2 above lists relevant drawings by number, UPS model and options.

2 Mechanical Installation

This page intentionally left blank

Vertiv™ | Liebert® EXL S1 Installer Guide



3 UPS ELECTRICAL INSTALLATION

These guidelines are for qualified installers who must have knowledge of local wiring practices pertaining to the equipment to be installed.



WARNING! Risk of electrical shock. Can cause injury or death. The UPS contains high DC as well as AC voltages. Check for voltage with both DC and AC voltmeters before working within the UPS. Only properly trained and qualified personnel wearing appropriate safety headgear, gloves, shoes and glasses should be involved in installing the UPS or preparing the UPS for installation.

3.1 External Protective Devices

For safety, it is necessary to install circuit breakers in the input AC supply and external battery system. Given that every installation has its own characteristics, this section provides guidelines for qualified installation personnel with knowledge of operating practices, regulatory standards and the equipment to be installed.

External overcurrent protection must be provided. See 5 on page 39 for overload capacity.

3.2 Power Cables

The UPS requires both power and control cabling. All control cables, whether shielded or not, should be run separately from the power cables in metal conduits or metal ducts that are electrically bonded to the metalwork of the cabinets to which they are connected.

The cable design must comply with the voltages and currents in **5** on page 39, through **5** on page 39, follow local wiring practices and take into consideration the environmental conditions (temperature and physical support media), room temperature and conditions of installation of the cable and system's overload capacity (see Specifications on page 39).



WARNING! Risk of electrical shock. Can cause injury or death. Before cabling the UPS, ensure that you are aware of the location and operation of the external isolators that connect the UPS input/bypass supply to the power distribution panel. Check that these supplies are electrically isolated and post any necessary warning signs to prevent them from being connected to the UPS or other system cabinets.



ADVERTISSEMENT: Risque de décharge électrique pouvant causer des blessures graves, voire mortelles. Avant de procéder au câblage du système ASC, assurez-vous que vous êtes au courant de l'emplacement et du fonctionnement des isolateurs externes qui raccordent l'alimentation d'entrée ou de dérivation au panneau de distribution électrique. Vérifiez que ces raccords sont isolés électriquement et installez tous les panneaux d'avertissement nécessaires pour empêcher leur utilisation accidentelle.

When sizing battery cables, a maximum volt drop of 2VDC is permissible at the current ratings given in $\bf 5$ on page 39.

The following are guidelines only and are superseded by local regulations and codes of practice where applicable:

- The grounding conductor should be sized according to the fault rating, cable lengths, type of protection, etc.
 The grounding cable connecting the UPS to the main ground system must follow the most direct route possible.
- Using smaller, paralleled cables for heavy currents can ease installation.
- AC and DC cables must be run in conduits according to local codes, national codes and standard best practices. This will prevent creation of excess EMI fields.

3.3 Sizing the Input Breaker that Feeds the UPS

Nominal input current (considered continuous) is based on full-rated output load. Maximum current includes nominal input current and maximum battery recharge current (considered noncontinuous).

Continuous and noncontinuous current are defined in the NEC.

Maximum input current is controlled by the current limit setting, which is adjustable. Values shown are for maximum current limit. If a smaller input feed breaker is used, the input current limit can be adjusted; see your Vertiv™ representative for more information. The input current limit should not be set less than 105% of the current needed to support the inverter at full load for normal operation.

This results in sufficient power to recharge the battery in a reasonable time and to operate over the published input voltage range.

3.3.1 Single or Dual Input Feeds

The UPS may be fed from single reference sources or dual asynchronous sources with optional common-mode choke. If a single-input configuration will be used, the utility source must be cabled to the rectifier input busbars.

NOTE: Make sure that you complete all of the connections detailed in the "Interconnection Details" drawing before making any power cabling connections. The interconnects are very hard to access after the power wiring is complete. See Technical Illustrations on page 57, for the appropriate drawing for your system

The terminal details and connections for your UPS system are described in the installation drawings. Refer to the appropriate illustrations for your unit included in Technical Illustrations on page 57.

3.3.2 Automatic Transfer Switches

If the UPS is fed from an automatic transfer switch, the UPS can transfer to and from an alternate out-of-phase source in double-conversion mode without applying a break-before-make delay to the automatic transfer switch operation.

3.4 Input Power Cable Connection

The rectifier input, bypass, output and battery power cables (all require lug-type terminations) are connected to busbars in the I/O sections. The terminal details and connections for your UPS system are described in the installation drawings. Refer to the appropriate illustrations for your unit included in Technical Illustrations on page 57.

NOTE: Before making any power-wiring connections, make sure that you complete all of the interconnections for your system. The interconnects are very hard to access after the power wiring is complete. To make the interconnections, see connections the appropriate "Interconnection Details" drawing for your system, listed in 2.5 on page 9.



3.4.1 Equipment Ground

The equipment ground busbar is in the I/O section, described in the appropriate illustrations for your unit, included in Technical Illustrations on page 57.

The grounding conductor must be connected to the ground busbar and bonded to each cabinet in the system.

All cabinets and cabling must be grounded in accordance with local regulations.

NOTE: In addition to safety requirements, it is important to follow grounding best practices for EMC requirements. For example, daisy-chain grounding connection between UPS modules located in different electrical rooms or floors is not recommended. Proper grounding reduces problems in systems caused by electromagnetic interference.



WARNING! Failure to follow adequate grounding procedures can result in electric shock hazard to personnel and the risk of fire, should a ground fault occur. All operations described in this section must be performed by properly trained and qualified electricians or technical personnel. If any difficulties are encountered, contact Vertiv™ Technical Support, http://www.Vertiv.com/en-us/support/.



ADVERTISSEMENT: Le non-respect des procédures de mise à la terre peut entraîner des risques d'électrocution du personnel et des risques d'incendie en cas de défectuosité de la mise à la terre. Toutes les opérations décrites dans cette section ne doivent être effectuées que par des électriciens ou des techniciens professionnels dûment formés et qualifiés. En cas de difficultés, communiquez avec Vertiv™. Pour obtenir les renseignements de contact, consultez la dernière page de ce manuel.

Once the equipment has been positioned and secured, connect the power cables. Refer to the appropriate illustrations for your unit, included in Technical Illustrations on page 57, and complete the following steps:

- 1. Verify that the UPS equipment is isolated from its external power source and that all the UPS power isolators are Open.
- 2. Check that these supplies are electrically isolated and post any necessary warning signs to prevent their inadvertent operation.
- 3. Open exterior and interior panels on the front of the I/O sections.
- 4. Connect the ground to the equipment ground busbar in the I/O sections.
- 5. Make power connections and tighten the connections to the proper torque.
- 6. Ensure correct phase rotation.



WARNING! Risk of electrical shock. Can cause injury or death. If the load equipment will not be ready to accept power on the arrival of the commissioning engineer, ensure that the system output cables are safely isolated at their termination.



ADVERTISSEMENT : Risque de décharge électrique pouvant causer des blessures graves, voire mortelles. Si les équipements branchés ne sont pas prêts à être alimentés à l'arrivée de l'ingénieur de mise en service, assurez-vous que les bornes des câbles de sortie du système soient isolées de façon sécuritaire.



WARNING! Risk of electrical shock. Can cause injury or death. When connecting the cables between the battery extremities to the circuit breaker, always connect the circuit breaker end of the cable first.



ADVERTISSEMENT : Risque de décharge électrique pouvant causer des blessures graves, voire mortelles. Lors du raccordement de câbles entre des bornes de batterie et un disjoncteur, branchez toujours en premier l'extrémité du câble qui se raccorde au disjoncteur.

- 7. For control connection details, see Control Cable and Communication on page 23.
- 8. Close and secure the interior and exterior doors.
- 9. Attach the kick plates to the bottom of the unit.

NOTE: If the unit is to be installed in a position that does not permit access to the rear kick plates, then the kick plates must be installed before the unit is placed in its final position.

3.5 DC Power Connections



WARNING! Risk of electrical shock. Can cause injury or death. The UPS contains high DC as well as AC voltages. Check for voltage with both DC and AC voltmeters before working within the UPS, the input/output cabinet or the battery cabinet. Only properly trained and qualified personnel wearing appropriate safety headgear, gloves, shoes and glasses should be involved in installing the UPS or preparing the UPS for installation.

Vertiv™ recommends installing a local battery disconnect near the battery for safe maintenance. If this is not possible, it is required to use a lock-out tag-out device in the battery room and always check for hazardous voltage before performing maintenance on the UPS.

An external battery protection device must be installed to ensure adequate protection in case of short circuit fault. This protection may consist of fuses or automatic breakers suitable for DC applications. Size the external battery protection device in accordance with the available battery short circuit current and the battery string voltage.

Notice

Batteries are able to withstand an external short circuit under specific conditions and for a specified duration. Fuses, circuit breakers and cables must be selected in accordance to the battery characteristics. Contact Vertiv Technical Support for more information.

Notice

External shorts can lead to irreversible battery damage and reduced battery service life.



WARNING! Missing or incorrect battery protection may cause extensive damage to the batteries, the UPS and ancillary equipment. Vertiv will neither accept liability nor pay damages resulting from accidents caused by missing or incorrect sizing of the battery protection device(s). Contact Vertiv Technical Support for more information.

Vertiv recommends using a proprietary battery breaker control option to remotely trip the battery breaker and safely disconnect the battery when an undervoltage condition is detected. Contact Vertiv Technical Support for more information.



Liebert® battery cabinets installed attached to the Liebert EXL S1 are connected to the input/output cabinet with busbars. UPS models with the static bypass only employ busbars that are contained by the battery cabinet and the input/output cabinet

NOTE: Before making any power wiring connections, make sure that you complete all of the interconnections for your system. The interconnects are very hard to access after the power wiring is complete. To make the interconnections, see connections the appropriate "Interconnection Details" drawing for your system, listed in **2.5** on page 9.

UPS models with the back-feed disconnect, common mode choke or bypass sharing inductors or with any combination of these options employ busbars that extend through openings in the tops of the adjacent battery cabinet and input/output cabinet. These busbars require a protective, factory-supplied shroud that is attached to the input/output cabinet and the adjacent, attached battery cabinet.

When Liebert battery cabinets are attached to the UPS, the busbars and cables for the power connections are factory-supplied.

To connect power cables for a battery system attached to the Liebert EXL S1:

- 1. Remove the panels from the right side of the input/output cabinet and from the left side of the adjacent Liebert battery cabinet.
- 2. Position the cabinets and bolt them together.
- 3. Remove two interconnect straps and the M10 mounting hardware from the battery cabinet. Keep the straps and hardware for possible future use.
- 4. Use the hardware supplied in the cable kit to connect the output busbars from the battery cabinet to the input busbars in the input/output cabinet.

NOTE: Busbar connections vary depending on the system rating. For details, refer to the submittal drawings that shipped with the battery system and to the battery system manual that shipped with the battery system.

- 5. Torque the busbar and cable connectors to 480 in-lb. (54Nm).
- 6. On systems with the common mode choke, with bypass sharing inductors or with both options, use the four factory-supplied M6 x 12mm self-tapping screws to attach the protective shroud to the top of the system, covering the busbars between the battery cabinet and input/output cabinet.

3.6 Configuring Ground Connections

The UPS is compatible with solidly grounded wye sources or a high-resistance ground system. Refer to High-Resistance Ground Systems on page 22.

Improper grounding is the largest single cause of UPS installation and startup problems. Grounding techniques vary significantly from site to site, depending on several factors.

Proper grounding should be based on the appropriate NEC sections, but safe and proper equipment operation requires further enhancements. The following pages detail recommendations for grounding various system configurations to ensure optimal UPS system performance.



WARNING! In addition to safety requirements it is important to follow grounding best practices for EMC requirements. For example, daisy-chain grounding connection between UPS modules located in different electrical rooms or floors is not recommended.



CAUTION: The UPS ground lug must be solidly connected to the service entrance ground by an appropriately sized wire conductor per the NEC. Each conduit or raceway containing phase conductors must also contain a ground wire, both for UPS input and output, which are solidly connected to the ground terminal at each termination point. Conduit-based grounding systems tend to degrade over time. Therefore, using conduit as a grounding conductor for UPS applications may degrade UPS performance and cause improper UPS operation.

3.6.1 Three-Wire Input Connections

IMPORTANT! Single-phase loads must not be directly connected to the output of a three-wire UPS configuration.

Note that whenever the UPS module transfers to or from bypass, two AC sources (UPS output and bypass) are briefly connected together and circulating current must flow. In this configuration, the current flows through the ground path, possibly tripping ground-fault interrupters (GFIs) and distorting the output voltage waveform. Proper adjustment of ground-fault interrupters is necessary to avoid unwanted tripping. The time delay should be set to at least 0.2 seconds to prevent tripping when the UPS performs a transfer or retransfer operation.


NOTICE

20

Risk of improper installation. Can cause equipment damage.

Failure to set the ground-fault interrupters properly could cause loss of power to the critical load.

Figure 3.1 Grounding Diagram—Three-Wire Single-Module Systems

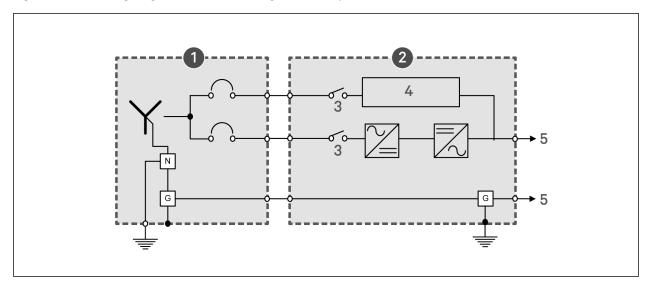

Item	Description
1	Source
2	UPS
3	Optional back-feed disconnect
4	BPSS
5	To connected equipment

Vertiv™ | Liebert® EXL S1 Installer Guide



Figure 3.2 Grounding Diagram—Three-Wire Multi-Module Systems

Item	Description
1	Source
2	UPS
3	Optional back-feed disconnect
4	BPSS
5	Switchgear
6	To connected equipment

3.6.2 Recommended Grounding Configuration, Battery Systems

Battery cabinet systems must be connected as floating (ungrounded) systems.

Center-tapped or grounded battery systems are not possible with battery cabinet systems.

Whether the battery system is open-rack or cabinet, the metal rack parts or cabinet must be grounded to the UPS module ground bus.

3 UPS Electrical Installation

3.6.3 High-Resistance Ground Systems

The 250 - 1200 kVA UPS units are compatible with High-Resistance Ground (HRG) applications. Contact the factory for HRG compatibility.

3.7 Distributed Static Switch (1+N) System Cabling Layouts

The output switchboard must be fitted with module output breakers (MOB) equipped with auxiliary contacts to communicate breaker status. The MOB must function properly with current levels that may occur when switching a module onto the active bus. Breakers with adjustable instantaneous settings should be adequate to achieve this.

NOTE: Before making any power wiring connections, make sure that you complete all of the interconnections for your system. The interconnects are very hard to access after the power wiring is complete. To make the interconnections, see the appropriate "Interconnection Details" drawing for your system, listed in **2.5** on page 9.

The distributed static switch cabling for your UPS system is described in the installation drawings. Refer to the appropriate illustrations for your unit included in Technical Illustrations on page 57.

The following table lists the drawings by number, UPS model and options.

Table 3.1 System-Cabling Layout Drawings

22

Drawing Number	Model/Options		
Single Module, Single-Input Layouts			
ES1-01-S001	with static bypass		
ES1-01-S002	with static bypass and back-feed disconnect		
ES1-01-S003	with static bypass and two-breaker external maintenance bypass		
ES1-01-S004	with static bypass, two-breaker external maintenance bypass, and back-feed breaker		
ES1-01-S005	with single input, static bypass, and three-breaker external maintenance bypass		
ES1-01-S006	with static bypass, three-breaker external maintenance bypass, and back-feed disconnect		
Single Module, Dual-Inpu	Single Module, Dual-Input Layouts		
ES1-01-S007	with static bypass		
ES1-01-S008	with static bypass and back-feed disconnect		
ES1-01-S009	with static bypass and two-breaker external maintenance bypass		
ES1-01-S010	with static bypass, two-breaker external maintenance bypass, and back-feed disconnect		
ES1-01-S011	with static bypass and three-breaker external maintenance bypass		
ES1-01-S012	with static bypass and four-breaker external maintenance bypass		
1+N Multi-Module, Single-Input Layouts			
ES1-02-S001	with static bypass and two-breaker paralleling cabinet		
ES1-02-S002	with static bypass, two-breaker paralleling cabinet, and back-feed disconnect		
ES1-02-S005	without static bypass		

Vertiv™ | Liebert® EXL S1 Installer Guide



Table 3.1 System-Cabling Layout Drawings (continued)

Drawing Number	Model/Options			
1+N Multi-Module, Dual-	1+N Multi-Module, Dual-Input Layouts			
ES1-02-S003	with static bypass and two-breaker paralleling cabinet			
ES1-02-S004	with static bypass, two-breaker paralleling cabinet, and back-feed disconnect			
Control Cabling Layouts				
ES1-19-S002	Communications and general contacts			
ES1-19-S003	DC source cable layout - UPS with matching battery cabinets			
ES1-19-S004	DC source cable layout - UPS with third-party battery cabinets			
ES1-19-S005	DC source cable layout - UPS with third-party maintenance-bypass-distribution and battery cabinets			
ES1-19-S007	Maintenance bypass cabinet with single module			
ES1-19-S024	System controls, distributed static switch (1+N) multi-module and paralleling cabinet			

3.8 Control Cable and Communication

NOTE: The low-voltage conduit plate must be removed prior to punching holes for landing conduit. Failure to do so may result in equipment damage due to metal debris.

For control/alarm wiring, use stranded 16-22AWG cable. Use stranded, 14AWG cable wire up to 500 ft. (150m).

Based on a site's specific needs, the UPS may require auxiliary connections to manage the battery system (external battery circuit breaker), communicate with a building management system or provide alarm signaling to external devices, or for Remote Emergency Power Off (REPO). The connections for the interfaces below are in the low-voltage customer connections on the top of the UPS, see **Figure 3.3** on the next page.

Table 3.2 on the next page, describes the interfaces.

3 UPS Electrical Installation

Figure 3.3 Customer-Connection Locations in All Models

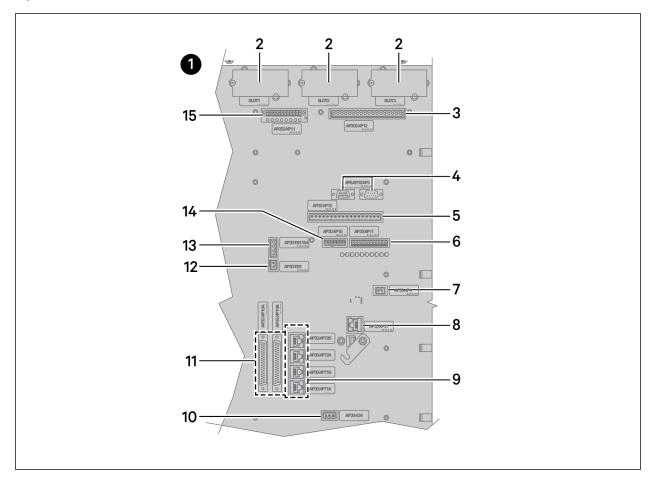


Table 3.2 Connection Interfaces

24

Item	Description		
1	Bottom		
2	Slots 1, 2, 3 for Liebert® IntelliSlot™ Communication Cards.		
۷	NOTE: The center bay is serial interface for LIFE™ Services.		
3	AP202-XP12 - Selectable Output Dry Contacts, 6 Form C Contacts		
4	XP6-AP30-XP3 - DP-9 Connectors; Serial Interface For Service		
5	AP30-XP12 - Selectable Output Dry Contacts, 6 Form C Contacts		
6	AP30-XP11 - Selectable Input Dry Contacts; 8 Form A/B or 4 Form C Contacts)		
7	Not Used. AP30-XP4		
8	AP30-XP31 - Load Bus Sync Port,		
9	AP30-XP71A, 71B; AP30-XP72A, 72B - Parallel UPS Communication Connections		
10	AP30-XP24 - Back-Feed CB Output Dry Contacts		

Vertiv™ | Liebert® EXL S1 Installer Guide

Table 3.2 Connection Interfaces (continued)

item	Description	
11	Not Used. AP30-XP19A/19B	
12	AP30-TB3 - 24VDC Option Power	
13	AP30-TB1154 - BIB Interface	
14	AP202-XP11 - Selectable Input Dry Contacts; 8 Form A/B or 4 Form C Contacts	
15	AP30-XP10 - REPO Status	

3.8.1 Slots for Vertiv™ Liebert® IntelliSlot™ Cards—SLOT1 and SLOT3

These slots permit installing Liebert network communication cards. This adapter provides an independent external network interface for communication with network monitoring and building management systems.

The Liebert IntelliSlot platform includes the Vertiv[™] Liebert[®] IS-UNITY-DP and Vertiv[™] Liebert[®] IS-485 EXI cards. The platform communicates with Vertiv software tools and services, including Vertiv[™] *Trellis*[™], Vertiv[™] Liebert[®] SiteScan[™] Web and Vertiv[™] Liebert[®] Nform.

The Liebert IS-UNITY-DP card supports up to two third-party protocols along with HTTP/S (Web), Vertiv™ Protocol, SMTP and SMS.

Third-party protocols available on the IS-UNITY-DP card are:

- BACnet IP—BACnet over Internet Protocol
- BACnet MSTP—BACnet Master-Slave/Token-Passing (MSTP) communications protocol over an RS-485 serial network (also known as BACnet MSTP RS-485)
- Modbus RTU
- Modbus TCP
- SNMP versions 1. 2c and 3

When determining the protocols, consider the following:

- No more than two protocols may be enabled on one card.
- Only one version of BACnet may be selected, either BACnet IP or BACnet MSTP.
- Only one version of Modbus may be selected, either Modbus TCP or Modbus RTU.
- Only one of the protocols can use the 485 port; choosing two 485 protocols will cause conflicts.

The Liebert IS-485 EXI Card connects to a Liebert® SiteLink-E, allowing Liebert SiteScan Web 4.0 monitoring and control.

3.8.2 Slot for Vertiv™ Liebert® LIFE Services Products—SLOT2

This slot is the reserved interface for Liebert LIFE Services modem card. This card provides an independent external modem interface for communication with Liebert LIFE Services service station. Ask your local Vertiv representative for details on Liebert LIFE Services and its benefits for your UPS system.

3.8.3 Serial Interface for Liebert LIFE Services Cards (Serial Input/Output)—XP6

The service interface is a SUB-D nine-pin male connector for RS-232 serial communication. It is used for communication with external Liebert LIFE Services or other special Liebert applications.

3.8.4 Connector for REPO (Input and Status)—AP30-XP10

The Remote Emergency Power Off (REPO) shuts down the UPS rectifier, inverter and static bypass. It disconnects the external battery circuit breakers, but it does not disconnect the input mains supply to the UPS. If required, this additional action can be performed by adding a contact to the emergency stop switch placed on an upstream breaker.

The REPO button must be connected to the UPS with a twisted/shielded cable no longer than 66 ft. (20m). The contact must be closed under normal operating conditions. When this contact opens, the load will be cut Off and a fault will appear on the display. Resuming normal operation requires resetting the REPO button to its closed position and resetting the fault on the display.

EPO is On when either EPO Input Contact 1 or EPO Input Contact 2 is open. The inputs contacts are independent and in OR logic.

If the EPO button is not installed, jumper leads must be connected between Pins 1 and 2 of EPO Input Contact 1 and between Pins 3 and 4 of EPO Input Contact 2.

The UPS REPO status may be monitored by connecting to the Form-C REPO Status Pins 5, 6 and 7.

Table 3.3 REPO Connection

Pin	Signal	Description	
1&2	EPO Input Contact #1	EPO is ON when either input 1 or input 2	
3&4	EPO Input Contact #2	are open; the inputs are independent and in OR logic	
5	EPO Status Contact - N.C.		
6	EPO Status Contact - COMMON	Form-C dry contacts rated for 5A @24 VDC	
7	EPO Status Contact - N.O.		

Use stranded 16-22AWG cable.



26

WARNING! The external push button must be voltage-free and isolated from all sources and GND. The external REPO system must not exceed 24V and 20mA.

NOTE: The external EPO switch must latch Open when activated.

3.8.5 Customizable Output Dry Contacts—AP30/AP202 XP12

The UPS has two 18-pin screw connectors (AP30-XP12 and AP202-XP12) that allow connecting 12 Form C or Form A/B configurable output contacts. Each contact is rated for 120VAC/5A.

Table 3.4 Customizable Output Contacts

то	FORM C or FORM A/B	
AP30: XP12-1	NOT USED	
AP30: XP12-2	FD/RBB BACKFEED PROTECTION TRIP Contact #1 COMMON	
AP30: XP12-3	BFD/RBB BACKFEED PROTECTION TRIP Contact #1 N.O.	
AP30: XP12-4	SKRU ENABLE CONTACT #2 N.C.	
AP30: XP12-5	SKRU ENABLE CONTACT #2 COMMON	



Table 3.4 Customizable Output Contacts (continued)

то	FORM C or FORM A/B			
AP30: XP12-6	NOT USED			
	USER SELECTABLE OUTPUT CONTACT #3 N.C.			
AP30: XP12-7				
AP30: XP12-8	USER SELECTABLE OUTPUT CONTACT #3 COMMON			
AP30: XP12-9	USER SELECTABLE OUTPUT CONTACT #3 N.O.			
AP30: XP12-10	USER SELECTABLE OUTPUT CONTACT #4 N.C.			
AP30: XP12-11	USER SELECTABLE OUTPUT CONTACT #4 COMMON			
AP30: XP12-12	USER SELECTABLE OUTPUT CONTACT #4 N.O.			
AP30: XP12-13	USER SELECTABLE OUTPUT CONTACT #5 N.C.			
AP30: XP12-14	USER SELECTABLE OUTPUT CONTACT #5 COMMON			
AP30: XP12-15	USER SELECTABLE OUTPUT CONTACT #5 N.O.			
AP30: XP12-16	USER SELECTABLE OUTPUT CONTACT #6 N.C.			
AP30: XP12-17	USER SELECTABLE OUTPUT CONTACT #6 COMMON			
AP30: XP12-18	USER SELECTABLE OUTPUT CONTACT #6 N.O.			
AP202: XP12-1	NOT USED			
AP202: XP12-2	INVERTER ON CONTACT #7 COMMON			
AP202: XP12-3	INVERTER ON CONTACT #7 N.O.			
AP202: XP12-4	NOT USED			
AP202: XP12-5	BYPASS ACTIVE CONTACT #8 COMMON			
AP202: XP12-6	BYPASS ACTIVE CONTACT #8 N.O.			
AP202: XP12-7	NOT USED			
AP202: XP12-8	LOAD SUPPLIED BY BATTERY CONTACT #9 COMMON			
AP202: XP12-9	LOAD SUPPLIED BY BATTERY CONTACT #9 N.O.			
AP202: XP12-10	NOT USED			
AP202: XP12-11	RESIDUAL BATTERY AUTONOMY IS EXPIRING CONTACT #10 COMMON			
AP202: XP12-12	RESIDUAL BATTERY AUTONOMY IS EXPIRING CONTACT #10 N.O.			
AP202: XP12-13	NOT USED			
AP202: XP12-14	INVERTER OVERLOAD CONTACT #11 COMMON			
AP202: XP12-15	INVERTER OVERLOAD CONTACT #11 N.O.			
AP202: XP12-16	NOT USED			
AP202: XP12-17	SUMMARY ALARM CONTACT #12 COMMON			
AP202: XP12-18	SUMMARY ALARM CONTACT #12 N.O.			

3 UPS Electrical Installation

Use stranded 16-22AWG cable. The selectable contacts can be customized (by qualified technicians only) to perform the following functions:

Summary Alarm (Fault/Warning) Inverter Off

Residual Battery Autonomy Is Expiring Rectifier or Bypass Mains Failure

Inverter On On Battery

Bypass Active Maintenance Bypass Switch (MBB) Closed

Inverter Self-clocked Summary Fault

Inverter Overtemperature Imminent Shutdown

Battery Undervoltage Inverter Overload

Rectifier Mains Failure Bypass Mains Failure

Battery Overtemperature On Generator

Battery Pre-warning Level (Low Battery)

Battery Capacity Level 25%

Battery Capacity Level 50%

Battery Capacity Level 75

Battery Capacity Level 100%

Load Level 25%

Battery Capacity Level 100% Load Level 25%

Load Level 50% Load Level 75%

Load Level 100% Load Level 105%

Line Fault Summary Alarm Or Line Fault

Power Loss Pre-warning Power Loss Warning

Load Not Supplied Eco Mode Active

Remote Back-Feed Breaker BCB Open

Multi-Module Operating System Detected



3.8.6 Customizable Input Dry Contacts—AP30/AP202 XP11

The UPS contains two 12-pin screw connectors (AP30-XP11 and AP202-XP11) that allow connecting eight Form C or 16 Form A/B configurable output contacts.

Table 3.5 Customizable input contacts

Pin	Form C	Form A
AP30: XP11-1	BFD AUX CONTACT #1 N.C.	RBB AUX. CONTACT #1/2 N.O.
AP30: XP11-2	BFD AUX. CONTACT #1 COMMON	RBB AUX. CONTACT/RBB PS OK #1/2 COMMON
AP30: XP11-3	BFD AUX. CONTACT #1 N.O.	RBB PS OK #2 N.O.
AP30: XP11-4	NOT USED	DC GROUND FAULT DET. CONTACT #3 N.O.
AP30: XP11-5	NOT USED	DC GROUND FAULT DET. CONTACT #3/4 COMMON
AP30: XP11-6	NOT USED	USER SELECTABLE INPUT CONTACT #4 N.O.
AP30: XP11-7	NOT USED	MOB AUX. CONTACT #5 N.O.
AP30: XP11-8	NOT USED	MOB AUX. CONTACT #5/6 COMMON
AP30: XP11-9	NOT USED	USER SELECTABLE INPUT CONTACT #6 N.O.
AP30: XP11-10	NOT USED	RFB AUX. CONTACT #7 N.O.
AP30: XP11-11	NOT USED	RFB AUX. CONTACT #7/8 COMMON
AP30: XP11-12	NOT USED	USER SELECTABLE INPUT CONTACT #8 N.O.
AP202: XP11-1	NOT USED	MBB AUX. CONTACT #9 N.O.
AP202: XP11-2	NOT USED	MBB AUX. CONTACT #9/10 COMMON
AP202: XP11-3	NOT USED	USER SELECTABLE INPUT CONTACT #10 N.O.
AP202: XP11-4	NOT USED	MIB AUX. CONTACT #11 N.O.
AP202: XP11-5	NOT USED	MIB AUX. CONTACT #11/12 COMMON
AP202: XP11-6	NOT USED	USER SELECTABLE INPUT CONTACT #12 N.O.
AP202: XP11-7	USER SELECTABLE INPUT CONTACT #7 N.C.	USER SELECTABLE INPUT CONTACT #13 N.O.
AP202: XP11-8	USER SELECTABLE INPUT CONTACT #7 Common	USER SELECTABLE INPUT CONTACT #13/14 Common
AP202: XP11-9	USER SELECTABLE INPUT CONTACT #7 N.O.	USER SELECTABLE INPUT CONTACT #14 N.O.
AP202: XP11-10	SKRU STATUS CONTACT #8 N.C.	NOT USED
AP202: XP11-11	SKRU STATUS CONTACT #8 COMMON	NOT USED
AP202: XP11-12	SKRU STATUS CONTACT #8 N.O.	NOT USED

3 UPS Electrical Installation 29

Use stranded 16-22AWG cable. The selectable input contacts can be customized by qualified service technicians to perform the functions below.



WARNING! Use no-voltage contacts to drive the inputs. Do not use voltages supplied by an external power supply.

- On Generator
- Mirrored on Generator
- Fast Power Off
- External Maintenance Bypass CB
- Fault Acknowledge
- External Output CB (MOB)
- Maintenance Isolation Breaker (MIB)
- Disable Inverter Start
- Force Rectifier Off/On
- DC Ground Fault Detection
- Disable Bypass SS
- Disable Battery Charging
- External Remote Feed CB Status
- External Remote Back-Feed CB Status
- External Load Bank CB Status System
- External Load Bank CB Status Module
- Remote Enable
- Remote Transfer to Bypass
- Remote Transfer to Inverter

Remote Control Using Programmable Logic Controllers (PLC)

The UPS provides an external control interface for maintenance bypass switchgear equipped with a key interlock system and to manage a battery system. The interface provides (8) Form C or (16) selectable Form A/B programmable input dry contacts, and (12) Form C output dry contacts that can also be configured as Form A/B programmable output dry contacts. Programmable contacts can be customized to meet customer needs and to integrate with remote controls.

Figure 3.4 on the facing page illustrates the location of each breaker for a typical UPS system, and **Table 3.6** on the facing page describes available programmable input contacts for external circuit breakers,

While the programmable contacts allow flexibility for integration with external controls, it is important to note that any UPS input contact programmed to reflect the status of a breaker must be supplied by an auxiliary contact of that breaker. The status of a breaker should not be supplied to the UPS input contacts by PLC logic-driven output contacts.

Each UPS input contact can be programmed to reflect the state of a single breaker only and should not receive multiple breaker status signals (that is, no piggybacking signals). Failure to adhere to these guidelines may result in unintended operation, damage to the equipment, or even a critical load loss. Any customers planning Liebert® EXL S1 installations that incorporate PLC remote control should contact Vertiv Applications Engineering for guidance.

30 Vertiv™ | Liebert® EXL S1 Installer Guide



Figure 3.4 External Circuit Breakers in a Typical System

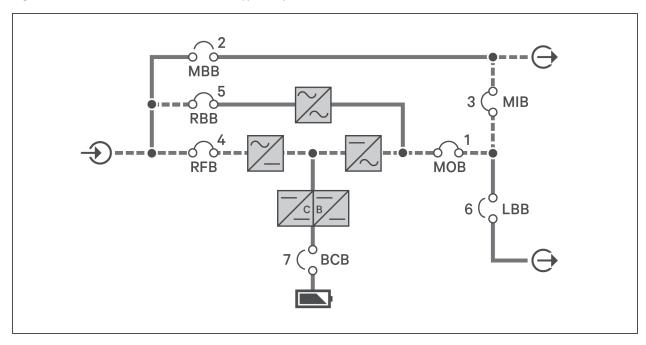


Table 3.6 Programmable Input Contacts for External Circuit Breakers

	-			
item				
1	Module Output Breaker (MOB)	The MOB isolates the output of the UPS from the critical load or collective bus of a parallel UPS system. It is typically located in a system paralleling cabinet, system control cabinet, switchgear, or switchboard.		
2	Maintenance Bypass Breaker (MBB)	The MBB isolates an alternate source from the critical load. It is typically located in a maintenance bypass cabinet, system paralleling cabinet, system control cabinet, switchgear, switchboard, or panel board.		
3	Maintenance Isolation Breaker (MIB)	The MIB isolates the UPS system from the critical load. It is typically located in a maintenance bypass cabinet, system paralleling cabinet, system control cabinet, switchgear, switchboard, or panel board.		
4	Rectifier Feed Breaker (RFB)	The RFB isolates the UPS rectifier input. It is typically located in switchgear, a switchboard, or a panel board.		
5	Remote Back-Feed Breaker (RBB)	The RBB isolates the UPS static bypass switch input. It is typically located in switchgear, a switchboard, or a panel board.		
6	Load Bank Breaker (LBB)	The LBB connects the output of the UPS or the critical load to a load bank for testing. It is typically located in switchgear, a switchboard, or a panel board.		
7	Battery Circuit Breaker (BCB)	The BCB isolates the DC/DC converter of the UPS from the battery system. The BCB is typically co-located with the battery system.		

3.8.7 Connector for Parallel UPS Connection—AP30-XP71A, 71B, AP30-XP72A, 72B

This interface is used for paralleling two or more UPS's with each other.

3 UPS Electrical Installation

3.8.8 RJ-45 Interface for Synchronization with External Signal—AP30-XP31

This interface is used to communicate with an external synchronization device, such as Load Bus Sync Module (for two modules only) or the Multibus Sync Module (for up to 11 modules). See the manuals related to these options for more details.

The interface can be used to synchronize the outputs of multiple UPS devices, even when they do not have a common output. This enables an external static switching device to communicate between UPS outputs in the event of a malfunction, without creating synchronization problems.

3.8.9 UPS Control Contacts with Battery Cabinet or Module Battery Disconnect

These contacts are used to communicate between the UPS module and battery cabinets or Module Battery Disconnects.

Table 3.7 Battery Control Interface

Terminal Block	Pin	Connects to (Description of External Item)
	1	CAN +24 V - Battery Interface Board TB1154-1
AP30-TB1154	2	Ground - Battery Interface Board TB1154-2
AP30-161134	3	CANbus High - Battery Interface Board TB1154-3
	4	CANbus Low - Battery Interface Board TB1154-4

Use Belden 9156 equivalent wire. Total length of cable from the UPS to all battery interface connections must be less than 1000 ft. (300m).

3.8.10 UPS Control Contacts with Global Maintenance Bypass

These contacts are used to communicate between the UPS module and the Maintenance Bypass.

Table 3.8 Maintenance Bypass Key Status

Terminal Block	Pin	Description	
	10	Key status switch, closed = key inserted	
AP202:XP11	11	Key status switch, common	
	12	Key status switch, closed = key removed	
See Distributed Static Switch (1+N) System Cabling Layouts on page 22 for 1+N systems with a Maintenance Bypass.			
2. Key Status Input must be Form C contact.			

For control/alarm wiring, use stranded 16-22AWG cable. Use stranded 14AWG cable wire up to 500 ft. (150m).

Table 3.9 Maintenance Bypass SKRU Enable

32

Terminal Block		Pin	Description
AP30:XP12		4	Maintenance Bypass Cabinet, closed = load not on inverter
		5	Maintenance Bypass Cabinet, common
1. F	 For 1+N systems with a maintenance bypass, these contacts must be run to each module from an isolated source. These contacts must be run separately from all other control cables. 		
2. T			



3.9 Top Entry Low-Voltage

NOTE: The low-voltage conduit plate must be removed prior to punching holes for landing conduit. Failure to do so may result in equipment damage due to metal debris.

Remove the low-voltage conduit plate (at the top of the unit and then expose the area by removing the inside cover plate), punch the conduit holes, land the conduit and then route the control wire to the customer connections.

NOTE: Before making any power wiring connections, make sure that you complete all of the interconnections for your system. The interconnects are very hard to access after the power wiring is complete. To make the interconnections, see the appropriate "Interconnection Details" drawing for your system, listed in **2.5** on page 9.

3.10 Bottom Entry Low-Voltage

Remove the low-voltage conduit plate (at the bottom of the unit and then expose the area by removing the inside cover plate), punch the conduit holes, land the conduit and then route the control wire to the as shown in **Figure 3.5** on the next page toward the top of the unit.


NOTE: Before making any power wiring connections, make sure that you complete all of the interconnections for your system. The interconnects are very hard to access after the power wiring is complete. To make the interconnections, see the appropriate "Interconnection Details" drawing for your system, listed in **2.5** on page 9.

The input/output cabinet shown in **Figure 3.5** on the next page, is an example of the wiring route. Routing through other cabinets is similar.

3 UPS Electrical Installation

Figure 3.5 Low-Voltage Cable Routing Example

34

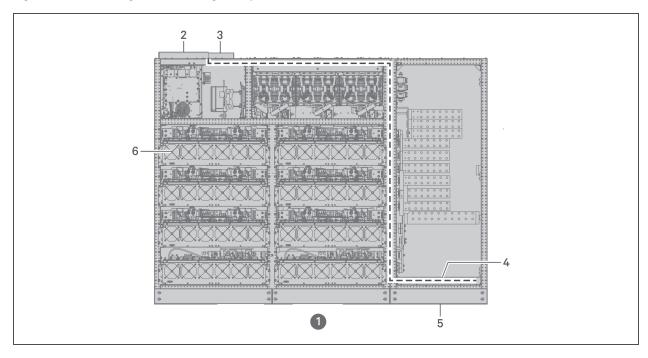

Item	Description
1	Front view (doors and panels not shown)
2	Box mounting cover low-voltage top
3	Conduit box NOTE: The low-voltage conduit plate must be removed prior to punching holes for landing conduit. Failure to do so may result in equipment damage due to metal debris.
4	Low-voltage cable route
5	Bottom-entry low-voltage conduit box
6	Fans



4 OPTIONAL EQUIPMENT

4.1 Options

NOTE: Although not required, Vertiv™ recommends that all UPS installations incorporate a solenoid key release unit (SKRU) as part of the maintenance bypass cabinet or switch board. Improper load transfers between the UPS Inverter and Maintenance Bypass may result in equipment damage and loss of load.

A number of options are available from for the Liebert® EXL S1. (Some options are not available for all ratings.) below are the most frequently provided options. Others are available. Contact your Vertiv representative for more information.

- DC (Battery) Ground Fault—Enables the detection and annunciation of battery DC ground faults in order to facilitate proactive resolution of such ground faults for 2014 NEC compliance. The UPS can be configured to allow the circuit breaker to open or remain closed upon detection of a ground fault.
- Liebert IntelliSlot Cards (3 Ports)—Provides web, embedded Vertiv LIFE™ Technology, Vertiv Protocol, SNMP, BACnet IP/MSTP, Modbus TCP/RTU, SMTP, SMS and telnet communication and control capabilities in one, unified communication platform.
- Load Bus Synchronization (LBS)—Allows synchronizing the outputs of two or more modules when the source for one of more modules supplied by a separate non-synchronized source.
- Local EPO Button—A local EPO button with protective cover is available. This option is typically installed at the factory but may be field-installed by a Vertiv technician.
- Maintenance Bypass—This switchboard provides make-before-break maintenance bypass. It includes:
 Maintenance Bypass Breaker (MBB) and Maintenance Isolation Breaker (MIB). The Maintenance Bypass is a
 buyout item and not available from Vertiv.
- Remote Alarm Status Panel—Provides alarm lamps for up to eight UPS alarms. Power provided via AP30-TB3.
- Seismic Bracing—A separate kit for tying down the UPS module allows the unit to meet International Building Code (IBC) regulations.
- Temperature Sensor—Allows the UPS module to compensate battery charging voltage, depending on temperature, to prolong battery life. The Temperature Sensor is required for battery solutions utilizing a non-matching Module Battery Disconnect or Battery Isolation Switch. Liebert battery packs have built-in temperature sensors. The Temperature Sensor option includes a remote sensor that must be field-installed.
- Battery and Racks—The batteries provide power in the event of a power outage. The Liebert EXL S1 can use a variety of battery types, provided the battery plant is designed for the UPS DC voltage range and the load requirements of the application.
- Battery Cabinets—Available battery types are flooded-cell; valve-regulated, lead-acid; and lithium-ion. The battery cabinets are designed to be either attached to the UPS or separate from the UPS.
- Battery Interface Box—A Battery Interface Box (BIB) is available to support the UPS and third-party battery cabinets or rack-mounted batteries. A BIB is required for each MBD (stand-alone or inside the third-party battery cabinet). A BIB is optional with each Battery Isolation Switch. A BIB is required for each temperature sensor.
- Flywheel Energy Storage System—An optional Vycon Flywheel Energy Storage System is available, consisting of the number of Vycon flywheel units in separate cabinets necessary to provide the specified operating time. Each flywheel unit has an internal circuit breaker for isolating the flywheel from the UPS and a control interface to the UPS module. Installer provides interconnect cabling.
- Battery Isolation Switch—A Battery Isolation Switch (BIS) is used to isolate individual battery strings when a system MBD is used. When the optional Battery Interface Box is used, the status of the Battery Isolation Switch is displayed on the UPS HMI. A temperature sensor is recommended to allow proper battery charging and overtemperature protection.

- Module Battery Disconnect—The UPS system utilizes a separate Module Battery Disconnect (MBD) for remotely located batteries. A sensing circuit in the UPS module, set at the battery low-voltage limit, trips the Module Battery Disconnect to safeguard the battery from excessive discharge. The Module Battery Disconnect has an undervoltage release mechanism designed to ensure that during any shutdown or failure mode all battery potential is removed from the UPS system.
- Alber™ Monitoring System—The matching Liebert® Battery Cabinet allows installing an optional Alber™ battery monitoring system in the cabinet. The Alber battery monitoring continuously checks all critical battery parameters, such as cell voltage, overall string voltage, current and temperature.

4.2 Rectifier Feed Breaker (RFB)

For systems that use a Rectifier Feed Breaker (RFB), the controls for the Aux contact and UVR/shunt trip will go between the remote breaker and the UPS I/O and Customer Connectivity sections. Power for the UVR/shunt trip is customer-supplied.

Table 4.1 Rectifier Feed Breaker Specifications

Power Class	kAIC Rating	RFB Specification	RFB General Specification	Comments
250- 1200kVA	100 kA Module	UL-Listed 489 (Molded Case Circuit Breaker) or UL 1066 (Low Voltage AC Power Circuit Breaker), which are required for use in UL-listed switchgear or switchboards. The circuit breaker must have a short-time rating of 100kA at a maximum voltage of 480V for three cycles.	The remote breaker must be equipped with auxiliary contacts for proper operation with the UPS.	UPS internal fuse protection exists on rectifier and bypass input.

4.2.1 Remote Back-Feed Breaker


For systems that use a Remote Back-Feed Breaker (RBB), the controls for the Aux contact and 120V shunt trip will go between the remote breaker and the UPS I/O and Customer Connectivity sections. Power for the shunt trip is factory-supplied and wired according to the following diagram.

Table 4.2 Remote Back-Feed Breaker specifications

Power Class	kAIC Rating	RFB Specification	RBB General Specification	Comments
250- 1200kVA	100kA Module	UL-Listed 489 (Molded Case Circuit Breaker) or UL 1066 (Low Voltage AC Power Circuit Breaker), which are required for use in UL-listed switchgear or switchboards. The circuit breaker must have a short-time rating of 100kA at a maximum voltage of 480V for three cycles.	The remote breaker must be equipped with shunt trip and auxiliary contacts for proper operation with the UPS.	UPS internal fuse protection exists on rectifier and bypass input.



Figure 4.1 Remote Back-Feed Breaker Diagram

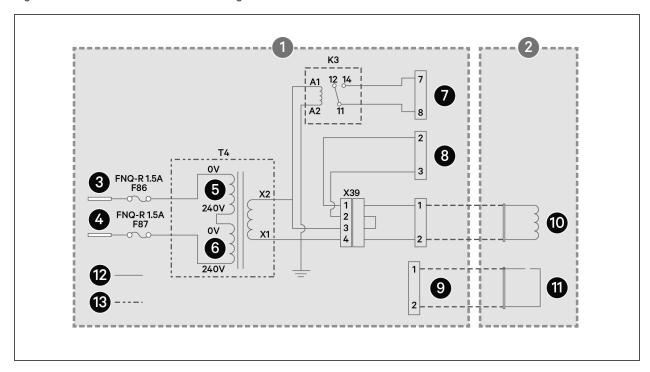

ltem	Description				
1	Inside UPS				
2	Inside Switchgear				
3	Phase A critical bus				
4	Phase B critical bus				
5	Bottom				
6	Тор				
7	P/S OK signal customer-input contact AP30-XP11 (factory-wired)				
8	Back-feed active customer-output contact AP30-XP12 (factory-wired)				
9	RBB Aux. contact customer-input contact AP30-XP11				
10	External, 120V shunt trip				
11	RBB Aux. contact				
NOTE: All wires can be 18AWG. Control wiring by o	NOTE: All wires can be 18AWG. Control wiring by others.				

4.3 Multi-Module System Options and Accessories

The accessories and options for single-module systems may be applied to the individual modules in a multi-module (1+N) system or a synchronized dual-bus (2N) system.

4 Optional Equipment 37

4.3.1 Paralleling Cable Kit

Module-to-module communication cables are required for 1+N parallel systems. A kit with RJ-45 connectors ships with each multi-module Liebert® EXL S1 UPS. At least one kit is required for each added UPS module; the number of kits required is one fewer than the number of UPS modules in the 1+N system (for example, six UPS modules would require five kits).

NOTE: Verify appropriate strain relief for all parallel communication cables to ensure that there is no tension or pressure on the RJ-45 to AP30-XP71 and AP30-XP72 connections.

Parallel communication cables must be selected from one of the suppliers to be compatible with the RJ-45 connector on the Liebert EXL S1. Vertiv™ Part # 564556P1 supplied or ordered with multi-module systems. Contact the factory for details. Approved parallel cable suppliers:

- Alpha Wire Corp., Part #2214C
- Belden, Part #8304
- General Cable. Part #C0723A

4.3.2 Multi-Bus Synch Module (MBSM)

This module is available to support six or up to 11 UPS modules, and is generally configured to synchronize all modules to a reference bus (e.g., bypass line). See the manual for this module for more details.



5 SPECIFICATIONS

Table 5.1 Specifications and Standards

UPS Rating (kVA)	400/500	250/300/400	500/600	625/750/800	1000/1100/1200		
Output Active Power at 104°F (40°C), kW	400/500	250/300/400	500/600	625/750/800	1000/1100/1200		
Input AC Parameters							
Input Voltage to Rectifier, VAC	415, 3-Phase, 4-Wire		480, 3-F	Phase, 3-Wire			
Input Voltage to Bypass, VAC	415, 3-Phase, 4-Wire		480, 3-F	Phase, 3-Wire			
Permissible Input Voltage Range			+10%, -15%				
Input Frequency, Hz			60				
Permissible Input Frequency Range, Hz			55 to 65				
Input Power Factor			≥ 0.99				
Input Current Distortion (THDi) at Nominal Voltage at Full Load, %		≤ 3.0 with Inpu	t Voltage Distortio	on (THDv) <1%			
Power Walk-In (seconds)		1 to 300 (Sele	ectable in 1 Secon	d Increments)			
Input/Bypass Withstand Rating			100 kA				
Battery and DC Parameters	Battery and DC Parameters						
Battery Type			LA (Valve-Regula (Vented Lead Ac				
Nominal Battery Bus, VDC			480				
Battery Float Voltage, VDC			540				
DC Ripple at Float Voltage		< 1.0%	(RMS value) < 3.4	4% Vpp			
Temperature Compensated Battery Charging		Standard v	vith Vertiv [™] Batter	ry Cabinets			
Output Parameters							
Load Power Factor Supported (Without Derating)		0.7 L	_eading to 0.4 Laç	gging			
Output Voltage, VAC		4	80, 3-Phase, 3-Wi	re			
Output Voltage Regulation, %		< 1.0 (3-Phase RMS Ave	erage)			
Output Voltage Regulation (50% Unbalanced Load), %	< 2.0 (3-Phase RMS Average)						
Output Frequency, Hz	60						
Output Frequency Regulation, %	± 0.1						
Output THD at Nominal Voltage (Linear Load), %	≤15 (RMS Value)						
Output THD at Nominal Voltage Including a 100kVA Non-Linear Load per IEC 62040-3, %	< 5 () (RMS Value)						
Efficiency AC-AC Double Conversion with DC Source Disconnected		Up to 9	7% maximum eff	iciency			

Table 5.1 Specifications and Standards (continued)

UPS Rating (kVA)	400/500 250/300/400 500/600 625/750/800 1000/1100/1200			
Efficiency AC-AC Eco Mode and Dynamic Online Mode with DC Source Disconnected	Up to 99% maximum efficiency			
Transient Recovery	IEC 62040-3, section 5.3.1 Figure 1			
Voltage Displacement (Balanced Loads)	120 degrees ± 1 degree			
Voltage Displacement (50% Unbalanced Loads)	120 degrees ± 2 degrees			
Overload at Nominal Voltage and 77°F (25°C)	110% continuously; 125% for 10 minutes; 150% for 60 seconds; 200% for 200 milliseconds			
Physical Characteristics				
Dimensions, WxDxH, in. (mm)	See Table 5.2 on the facing page.			
Color	Black (RAL 7021)			
Protection Class, UPS Enclosure	NEMA 1, IP 20 (with and without front door open)			
Environmental				
Operating Temperature	32°F to 104°F (0°C to 40°C)			
Relative Humidity	0% to 95%, maximum non-condensing for operation and storage			
Operating Altitude, ft. (m)	Up to 3300 (1000) without derating			
Acoustical Noise. dBA	78 (72 at partial load)			
General and System Data				
Inverter Type	High-Efficiency, Transformer-Free IGBT, Three-Level PWM Inverter			
Rectifier Type	High-Efficiency, Transformer-Free IGBT, Three-Level PWM Inverter			
Parallel Configuration	Up to 8 units in parallel			
Access	Front and Top (no rear access required)			
Communication				
Options	2 Liebert® IntelliSlot [™] Bays			
Card Compatibility	Liebert® IS-UNITY-DP, Liebert® IS-485EXI			
Protocols Available	Modbus-IP, Modbus-485, BACnet-IP, BACnet-MSTP, SNMP, HTTP, LIFE [™] Services			
Standards				
Transportation	ISTA Procedure 3B			
Safety	UL 1778 5th Edition; CSA 22.2 NO 107.3			
EMI	IEC 62040-2; FCC Part 15, Class A			
Surge	ANSI C62.41, Category B3			
Electrostatic Discharge (ESD) Immunity	IEC 61000-4.2 Level 2 (4kV) contact; Level 3 (8kV) air			
Seismic	IBC 2015, CBC 2016, ASCE, OSHPD Consult the factory for further details.			



Table 5.2 Dimensions and Weights—with and without options

UPS Rating			In	stalled Options	:		Approximate
kVA	kW	Voltage	Back-Feed Disconnect (BFD)	Bypass (Sharing) Inductors	Common Mode Choke	Dimensions WxDxH, in. (mm)	Weight Unpackaged, lb (kg)
400/500	400/500	415	_	_	_	63.0 x 36.0 x 79.1 (1600 x 914 x 2009)	2450 (1111)
400/500	400/500	415	×	_	_		2749 (1247)
400/500	400/500	415	_	×	=	74.8 x 36.0 x 79.1 (1900 x 914 x 2009)	2749 (1247)
400/500	400/500	415	×	×	_		2850 (1293)
250/300/400	250/300/400	480	_	_	_	51.2 x 36 x 79.1 (1300 x 914 x 2009)	1,869 (848)
250/300/400	250/300/400	480	Х	_	_	63 x 36 x 79.1 (1600 x 914 x 2009)	2168 (984)
250/300/400	250/300/400	480	_	×	_	63 x 36 x 79.1 (1600 x 914 x 2009)	2168 (984)
250/300/400	250/300/400	480	Х	×	_	63 x 36 x 79.1 (1600 x 914 x 2009)	2269 (1030)
500/600	500/600	480	_	_	_	63 x 36 x 79.1 (1600 x 914 x 2009)	2450 (1111)
500/600	500/600	480	×	_	_		2749 (1247)
500/600	500/600	480	_	×	_	74.8 x 36 x 79.1 (1900 x 914 x 2009)	2749 (1247)
500/600	500/600	480	×	×	1		2850 (1293)
625/750/800	625/750/800	480	_	_	_	78.8 x 36 x 79.1 (2002 x 914 x 2009)	3508 (1591)
625/750/800	625/750/800	480	×	_	1		4258 (1931)
625/750/800	625/750/800	480	_	х	_		4428 (2009)
625/750/800	625/750/800	480	_	_	Х	100000701	4787 (2171)
625/750/800	625/750/800	480	×	×	=	109.3 x 36 x 79.1 (2777 x 914 x 2009)	4558 (2067)
625/750/800	625/750/800	480	×	_	Х	(2777 X 0 1 4 X 2 0 0 0)	5096 (2312)
625/750/800	625/750/800	480	_	Х	Х		5457 (2475)
625/750/800	625/750/800	480	×	Х	X		5665 (2570)
1000/1100/1200	1000/1100/1200	480	_	_	_	104.5 x 36 x 79.1 (2654 x 914 x 2009)	4546 (2062)

Table 5.2 Dimensions and Weights—with and without options (continued)

UPS I		Installed Options				Approximate	
kVA	kW	Voltage	Back-Feed Disconnect (BFD)	Bypass (Sharing) Inductors	Common Mode Choke	Dimensions WxDxH, in. (mm)	Weight Unpackaged, Ib (kg)
1000/1100/1200	1000/1100/1200	480	Х	_	_		5116 (2321)
1000/1100/1200	1000/1100/1200	480	_	×	=		5286 (2398)
1000/1100/1200	1000/1100/1200	480	_	_	Х		5645 (2561)
1000/1100/1200	1000/1100/1200	480	Х	×		128.1 x 36 x 79.1 (3254 x 914 x 2009)	5416 (2457)
1000/1100/1200	1000/1100/1200	480	Х	_	×	(3294 X 914 X 2009)	5954 (2701)
1000/1100/1200	1000/1100/1200	480	=	×	Х		6315 (2864)
1000/1100/1200	1000/1100/1200	480	Х	Х	X		6523 (2959)

Minimum clearance above the UPS is 2 ft. (0.6m).

Top or bottom cable entry are available through removable access plates. Cut plate to suit conduit size. If aluminum cable is to be used, top and bottom cable entry may be required. Contact Applications Engineering for assistance.

Control wiring and power cables must be run in separate conduits. Control wiring must be stranded tinned conductors.

Table 5.3 Environmental Specifications

42

Parameter	Specification
Enclosure	The UPS is housed in a NEMA-1 enclosure. The enclosure is designed for indoor use only and is not to be subjected to falling objects or precipitation.
Recommended Operating Temperature, °F (°C)	77 (25) ambient
Maximum Operating Temperature, °F (°C)	104 (40) ambient (design temperature) without derating
Minimum Operating Temperature, °F (°C)	32 (0)
Storage Temperature, °F (°C)	-4 to 104 (-20 to 40). Contact factory for information about storage above 104°F (40°C)
Typical Battery Temperature Requirements	Average annual temperature must not exceed 80°F (27°C). Peak temperature must not exceed 109°F (43°C). See battery manufacturer's recommendations.
Relative Humidity	0% to 95%, maximum non-condensing for operation and storage
Operating Elevation	Sea level to 3300 ft (1000 m) without derating
Storage Elevation	Sea level to 50,000 ft (15,240 m)
Acoustical Noise at 39 inches (990 mm), dBA	78 (72 at partial load)



Table 5.4 Current ratings—rectifier input

UPS Rating		V I: V10		
kVA	kW	Voltage, VAC	Nominal Current	Maximum Current
400	400	415	576	634
500	500	415	722	794
250	250	480	310	341
300	300	480	373	410
400	400	480	499	548
500	500	480	624	686
600	600	480	749	824
625	625	480	780	858
750	750	480	937	1030
800	800	480	999	1099
1000	1000	480	1247	1372
1100	1100	480	1373	1510
1200	1200	480	1499	1574
1200	1200	480	1499	1649

Table 5.5 Current ratings—bypass

Table 3.5 Current ratings bypass						
UPS Rating		Voltage VAC	Nominal Current			
kVA	kW	Voltage VAC	Nominal Current			
400	400	415	556			
500	500	415	696			
250	250	480	301			
300	300	480	361			
400	400	480	481			
500	500	480	601			
600	600	480	722			
625	625	480	752			
750	750	480	902			
800	800	480	962			
1000	1000	480	1203			
1100	1100	480	1323			
1200	1200	480	1443			

Table 5.6 Current ratings—Output

UPS Rating		V I: V10	
kVA	kW	Voltage, VAC	Nominal Current
400	400	415	556
500	500	415	696
250	250	480	301
300	300	480	361
400	400	480	481
500	500	480	601
600	600	480	722
625	625	480	752
750	750	480	902
800	800	480	962
1000	1000	480	1203
1100	1100	480	1323
1200	1200	480	1443

Table 5.7 Current ratings—battery

Table 6.7 Garrent ratings battery							
	UPS	Rating	Nominal	Maximum Battery			
kVA	kW	Input Voltage VAC	VDC	Current, EOD			
400	400	415	480	1034			
500	500	415	480	1294			
250	250	480	480	647			
300	300	480	480	776			
400	400	480	480	1036			
500	500	480	480	1294			
600	600	480	480	1555			
625	625	480	480	1618			
750	750	480	480	1943			
800	800	480	480	2073			
1000	1000	480	480	2588			
1100	1100	480	480	2849			
1200	1200	480	480	3110			



Notes on Tables

- Maximum current includes nominal input current and maximum battery recharge current (considered non-continuous). Continuous and non-continuous current limits are defined in NEC 100. Values shown for maximum current are 110% of nominal input current, except for 1200kVA/kW module with 1600A breaker. This 1200kVA/kW module has a maximum current of 105% of nominal input current. Contact Applications Engineering for support in configuring a 1200kVA/kW module with a 1600A external rectifier input breaker.
- 2. For breaker coordination while the module is overloaded, see the current-versus-time values on the overload curves.
- 3. Nominal battery voltage is shown at 2.0 volts/cell.
- 4. Maximum battery current at end of discharge level of 1.67 volts per cell (240 cells).
- 5. Nominal AC output current (considered continuous) is based on full rated output load.
- 6. Bypass AC input current (considered continuous) is based on the full rated output load.

Table 5.8 Current-versus-time curves of inverter overload capacity

	Ambient Temperature								
Time, sec.	77°F (25°C)		86°F (30°C)	Time cos	95°F (35°C)	Time, sec.	104°F (40°C)		
Tille, Sec.	Load %	Time, sec.	Load %	Time, sec.	Load %	Time, sec.	Load %		
0.2	200%	0.2	200%	0.2	200%	0.2	200%		
1	158%	1	158%	1	158%	1	158%		
28	155%	30	155%	15	155%	19	155%		
50	152%	47	152%	30	152%	28	152%		
330	130%	155	130%	90	130%	40	130%		
600	125%	210	125%	115	125%	47	125%		
	110%		110%	207	110%	77	102%		
Based on no	Based on nominal input voltage and no battery charging.								

Table 5.9 Current-versus-time curves of bypass overload capacity, 104° (40° C)

% Load	Overload Time, sec.			
110	750			
125	300			
130	210			
152	19			
155	5.45			
158	5.17			
165	0.61			
Based on nominal input voltage				

Table 5.10 Recommended conduit and cable sizes

	Rating	Voltage	Cable Entry		nduits; # -size of phase cables per ole for ground per conduit
kVA	kW	(VAC)		Copper Conductors	Aluminum Conductors
RECTIFIER INPUT					
400	400	415	Тор	3 - 3* (350 kcmil/ph+2x350 kcmil+1/0 awg gnd)	4 - 3" (350 kcmil/ph+2x350 kcmil ntrl+3/0 awg gnd)
400	400	415	Bottom	3 - 3.5" (350 kcmil/ph+2x350 kcmil+1/0 awg gnd)	4 - 35" (350 kcmil/ph+2x350 kcmil ntrl+3/0 awg gnd)
500	500	415	Тор	3 - 3.5" (500 kcmil/ph+2x500 kcmil ntrl+1/0 awg gnd)	4 - 3" (350 kcmil/ph+2x350 kcmil ntrl+3/0 awg gnd)
500	500	415	Bottom	3 - 4" (500 kcmil/ph+2x500 kcmil ntrl+1/0 awg gnd)	4 - 3.5" (350 kcmil/ph+2x350 kcmil ntrl+3/0 awg gnd)
050	050	400	Тор	1-3* (500kcmil/ph+3 awg gnd)	2 - 2" (4/0 awg/ph+1 awg gnd)
250	250	480	Bottom	1 - 3" (500 kcmil/ph+3 awg gnd)	2 - 25" (4/0 awg/ph+1 awg gnd)
			Тор	2 - 2" (4/0 awg/ph+2 awg gnd)	2 - 25" (300 kcmil/ph+1/0 awg gnd)
300	300	480	Bottom	2 - 2.5" (4/0 awg/ph+2 awg gnd)	2 - 3" (300 kcmil/ph+1/0 awg gnd)
	400 400	480	Тор	2 - 2.5" (350 kcmil/ph+1 awg gnd)	2 - 3" (500 kcmil/ph+2/0 awg gnd)
400			Bottom	2 - 3* (350 kcmil/ph+1 awg gnd)	2 - 35" (500 kcmil/ph+2/0 awg gnd)
			Тор	3 - 2.5" (250 kcmil/ph+1/0 awg gnd)	3 - 25" (350 kcmil/ph+3/0 awg gnd)
500	500	480	Bottom	3 - 2.5" (250 kcmil/ph+1/0 awg gnd)	3 - 3" (350 kcmil/ph+3/0 awg gnd)
			Тор	3 - 2.5" (350 kcmil/ph+2/0 awg gnd)	3 - 3" (500 kcmil/ph+4/0 awg gnd)
600	600	480	Bottom	3 - 3" (350 kcmil/ph+2/0 awg gnd)	3 - 35" (500 kcmil/ph+4/0 awg gnd)
0.05	0.05	400	Тор	3 - 2.5" (350 kcmil/ph+2/0 awg gnd)	3 - 3" (500 kcmil/ph+4/0 awg gnd)
625	625	480	Bottom	3 - 3" (350 kcmil/ph+2/0 awg gnd)	3 - 3.5" (500 kcmil/ph+4/0 awg gnd)
			Тор	4 - 25" (350 kcmil/ph+3/0 awg gnd)	4 - 3" (500 kcmil/ph+250 kcmil gnd)
/50	750 750	480	Bottom	4 - 3" (350 kcmil/ph+3/0 awg gnd)	4 - 35" (500 kcmil/ph+250 kcmil gnd)
000	000	/.00	Тор	4 - 2.5" (350 kcmil/ph+3/0 awg gnd)	4 - 3" (500 kcmil/ph+250 kcmil gnd)
800	800	480	Bottom	4 - 3" (350 kcmil/ph+3/0 awg gnd)	4 - 3.5" (500 kcmil/ph+250 kcmil gnd)



Table 5.10 Recommended conduit and cable sizes (continued)

UPS Rating		Voltage (VAC)	Cable Entry	(# of conduits); size of conduits; # -size of phase cables per conduit; size of cable for ground per conduit	
kVA	kW	(VAC)		Copper Conductors	Aluminum Conductors
1000	1000 1000	480	Тор	4 - 3*(500 kcmil/ph+4/0 awg gnd)	5 - 3"(500 kcmil/ph+350 kcmil gnd)
1000		480	Bottom	4 - 3.5"(500 kcmil/ph+4/0 awg gnd)	5 - 3.5"(500 kcmil/ph+350 kcmil gnd)
1100 1100	(00	Тор	5 - 3" (500 kcmil/ph+4/0 awg gnd)	6 - 3" (500 kcmil/ph+350 kcmil gnd)	
	1100	480	Bottom	5 - 3.5" (500 kcmil/ph+4/0 awg gnd)	5 - 4" (600 kcmil/ph+350 kcmil gnd)
1200 1200	1200	1200 480	Тор	6 - 3" (500 kcmil/ph+250 kcmil gnd)	7 - 3" (500 kcmil/ph+400 kcmil gnd)
	1200		Bottom	5 - 3.5" (600 kcmil/ph+250 kcmil gnd)	6 - 4" (600 kcmil/ph+400 kcmil gnd)

Table 5.10 Recommended conduit and cable sizes (continued)

Table 5.10 Reco	mmended conduit	and cable sizes ((continued)		
UPS	UPS Rating		Voltage (VAC) Cable Entry	(# of conduits); size of conduits; # -size of phase cables per conduit; size of cable for ground per conduit	
kVA	kW	(VAC)		Copper Conductors	Aluminum Conductors
BYPASS INPUT					
400	400	/15	Тор	2 - 35" (500 kcmil/ph+2x500 kcmil ntrl+1 awg gnd)	3 - 3" (350 kcmil/ph+2x350 kcmil ntrl+2/0 awg gnd)
400	400	415	Bottom	2 - 4" (500 kcmil/ph+2x500 kcmil ntrl+1 awg gnd)	3 - 3.5" (350 kcmil/ph+2x350 kcmil ntrl+2/0 awg gnd)
500	500	415	Тор	3 - 3" (350 kcmil/ph+2x350 kcmil+1/0 awg gnd)	4 - 3" (350 kcmil/ph+2x350 kcmil ntrl+3/0 awg gnd)
500	500	415	Bottom	3 - 3.5" (350 kcmil/ph+2x350 kcmil+1/0 awg gnd)	4 - 3.5" (350 kcmil/ph+2x350 kcmil ntrl+3/0 awg gnd)
250	250	480	Тор	1 - 3" (500kcmil/ph+3 awg gnd)	2 - 2" (4/0 awg/ph+1 awg gnd)
250	250	460	Bottom	1 - 3* (500kcmil/ph+3 awg gnd)	2 - 25" (4/0 awg/ph+1 awg gnd)
200	200	480	Тор	2 - 2" (4/0 awg/ph+3 awg gnd)	2 - 25" (250kcmil/ph+1 awg gnd)
300	300	480	Bottom	2 - 25* (4/0 awg/ph+3 awg gnd)	2 - 25" (250kcmil/ph+1 awg gnd)
400	400 400	480	Тор	2 - 2.5" (250kcmil/ph+2 awg gnd)	2 - 25" (350kcmil/ph+1/0 awg gnd)
400			Bottom	2 - 2.5" (250kcmil/ph+2 awg gnd)	2 - 3" (350kcmil/ph+1/0 awg gnd)
500	500	480	Тор	3 - 2.5" (250 kcmil/ph+1/0 awg gnd)	3 - 25" (350 kcmil/ph+3/0 awg gnd)
500	500		Bottom	3 - 2.5" (250 kcmil/ph+1/0 awg gnd)	3 - 3" (350 kcmil/ph+3/0 awg gnd)
600	600	480	Тор	3 - 25" (350 kcmil/ph+1/0 awg gnd)	3 - 3" (500 kcmil/ph+3/0 awg gnd)
000	000	480	Bottom	3- 3* (350 kcmil/ph+1/0 awg gnd)	3 - 3.5" (500 kcmil/ph+3/0 awg gnd)
625	625	480	Тор	3 - 2.5" (350 kcmil/ph+1/0 awg gnd)	3 - 3" (500 kcmil/ph+3/0 awg gnd)
025	023	400	Bottom	3 - 3* (350 kcmil/ph+1/0 awg gnd)	3 - 3.5" (500 kcmil/ph+3/0 awg gnd)
750	750	480	Тор	3 - 3" (500 kcmil/ph+2/0 awg gnd)	3 - 3" (600 kcmil/ph+4/0 awg gnd)
730	750	480	Bottom	3 - 3.5" (500 kcmil/ph+2/0 awg gnd)	3 - 3.5" (600 kcmil/ph+4/0 awg gnd)
900	800	480	Тор	3 - 3" (500 kcmil/ph+2/0 awg gnd)	3 - 3" (600 kcmil/ph+4/0 awg gnd)
800	800	400	Bottom	3 - 3.5" (500 kcmil/ph+2/0 awg gnd)	3 - 3.5" (600 kcmil/ph+4/0 awg gnd)



Table 5.10 Recommended conduit and cable sizes (continued)

UPS Rating		Voltage Cable	Cable Entry	(# of conduits); size of conduits; # -size of phase cables per conduit; size of cable for ground per conduit		
kVA	kW	(VAC)		Copper Conductors	Aluminum Conductors	
1000	1000		Тор	4 - 3*(500 kcmil/ph+4/0 awg gnd)	5 - 3"(500 kcmil/ph+350 kcmil gnd)	
1000	480	Bottom	4 - 3.5"(500 kcmil/ph+4/0 awg gnd)	5 - 3.5"(500 kcmil/ph+350 kcmil gnd)		
1100 1100	1100	480	Тор	4 - 3*(500 kcmil/ph+4/0 awg gnd)	5 - 3"(500 kcmil/ph+350 kcmil gnd)	
	1100		Bottom	4 - 3.5"(500 kcmil/ph+4/0 awg gnd)	5 - 3.5"(500 kcmil/ph+350 kcmil gnd)	
1200	1200	480	Тор	5 - 3" (500 kcmil/ph+4/0 awg gnd)	6 - 3" (500 kcmil/ph+350 kcmil gnd)	
	1200		Bottom	5 - 3.5" (500 kcmil/ph+4/0 awg gnd)	5 - 4" (600 kcmil/ph+350 kcmil gnd)	

Table 5.10 Recommended conduit and cable sizes (continued)

Voltage (VAC) Cable Entry Conductors Aluminum Conductor	able 5.10 Reco	mmended conduit	t and cable sizes ((continued)			
Top	UPS	UPS Rating		Cable Entry		(# of conduits); size of conduits; # -size of phase cables per conduit; size of cable for ground per conduit	
Top	kVA	kW	(****)		Copper Conductors	Aluminum Conductors	
Top	OUTPUT						
Bottom 2 - 4*(500 kcmil/ph+2x500 kcmil/ph+2x500 ntrl+2/0 awg gnd) 3 - 35*(350 kcmil/ph+2x500 ntrl+2/0 awg gnd) 4 - 3*(550 kcmil/ph+2x550 kcmil/ph+3x50 mtrl+3/0 awg gnd) 4 - 3**(530 kcmil/ph+2x550 kcmil/ph+2x550 kcmil/ph+3x50 mtrl+3/0 awg gnd) 4 - 3**(530 kcmil/ph+2x550 kcmil/ph+3x50 mtrl+3/0 awg gnd) 4 - 3**(530 kcmil/ph+2x550 kcmil/ph+3x50 mtrl+3/0 awg gnd) 2 - 2**(4/0 awg/ph+1 awg gnd) 2 - 2**(4/0 awg/ph+1 awg gnd) 2 - 2**(4/0 awg/ph+3 awg gnd) 2 - 2**(550 kcmil/ph+1 awg gnd) 2 - 2**(550 kcmil/ph+1/0 awg gnd) 3 - 3**(550 kcmil/ph+1/0 awg gnd) 3 - 3**(550 kcmil/ph+3/0 awg gnd) 3 - 3**(550 kcmil/ph+3/0 awg gnd) 3 - 3**(5500 kcmil/ph+3/0 awg gnd) 3 - 3**(55	400	400	/15	Тор	· ·	3 - 3" (350 kcmil/ph+2x350 kcmil ntrl+2/0 awg gnd)	
Soo	400	400	410	Bottom	· ·	3 - 3.5" (350 kcmil/ph+2x350 kcmil ntrl+2/0 awg gnd)	
Bottom 3 - 35' (350 kcmil/ph+2/350 4 - 35' (350 kcmil/ph+2/350 kcmil-1/0 awg gnd) 4 - 35' (350 kcmil/ph+2/30 awg gnd) 1 - 3' (500 kcmil/ph+3 awg gnd) 2 - 2' (4/0 awg/ph+1 awg gnd) 2 - 2' (4/0 awg/ph+1 awg gnd) 2 - 25' (4/0 awg/ph+1 awg gnd) 2 - 25' (250 kcmil/ph+1 awg gnd) 2 - 25' (250 kcmil/ph+1/0 awg gnd) 3 - 25' (250 kcmil/ph+1/0 awg gnd) 3 - 25' (350 kcmil/ph+3/0 awg gnd) 3 - 3' (500 kcmil/ph+3	500	500	<i>k</i> .15	Тор	· ·	4 - 3" (350 kcmil/ph+2x350 kcmil ntrl+3/0 awg gnd)	
1-3" (\$600kcmil/ph+3 awg gnd) 2-2" (4/0 awg/ph+1awg gnd) 2-2" (4/0 awg/ph+1awg gnd) 2-2" (4/0 awg/ph+3 awg gnd) 2-2" (4/0 awg/ph+3 awg gnd) 2-2" (25" (250kcmil/ph+1awg gnd) 2-2" (25" (250kcmil/ph+1)/0 awg gnd) 2-2" (25" (250kcmil/ph+1)/0 awg gnd) 2-2" (25" (250kcmil/ph+1)/0 awg gnd) 2-3" (350kcmil/ph+1)/0 awg gnd) 3-2" (350kcmil/ph+3)/0 awg gnd) 3-3" (350 kcmil/ph+3)/0 awg gnd) 3-3" (350 kcmil/ph+3)/0 awg gnd) 3-3" (350 kcmil/ph+3)/0 awg gnd) 3-3" (500 kcmil/ph+3)/0 awg g	300	300	410	Bottom		4 - 35" (350 kcmil/ph+2x350 kcmil ntrl+3/0 awg gnd)	
Bottom	250	250	480	Тор		2 - 2" (4/0 awg/ph+1 awg gnd)	
Top	200	250	400	Bottom		2 - 25" (4/0 awg/ph+1 awg gnd)	
Bottom 2 - 25' (4/0 awg/ph+3 awg gnd) 2 - 25' (250kcmil/ph+1 awg gnd) 2 - 25' (250kcmil/ph+1 awg gnd) 2 - 25' (250kcmil/ph+2 awg gnd) 2 - 25' (350kcmil/ph+1/0 awg gnd) 2 - 25' (350kcmil/ph+1/0 awg gnd) 2 - 3' (350kcmil/ph+1/0 awg gnd) 3 - 25' (350 kcmil/ph+3/0 awg gnd) 3 - 25' (350 kcmil/ph+3/0 awg gnd) 3 - 3' (350 kcmil/ph+3/0 awg gnd) 3 - 3' (350 kcmil/ph+3/0 awg gnd) 3 - 3' (500 kcmil/ph+3/0 aw	300	300	480	Тор		2 - 25" (250kcmil/ph+1 awg gnd)	
Top gnd) 2-25" (350 kcmil/ph+1/0 awg gnd) 2-25" (350 kcmil/ph+1/0 awg gnd) 2-3" (350 kcmil/ph+1/0 awg gnd) 3-25" (250 kcmil/ph+1/0 awg gnd) 3-25" (350 kcmil/ph+3/0 awg gnd) 3-25" (350 kcmil/ph+3/0 awg gnd) 3-3" (350 kcmil/ph+3/0 awg gnd) 3-3" (500 kcmil/ph+3	300	300	400	Bottom		2 - 25" (250kcmil/ph+1 awg gnd)	
Bottom 2 - 25' (250 kcmil/ph+2 awg gnd) 2 - 3' (350 kcmil/ph+1/0 awg gnd) 2 - 3' (350 kcmil/ph+1/0 awg gnd) 3 - 25' (250 kcmil/ph+1/0 awg gnd) 3 - 25' (350 kcmil/ph+3/0 awg gnd) 3 - 25' (350 kcmil/ph+1/0 awg gnd) 3 - 3' (350 kcmil/ph+3/0 awg gnd) 3 - 3' (500 kcmil/ph+3/0 awg gnd)	400		(00	Тор		2 - 25" (350kcmil/ph+1/0 awg gnd)	
Top awg gnd 3 - 25" (350 kcmil/ph+3/0 awg gnd) 3 - 25" (350 kcmil/ph+3/0 awg gnd) 3 - 3" (350 kcmil/ph+3/0 awg gnd) 3 - 3" (350 kcmil/ph+3/0 awg gnd) 3 - 3" (500 kcmil/ph+3/0 awg	400 400	400	Bottom		2 - 3" (350kcmil/ph+1/0 awg gnd)		
Bottom 3 - 25' (250 kcmil/ph+1/0 awg gnd) 3 - 3' (350 kcmil/ph+3/0 awg gnd) 3 - 3' (350 kcmil/ph+3/0 awg gnd) 3 - 3' (500 kcmil/ph+3/0 awg gnd) 3 - 3' (500 kcmil/ph+3/0 awg gnd) 3 - 3' (500 kcmil/ph+3/0 awg gnd) 3 - 35' (500 kcmil/ph+3/0 awg gnd) 3 - 3' (500 kcmil/ph+3/0 awg gnd) 3 - 3' (500 kcmil/ph+3/0 awg gnd)	F00	F00	/00	Тор		3 - 25" (350 kcmil/ph+3/0 awg gnd)	
600 600 480 3 - 3" (\$00 kcmil/ph+3/0 awg gnd) 3 - 3" (\$00 kcmil/ph+3/0 awg gnd) 3 - 35" (\$00 kcmil/ph+3/0 awg gnd) 3 - 35" (\$00 kcmil/ph+3/0 awg gnd) 3 - 35" (\$00 kcmil/ph+3/0 awg gnd) 3 - 3" (\$00 kcmil/ph+3/0 awg gnd)	300	300	480	Bottom	· ·	3 - 3" (350 kcmil/ph+3/0 awg gnd)	
Bottom 3 - 3" (350 kcmil/ph+1/0 awg gnd) 3 - 35" (500 kcmil/ph+3/0 awg gnd) 3 - 35" (500 kcmil/ph+3/0 awg gnd) 3 - 3" (500 kcmil/ph+3/0 awg gnd)	600	600	480	Тор		3 - 3" (500 kcmil/ph+3/0 awg gnd)	
awg gnd) 3 - 3" (500 kcmil/ph+3/0 awg	000	000	480	Bottom		3 - 3.5" (500 kcmil/ph+3/0 awg gnd)	
025 025 400	625	625	480	Тор		3 - 3" (500 kcmil/ph+3/0 awg gnd)	
Bottom 3 - 3" (350 kcmil/ph+1/0 awg gnd) 3 - 3.5" (500 kcmil/ph+3/0 aw	023	023	400	Bottom		3 - 3.5" (500 kcmil/ph+3/0 awg gnd)	
gnd)	750	750	480	Тор	, , , , , , , , , , , , , , , , , , , ,	3 - 3" (600 kcmil/ph+4/0 awg gnd)	
	750 750	730	480	Bottom	· ·	3 - 3.5" (600 kcmil/ph+4/0 awg gnd)	
gnd)	800	800	4.00	Тор		3 - 3" (600 kcmil/ph+4/0 awg gnd)	
800 800 480 3-35" (500 kcmil/ph+2/0 awg gnd) 3-35" (600 kcmil/ph+4/0 gnd)	800	800	480	Bottom	· ·	3 - 3.5" (600 kcmil/ph+4/0 awg gnd)	



Table 5.10 Recommended conduit and cable sizes (continued)

UPS Rating		Voltage Cal	Cable Entry	(# of conduits); size of conduits; # -size of phase cables per conduit; size of cable for ground per conduit		
kVA	kVA kW			Copper Conductors	Aluminum Conductors	
1000			Тор	4 - 3*(500 kcmil/ph+4/0 awg gnd)	5 - 3"(500 kcmil/ph+350 kcmil gnd)	
1000 1000	480	Bottom	4 - 3.5"(500 kcmil/ph+4/0 awg gnd)	5 - 3.5"(500 kcmil/ph+350 kcmil gnd)		
1100 1100	1100	480	Тор	4 - 3*(500 kcmil/ph+4/0 awg gnd)	5 - 3"(500 kcmil/ph+350 kcmil gnd)	
	1100		Bottom	4 - 3.5"(500 kcmil/ph+4/0 awg gnd)	5 - 3.5"(500 kcmil/ph+350 kcmil gnd)	
1200	1200	1200 480	Тор	5 - 3" (500 kcmil/ph+4/0 awg gnd)	6 - 3" (500 kcmil/ph+350 kcmil gnd)	
	1200		Bottom	5 - 3.5" (500 kcmil/ph+4/0 awg gnd)	5 - 4" (600 kcmil/ph+350 kcmil gnd)	

Table 5.10 Recommended conduit and cable sizes (continued)

UPS	UPS Rating		Voltage Cable Entry	(# of conduits); size of conduits; # -size of phase cables per conduit; size of cable for ground per conduit	
kVA	kW	(VAC)		Copper Conductors	Aluminum Conductors
BATTERY			,		
			Тор	3 - 25" (600 kcmil/polarity+3/0 awg gnd)	3 - 3" (600kcmil/polarity+3/0 awg gnd)
400	400	415	Bottom	4 - 25" (500 kcmil/polarity+250 kcmil gnd)	4 - 3" (500 kcmil/polarity+ 250 kcmil gnd)
			Тор	4 - 25" (500 kcmil/polarity+4/0 awg gnd)	4 - 3" (500 kcmil/polarity+ 4/0 awg gnd)
500	500	415	Bottom	5 - 2.5" (500 kcmil/polarity+350 kcmil gnd)	5 - 3* (500 kcmil/polarity+350 kcmil gnd)
250	250 250	480	Тор	2 - 25" (500kcmil/polarity+1/0 awg gnd)	3 - 25" (350kcmil/polarity+ 3/0 awg gnd)
			Bottom	2 - 3" (500kcmil/polarity+1/0 awg gnd)	3 - 25" (350kcmil/polarity+ 3/0 awg gnd)
300 300	480	Тор	2 - 25" (600kcmil/polarity+1/0 awg gnd)	3 - 25" (500kcmil/polarity+ 3/0 awg gnd)	
		Bottom	2 - 3" (600kcmil/polarity+1/0 awg gnd)	3 - 3" (500kcmil/polarity+ 3/0 awg gnd)	
400	400 400	480	Тор	3 - 25" (600kcmil/polarity+3/0 awg gnd)	4 - 25" (500kcmil/polarity+ 250kcmil gnd)
			Bottom	3 - 3" (600kcmil/polarity+3/0 awg gnd)	4 - 3" (500kcmil/polarity+ 250kcmil gnd)
500	500	/00	Тор	4 - 2.5" (500 kcmil/polarity+4/0 awg gnd)	5 - 25" (500 kcmil/polarity+350 kcmil gnd)
300	300	480	Bottom	4 - 3" (500 kcmil/polarity+4/0 awg gnd)	5 - 3" (500 kcmil/polarity+350 kcmil gnd)
600	600	480	Тор	4 - 25" (600 kcmil/polarity+4/0 awg gnd)	5 - 3" (600 kcmil/polarity+350 kcmil gnd)
600 600	480	Bottom	4 - 3" (600 kcmil/polarity+4/0 awg gnd)	5 - 3" (600 kcmil/polarity+350 kcmil gnd)	
	625	480	Тор	5 - 3" (600 kcmil/polarity+250 kcmil gnd)	6 - 3" (600 kcmil/polarity+400 kcmil gnd)
625	020	400	Bottom	5 - 3" (600 kcmil/polarity+250 kcmil gnd)	6 - 35" (600 kcmil/polarity+400 kcmil gnd)



Table 5.10 Recommended conduit and cable sizes (continued)

UPS F	UPS Rating		Voltage Cable Entry	(# of conduits); size of conduits; # -size of phase cables per conduit; size of cable for ground per conduit		
kVA	kW	(VAC)	Subject Entry	Copper Conductors	Aluminum Conductors	
	(00	Тор	5 - 3° (600 kemil/polarity+250 kemil gnd)	6 - 3" (600 kcmil/polarity+400 kcmil gnd)		
750	750	480	Bottom	5 - 3" (600 kemil/polarity+250 kemil gnd)	6 - 3.5" (600 kcmil/polarity+400 kcmil gnd)	
200	800 800	480	Тор	6 - 3*(600 kcmil/polarity+350 kcmil gnd)	7 - 3"(700 kcmil/polarity+600 kcmil gnd)	
800			Bottom	6 - 3*(600 kcmil/polarity+350 kcmil gnd)	7 - 3.5"(700 kcmil/polarity+600 kcmil gnd)	
1000 1000	1000	480	Тор	8 - 3" (600 kcmil/polarity+500 kcmil gnd)	8 - 3° (700 kemil/polarity+600 kemil gnd)	
	1000		Bottom	8 - 3.5" (600 kcmil/polarity+500 kcmil gnd)	8 - 3.5" (700 kcmil/polarity+600 kcmil gnd)	
1100 1100	1100	480	Тор	8 - 3" (600 kcmil/polarity+500 kcmil gnd)	8 - 3" (700 kemil/polarity+600 kemil gnd)	
	1100		Bottom	8 - 3.5" (600 kcmil/polarity+500 kcmil gnd)	8 - 3.5" (700 kcmil/polarity+600 kcmil gnd)	
			Тор	9 - 3*(750 kcmil/polarity+500 kcmil gnd)	11 - 3"(700 kcmil/polarity+750 kcmil gnd)	
1200	1200	480	Bottom	10 - 35'(600 kcmil/polarity+500 kcmil gnd)	11 - 35°(700 kcmil/polarity+750 kcmil gnd)	

- 1. Recommended cable sizes are 167°F (75°C) (THW) wire at 86°F (30°C) ambient.
- 2. Refer to NEC recommendations for 104°F (40°C) ambient rated conductors.
- 3. Unless otherwise noted, use copper or aluminum conductors suitable for at least 75°C.
- 4. Recommended cables and conduits are based on breaker trip setting sized for the maximum continuous rated current for the rectifier input and the nominal current for the bypass and output listed in on the previous page, through on the previous page.
- 5. Conduit size is based on RNC type conduit for bottom input and EMT-type conduit for top input.
- 6. Vertiv™ recommends that the site planner choose the appropriate cable type based on the particular installation requirements.
- 7. These recommendations are for use with 100% rated breakers. For 125% rated breakers, refer to the NEC recommended conduit and cable sizes.
- 8. Upstream and downstream non-standard recommended breaker settings have their trip adjustment behind a suitable cover in accordance with 240.6 (c) of the NEC.

Table 5.11 Recommended Lug Sizes

Cable Size	T&B Copper One Hole	T&B Copper Two Hole	T&B Aluminum One Hole	T&B Aluminum Two Hole
#8AWG	54930BE	54850BE	60104-TB	_
#6AWG	54905BE	256-30695-868	60109-TB	_
#4AWG	54906BE	256-30695-733	60114-TB	_
#2-3AWG	54942BE	54811BE	60120	_
#1AWG	54947BE	54857BE	60126	_
#1/0AWG	54950BE	256-30695-593	60132	_
#2/0AWG	54951BE	54862BE	60138	60238
#3/0AWG	54965BE	54864BE	60144	60244
#4/0AWG	54970BE	54866BE	60150	60250
250kcmil	54913BE	54868BE	60156	60256
300kcmil	54914BE	54870BE	60162	60262
350kcmil	54915BE	54872BE	60165	60267
400kcmil	54916BE	54874BE	60168	60269
500kcmil	54918BE	54876BE	60171	60273
600kcmil	54920BE	54878BE	60176	60275
750kcmil	54922BE	54880BE	60178	60277

Table 5.12 Recommended Torque Values

Grade 5 Steel: Unified Thread System Torque, lbf.*in.					Class 8.8 Steel: Metric Thread System Torque, N*m			
Fastener Finish		Plain Steel	Zinc Plating		Fastener Finish		Plain Steel	Zinc Plating
Size	Threads/Inch, Tpi	No Washer/ Flat Washer	No Washer/ Flat Washer		Size	Thread Pitch, Tp	No Washer/Flat Washer	No Washer/Flat Washer
1/4	20	101	91		- M5	0.8	6.1	5.5
	28	116	104			0.5	6.9	6.2
5/16	18	209	188		M6	1	10	9
	24	231	208			0.75	11	10
3/8	16	370	333		M8	1.25	25	23
	24	420	378			1	27	24
7/16	14	593	534		M10	1.5	50	45
	20	662	596			1.25	53	47



Table 5.12 Recommended Torque Values (continued)

Grade 5 Steel: Unified Thread System Torque, lbf.*in.					Class 8.8 Steel: Metric Thread System Torque, N*m			
Fastener Finish		Plain Steel	Zinc Plating		Fastener Finish		Plain Steel	Zinc Plating
Size	Threads/ Inch, Tpi	No Washer/Flat Washer	No Washer/Flat Washer		Size	Thread Pitch, Tp	No Washer/Flat Washer	No Washer/Flat Washer
1/2	13	904	814		M12	1.75	87	78
	20	1020	918			1.25	95	86
9/16	12	1305	1175		M14	2	139	125
	18	1456	1310			1.5	151	136

Table 5.13 Components required for seismic configuration

Part #	Description
EXLS10SH400S	Seismic Anchor Kit, EXL S1 250-400kVA 480 V UPS w/ Standard IO Cabinet
EXLS1OSH4002	Seismic Anchor Kit, EXL S1 250-400kVA 480 V UPS w/ BFD, Byp Share Inductor IO Cabinet
EXLS1OSH600S	Seismic Anchor Kit, EXL S1 500-600kVA 480 V (400-500kVA 415V) UPS w/ Standard IO Cabinet
EXLS1OSH6002	Seismic Anchor Kit, EXL S1 500-600kVA 480 V (400-500kVA 415V) UPS w/ BFD, Byp Share Inductor IO Cabinet
EXLS1OSH800S	Seismic Anchor Kit, EXL S1 625-800kVA UPS w/ Standard IO Cabinet
EXLS1OSH8002	Seismic Anchor Kit, EXL S1 625-800kVA UPS w/ BFD, CMC, Byp Share Inductor IO Cabinet
EXLS1OSH1200S	Seismic Anchor Kit, EXL S1 1000-1200kVA UPS w/ Standard IO Cabinet
EXLS10SH12002	Seismic Anchor Kit, EXL S1 1000-1200kVA UPS w/ BFD, CMC, Byp Share Inductor IO Cabinet

This page intentionally left blank



APPENDICES

Appendix A: Technical Illustrations

The technical illustrations are in the order of the drawing part number. **Table A.1** below, groups the drawings by referenced topic/application.

Table A.1 Technical-illustrations Contents

Drawing Number	UPS model			
400 – 500 kVA, 415-V UPS Installation Drawings				
ES1-05-S021	SMS and 1+N multi-module unit			
ES1-05-S022	SMS and 1+N multi-module unit with back-feed disconnect			
ES1-05-S023	SMS and 1+N multi-module unit with sharing inductors			
ES1-05-S024	SMS and 1+N multi-module unit with BFD and sharing inductor			
569240P1	Attached battery-system cable-wiring cabinet installation details			
250 – 400 kVA, 480-V UPS Installation Drawings				
ES1-05-S025	SMS and 1+N multi-module unit			
ES1-05-S026	SMS and 1+N multi-module unit with back-feed disconnect			
ES1-05-S027	SMS and 1+N multi-module unit with sharing inductors			
ES1-05-S028	SMS and 1+N multi-module unit with BFD and sharing inductor			
569240P1	Attached battery-system cable-wiring cabinet installation details			
500 – 600 kVA, 480-V UPS Installation Drawings				
ES1-05-S017	SMS and 1+N multi-module unit			
ES1-05-S018	SMS and 1+N multi-module unit with back-feed disconnect			
ES1-05-S019	SMS and 1+N multi-module unit with sharing inductors			
ES1-05-S020	SMS and 1+N multi-module unit with BFD and sharing inductor			
569240P1	Attached battery-system cable-wiring cabinet installation details			
625 – 800 kVA UPS Installation Drawings				
ES1-05-S009	SMS and 1+N multi-module unit			
ES1-05-S010	SMS and 1+N multi-module unit with back-feed disconnect			
ES1-05-S011	SMS and 1+N multi-module unit with sharing inductor			
ES1-05-S012	SMS and 1+N multi-module unit with BFD and sharing inductor			
ES1-05-S013	SMS and 1+N multi-module unit with common mode choke			
ES1-05-S014	SMS and 1+N multi-module unit with common mode choke and BFD			
ES1-05-S015	SMS and 1+N multi-module unit with common mode choke and sharing inductor			

Table A.1 Technical-illustrations Contents (continued)

58

i able A.i i echnical-illustrat	Table A.1 Technical-illustrations Contents (continued)					
Drawing Number	UPS model					
ES1-05-S016	SMS and 1+N multi-module unit with common mode choke, BFD, and sharing inductor					
1000 – 1200 kVA UPS Installation Drawings						
ES1-05-S001	SMS and 1+N multi-module unit					
ES1-05-S002	SMS and 1+N multi-module unit with optional back-feed disconnect					
ES1-05-S003	SMS and 1+N multi-module unit with sharing inductor					
ES1-05-S004	SMS and 1+N multi-module unit with optional back-feed disconnect and sharing inductor					
559322P1	Interconnection Details for 1000 – 1200 kVA models without common mode choke					
ES1-05-S005	SMS, 1+N, and N+1 multi-module unit with common mode choke					
ES1-05-S006	SMS, 1+N, and N+1 multi-module unit with common mode choke and BFD					
ES1-05-S007	SMS, 1+N, and N+1 multi-module unit with common mode choke and sharing inductor					
ES1-05-S008	SMS, 1+N, and N+1 multi-module unit with common mode choke, BFD, and sharing inductor					
Connection Points and Shipping Splits						
559322P1	Mechanical installation, 800 and 1200kVA UPS with Input/Output Cabinet 1					
561763P1	Mechanical installation, 800 and 1200kVA UPS with Input/Output Cabinet 2 or 3					
562059P1	Interconnection Details for models with common mode choke					
System Cabling Layouts - Single Mode	ule, Single-Input Layouts					
ES1-01-S001	with static bypass					
ES1-01-S002	with static bypass and back-feed disconnect					
ES1-01-S003	with static bypass and two-breaker external maintenance bypass					
ES1-01-S004	with static bypass, two-breaker external maintenance bypass, and back-feed breaker					
ES1-01-S005	with single input, static bypass, and three-breaker external maintenance bypass					
ES1-01-S006	with static bypass, three-breaker external maintenance bypass, and back-feed disconnect					
System Cabling Layouts - Single Module, Dual-Input Layouts						
ES1-01-S007	with static bypass					
ES1-01-S008	with static bypass and back-feed disconnect					
ES1-01-S009	with static bypass and two-breaker external maintenance bypass					
ES1-01-S010	with static bypass, two-breaker external maintenance bypass, and back-feed disconnect					
ES1-01-S011	with static bypass and three-breaker external maintenance bypass					
ES1-01-S012	with static bypass and four-breaker external maintenance bypass					
System Cabling Layouts - 1+N Multi-Module, Single-Input Layouts						
ES1-02-S001	with static bypass and two-breaker paralleling cabinet					
ES1-02-S002	with static bypass, two-breaker paralleling cabinet, and back-feed disconnect					

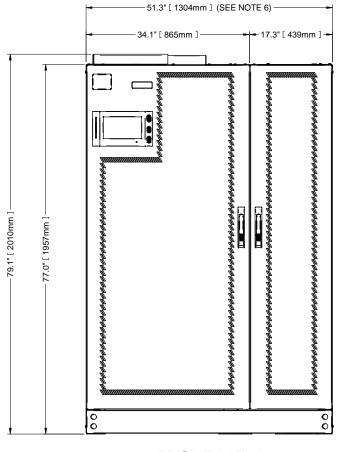



Table A.1 Technical-illustrations Contents (continued)

Drawing Number	UPS model			
ES1-02-S005	without static bypass			
System Cabling Layouts -1+N Multi-Module, Dual-Input Layouts				
ES1-02-S003	with static bypass and two-breaker paralleling cabinet			
ES1-02-S004	with static bypass, two-breaker paralleling cabinet, and back-feed disconnect			
System Cabling Layouts - Control Cabling Layouts				
ES1-19-S002	Control wiring			
ES1-19-S003	DC source cable layout - UPS with matching battery cabinets			
ES1-19-S004	DC source cable layout - UPS with third-party battery cabinets			
ES1-19-S005	DC source cable layout - UPS with third-party maintenance-bypass-distribution and battery cabinets			
ES1-19-S007	Maintenance bypass cabinet with single module			
ES1-19-S024	System controls, distributed static switch (1+N) multi-module and paralleling cabinet			

Appendices 59

- ALL DIMENSIONS ARE IN inches [mm].
 2. 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL. 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- 5. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.



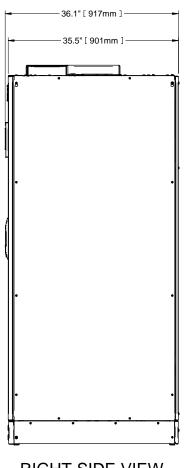


FRONT VIEW RIGHT SIDE VIEW


SHEET NO. DRAWN BY: 1 OF 6 JASON ZHANG ECN NO. DESIGNED BY: ECN NO JASON ZHANG REF DWG. APPROVED BY REF DWG S. MAJOR


OUTLINE DRAWING SMS AND 1+N MULTI-MODULE, 250kVA-400kVA UPS, 480V LIEBERT EXL S1


DWG. NO. ES1-05-S025 DATE (LATEST REV.) 1/29/2019



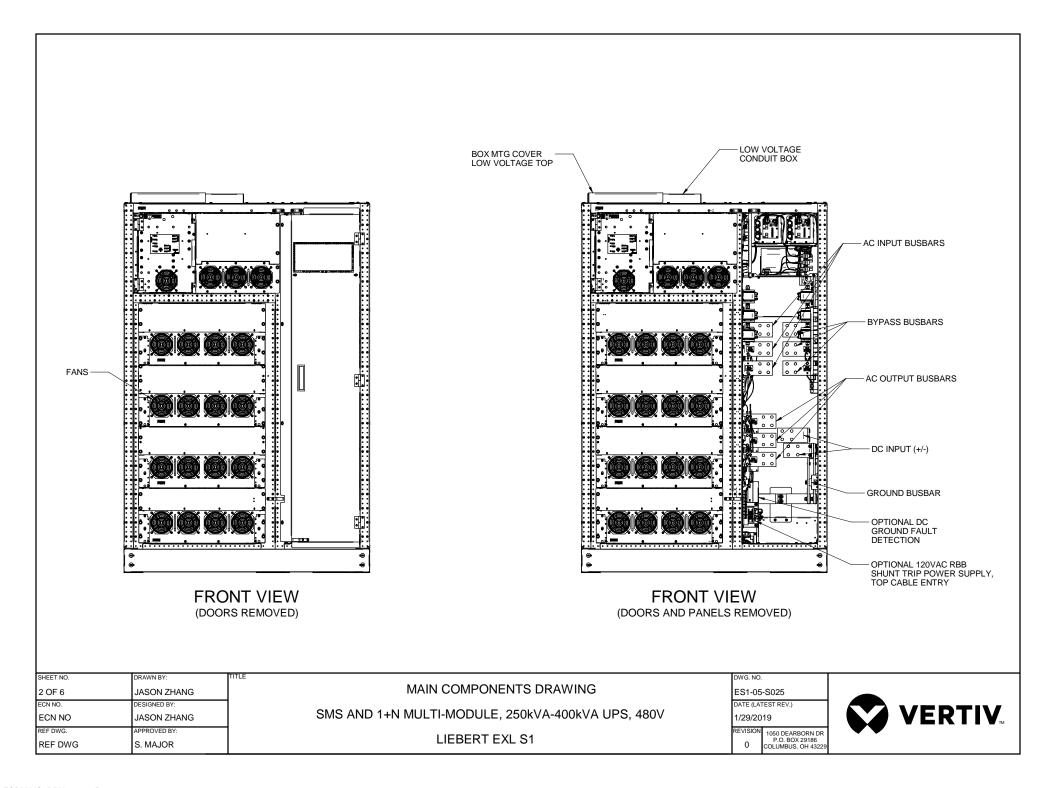

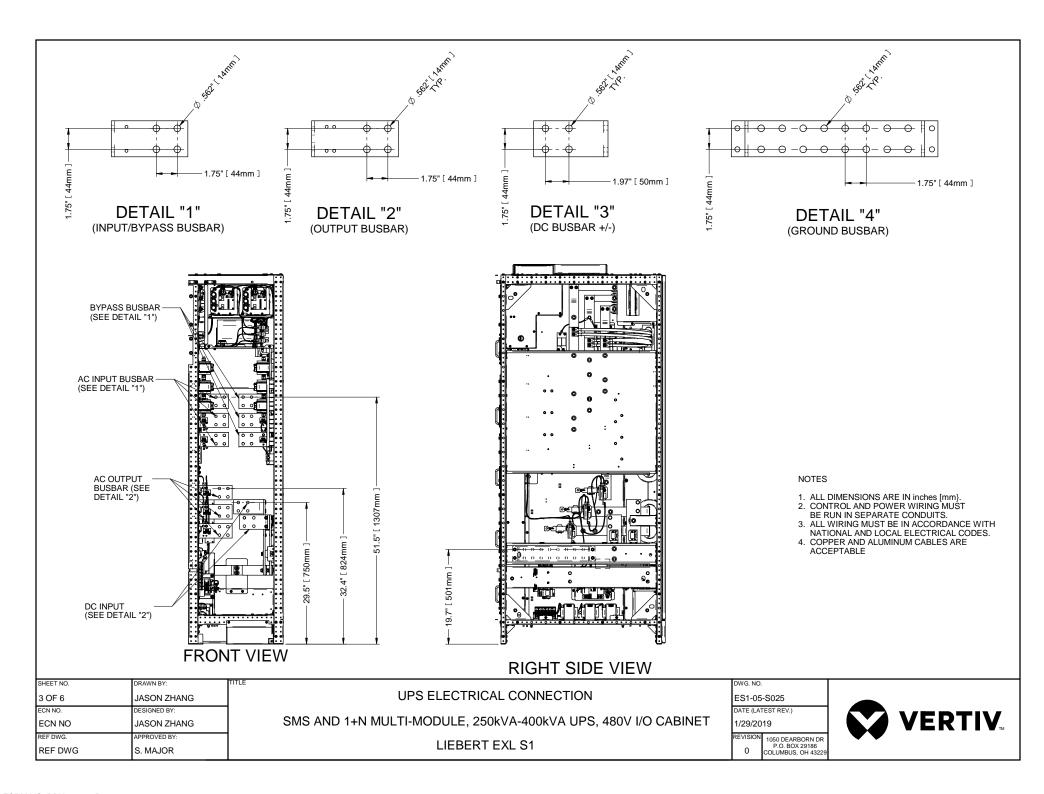

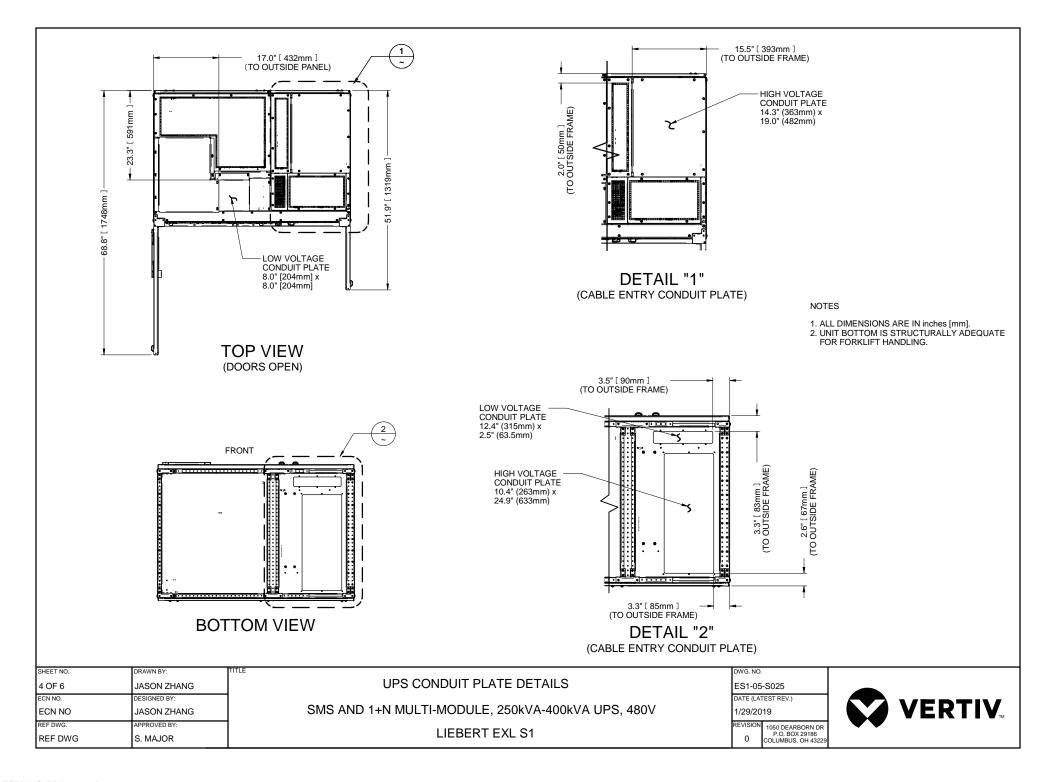


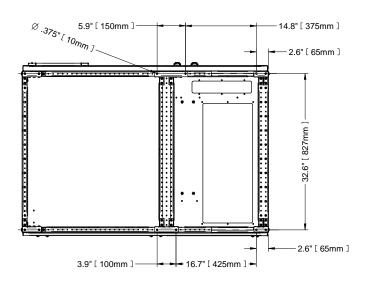


NOTES

- ALL DIMENSIONS ARE IN inches [mm].
 UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

BOTTOM VIEW (BOLT HOLE LAYOUT)

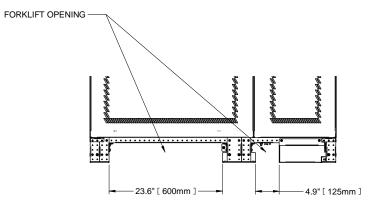

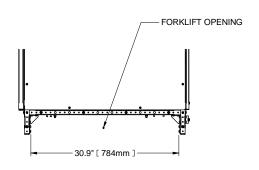


SHEET NO.	DRAWN BY:
5 OF 6	JASON ZHANG
ECN NO.	DESIGNED BY:
ECN NO	JASON ZHANG
REF DWG.	APPROVED BY:
REF DWG	S. MAJOR


UPS BASE DRAWING SMS AND 1+N MULTI-MODULE, 250kVA-400kVA UPS, 480V LIEBERT EXL S1


DWG. NO. ES1-05-S025 DATE (LATEST REV.) 1/29/2019 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229




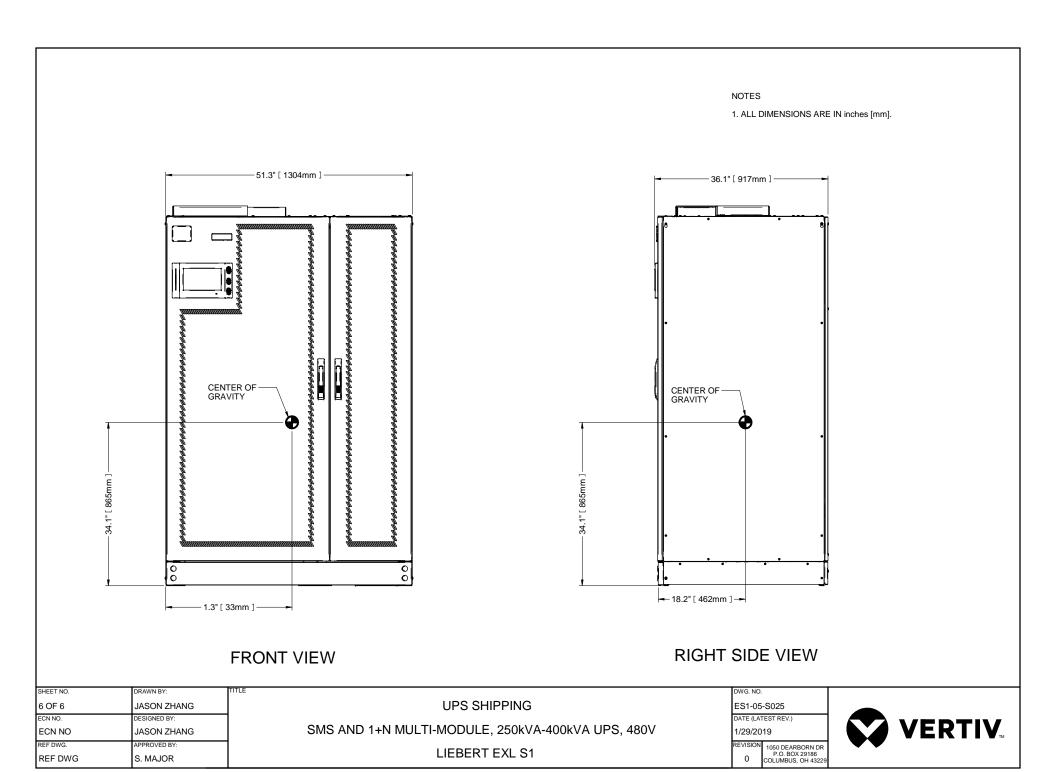


ALL DIMENSIONS ARE IN inches [mm]. 2. 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE. 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL. 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES. 5. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING. 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS. -63.2" [1605mm] (SEE NOTE 6) 36.1" [917mm] -35.5" [901mm] -- 11.9" [303mm] 34.1" [865mm] -| - 17.2" [437mm] - - 77.0" [1957mm] **FRONT VIEW** RIGHT SIDE VIEW SHEET NO. DRAWN BY: DWG. NO. **OUTLINE DRAWING** 1 OF 6 JASON ZHANG ES1-05-S026 ECN NO. DESIGNED BY: DATE (LATEST REV.) **VERTIV**_{TM} SMS AND 1+N MULTI-MODULE, 250kVA-400kVA UPS, 480V, WITH BFD ECN NO JASON ZHANG 1/29/2019 REF DWG. APPROVED BY 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229 LIEBERT EXL S1 REF DWG S. MAJOR

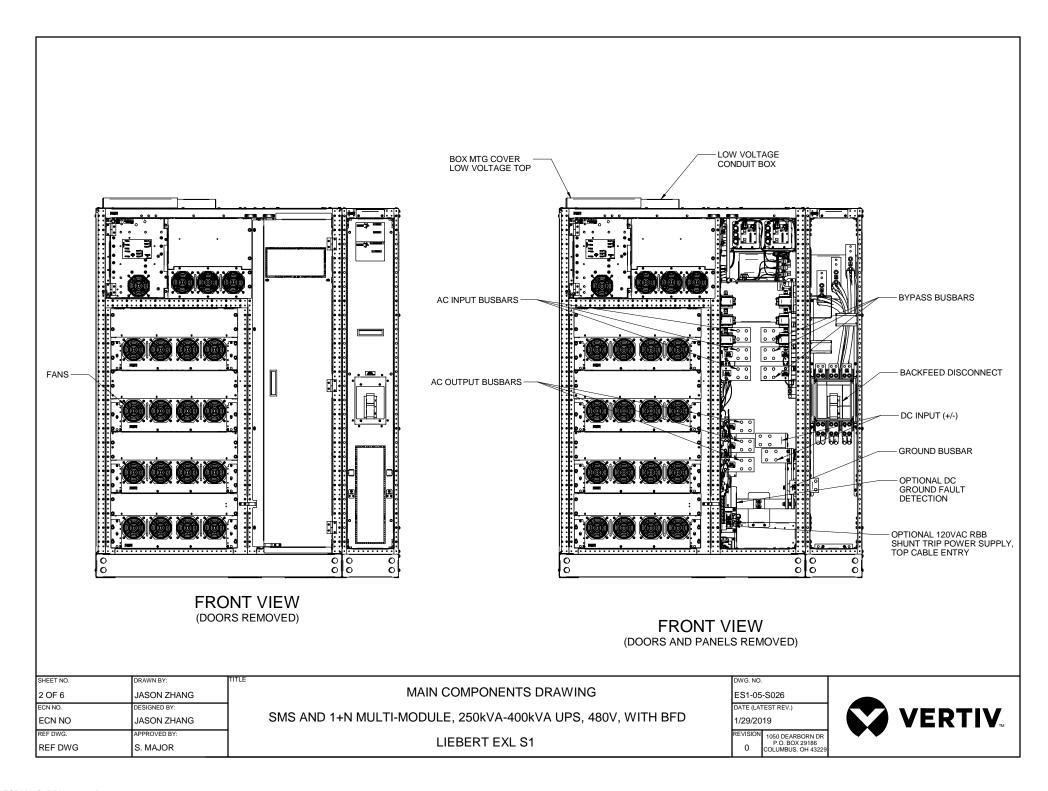

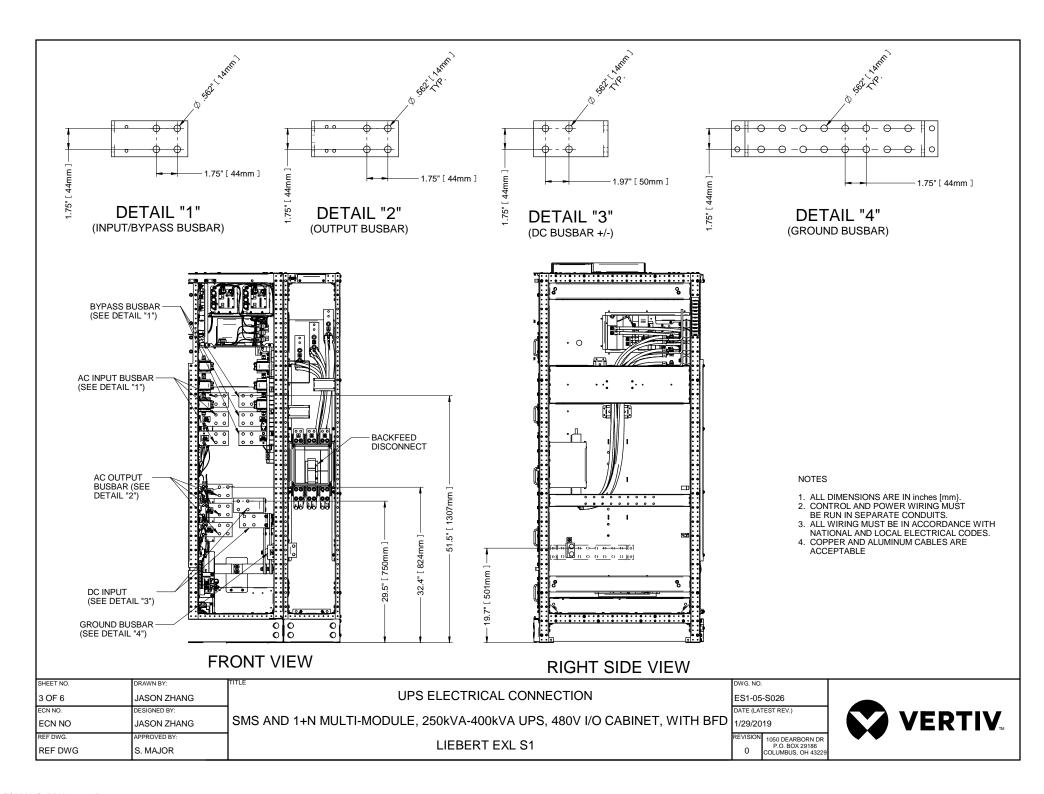


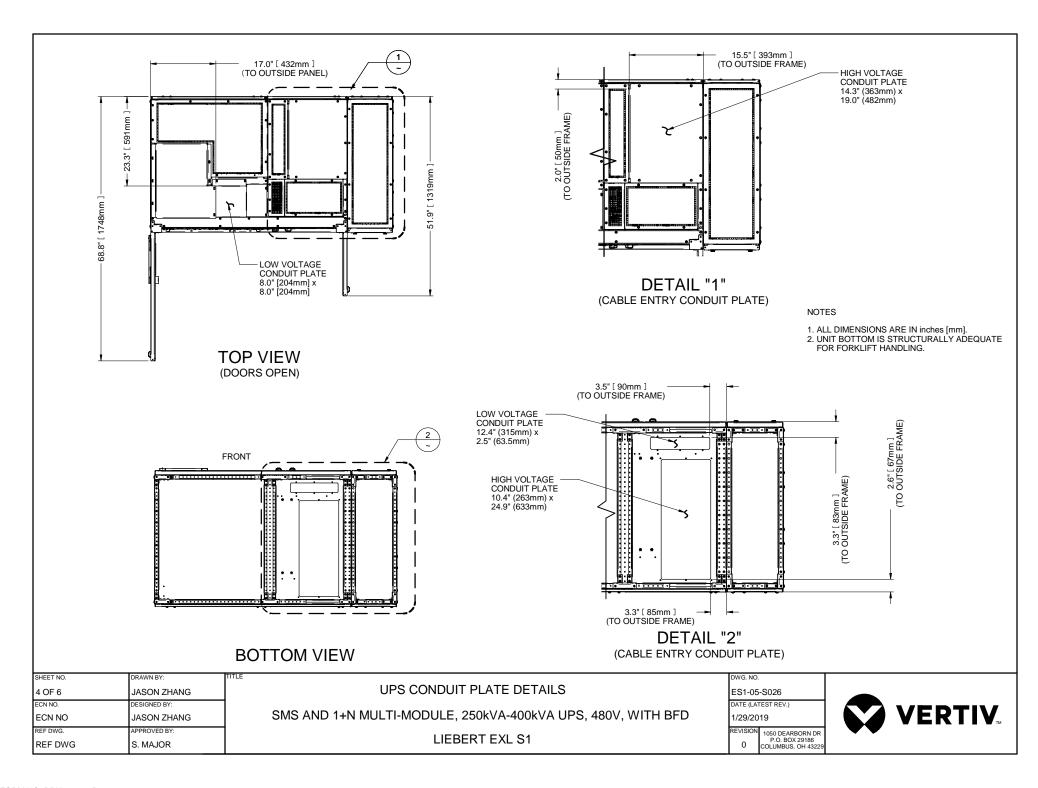


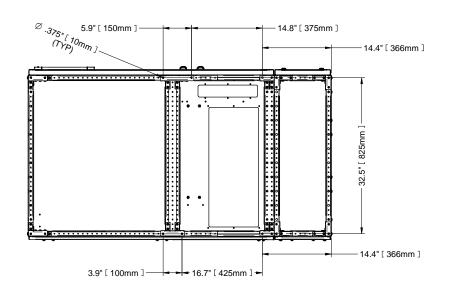

- ALL DIMENSIONS ARE IN inches [mm].
 UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

BOTTOM VIEW (BOLT HOLE LAYOUT)

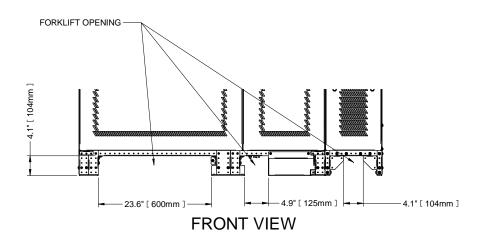

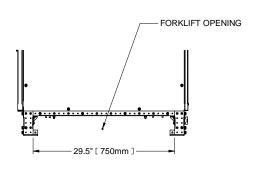

RIGHT SIDE VIEW

	SHEET NO.	DRAWN BY:
	5 OF 6	JASON ZHANG
	ECN NO.	DESIGNED BY:
	ECN NO	JASON ZHANG
	REF DWG.	APPROVED BY:
	REF DWG	S. MAJOR

UPS BASE DRAWING SMS AND 1+N MULTI-MODULE, 250kVA-400kVA UPS, 480V, WITH BFD LIEBERT EXL S1

DWG. NO. ES1-05-S026 DATE (LATEST REV.) 1/29/2019 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



NOTES 1. ALL DIMENSIONS ARE IN inches [mm]. 63.2" [1605mm] -36.1" [917mm] -CENTER OF GRAVITY CENTER OF GRAVITY 000 **→** 18.4" [467mm] → -30.7" [780mm] -RIGHT SIDE VIEW **FRONT VIEW** DRAWN BY: SHEET NO. DWG. NO. **UPS SHIPPING** 6 OF 6 JASON ZHANG ES1-05-S026 ECN NO. DESIGNED BY: DATE (LATEST REV.) **VERTIV**_{TM} SMS AND 1+N MULTI-MODULE, 250kVA-400kVA UPS, 480V, WITH BFD ECN NO 1/29/2019 JASON ZHANG 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229

LIEBERT EXL S1

REF DWG


S. MAJOR


1. ALL DIMENSIONS ARE IN inches [mm]. 2. 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE. 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL. 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES. 5. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING. 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS. -63.2" [1605mm] (SEE NOTE 6) -· 36.1" [917mm] -35.5" [901mm] -- 11.9" [303mm] 34.1" [865mm] --|-- 17.2" [437mm] -- 77.0" **FRONT VIEW** RIGHT SIDE VIEW SHEET NO. DRAWN BY: DWG. NO. **OUTLINE DRAWING** 1 OF 6 JASON ZHANG ES1-05-S027 ECN NO. DESIGNED BY: DATE (LATEST REV.) SMS AND 1+N MULTI-MODULE, 250kVA-400kVA, 480V **VERTIV**_{TM} ECN NO JASON ZHANG 1/29/2019 WITH SHARING INDUCTORS REF DWG. APPROVED BY: 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229


LIEBERT EXL S1


REF DWG

S. MAJOR

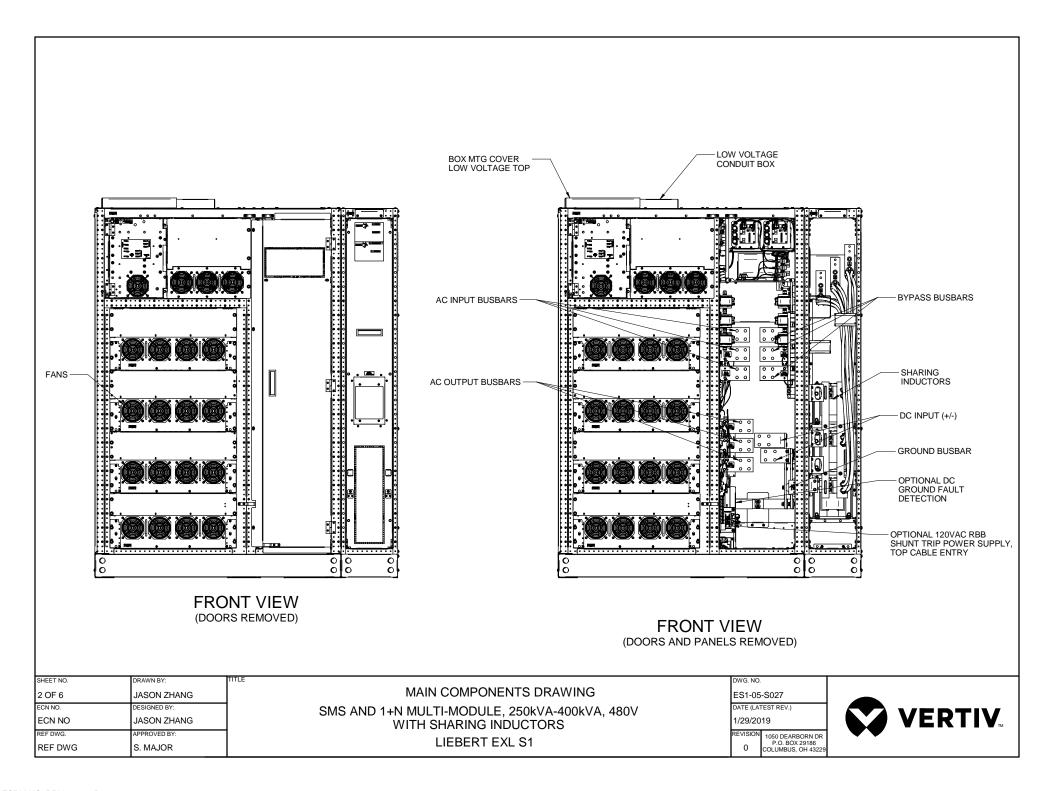


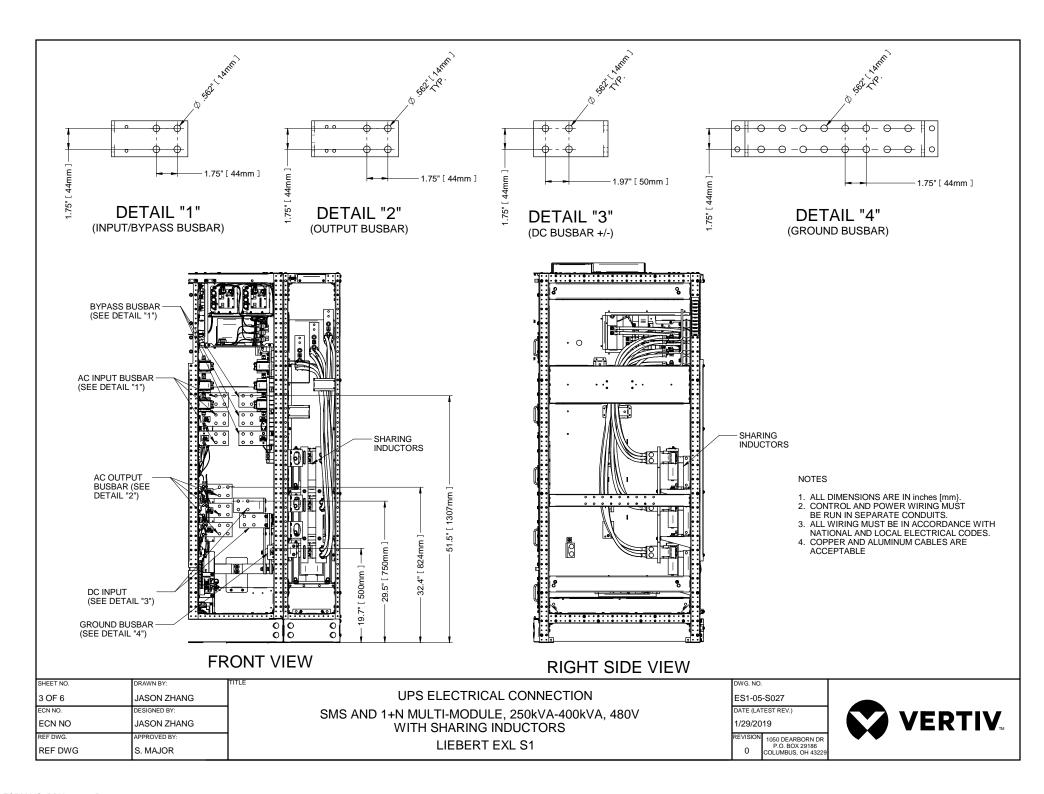

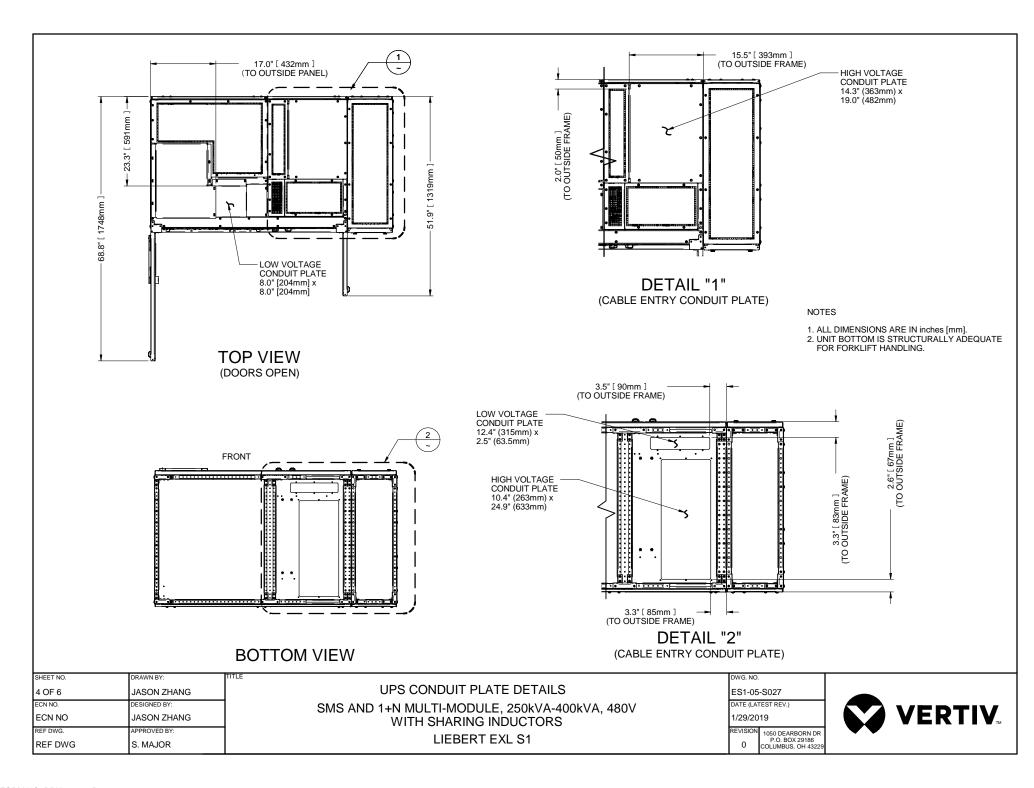


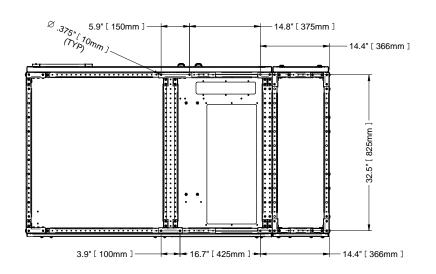

- ALL DIMENSIONS ARE IN inches [mm].
 UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

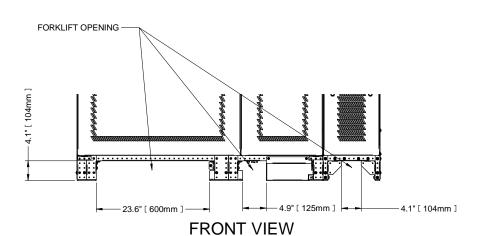

BOTTOM VIEW (BOLT HOLE LAYOUT)

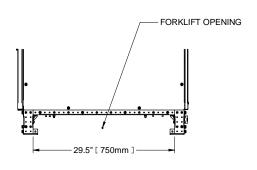

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
5 OF 6	JASON ZHANG
ECN NO.	DESIGNED BY:
ECN NO	JASON ZHANG
REF DWG.	APPROVED BY:
REF DWG	S. MAJOR


UPS BASE DRAWING SMS AND 1+N MULTI-MODULE, 250kVA-400kVA, 480V WITH SHARING INDUCTORS LIEBERT EXL S1


DWG. NO. ES1-05-S027 DATE (LATEST REV.) 1/29/2019 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229





1. ALL DIMENSIONS ARE IN inches [mm].

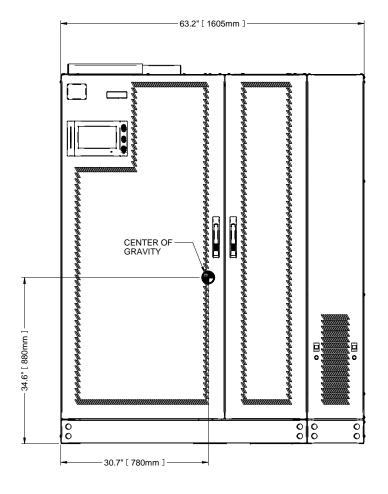

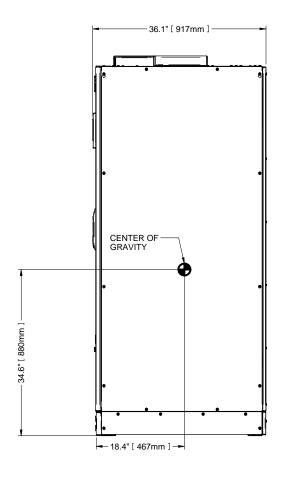

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	
6 OF 6	JASON ZHANG	
ECN NO.	DESIGNED BY:	
ECN NO	JASON ZHANG	
REF DWG.	APPROVED BY:	
REF DWG	S. MAJOR	

UPS SHIPPING SMS AND 1+N MULTI-MODULE, 250kVA-400kVA, 480V WITH SHARING INDUCTORS LIEBERT EXL S1 DWG. NO.

ES1-05-S027

DATE (LATEST REV.)


1/29/2019


REVISION


1050 DEARBORN DR
P.O. BOX 29186


O COLUMBUS, DH 49229




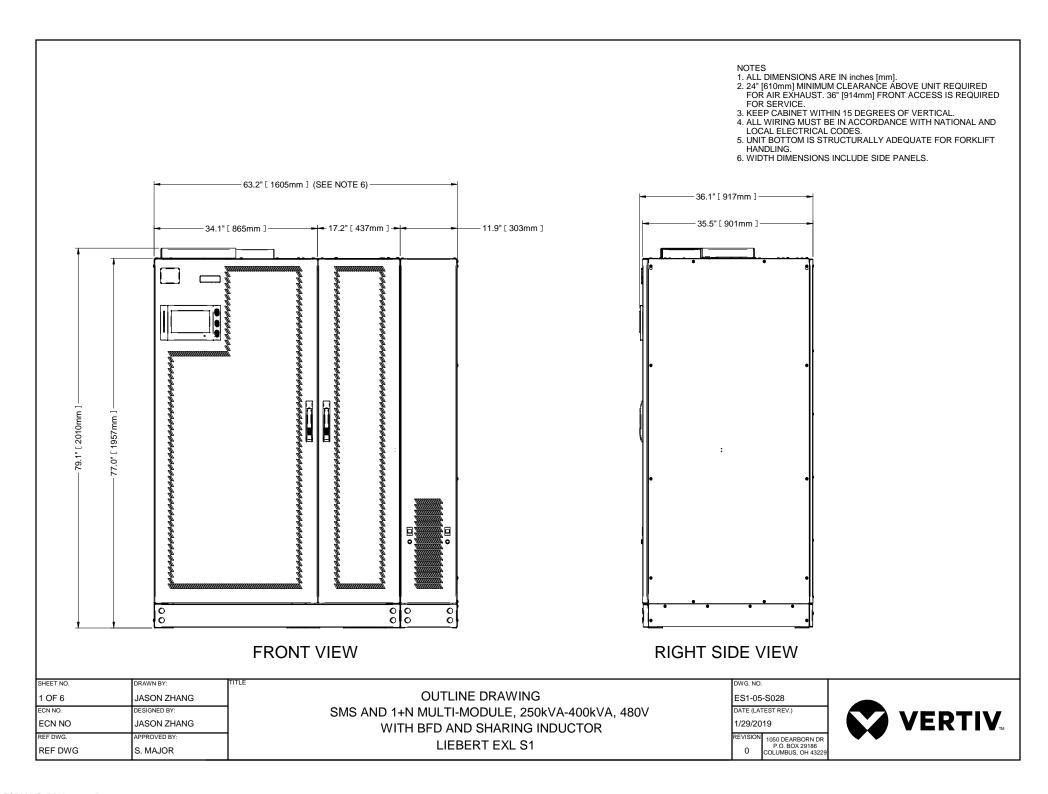

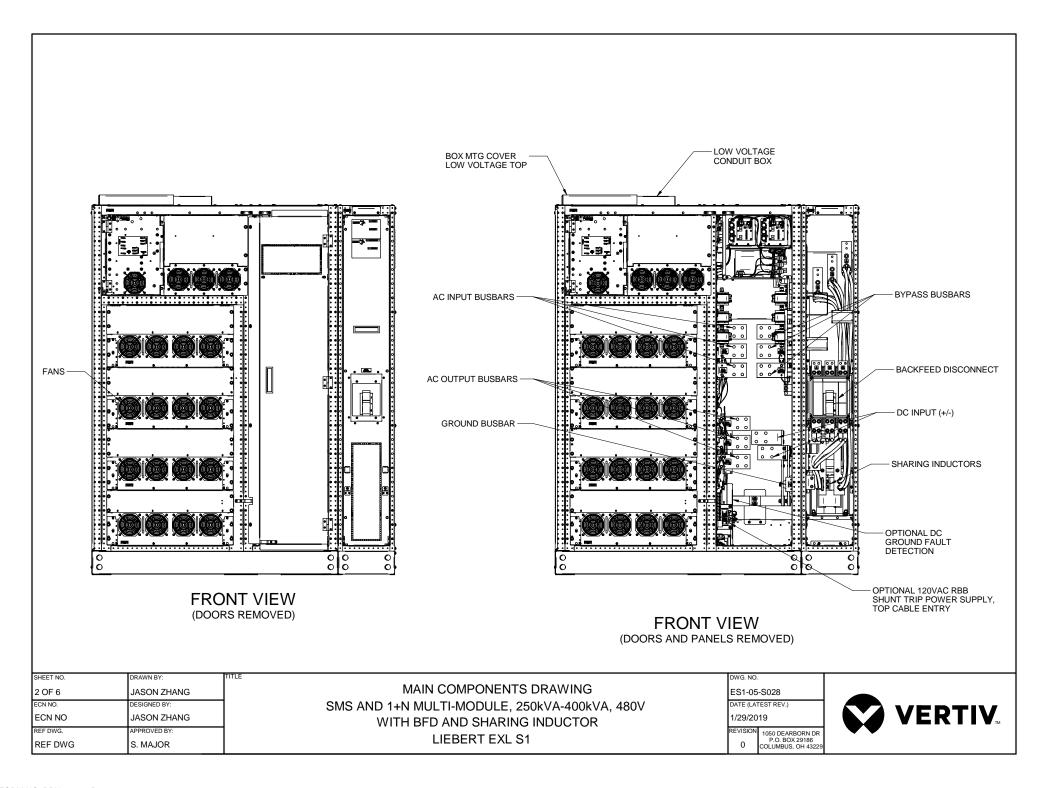

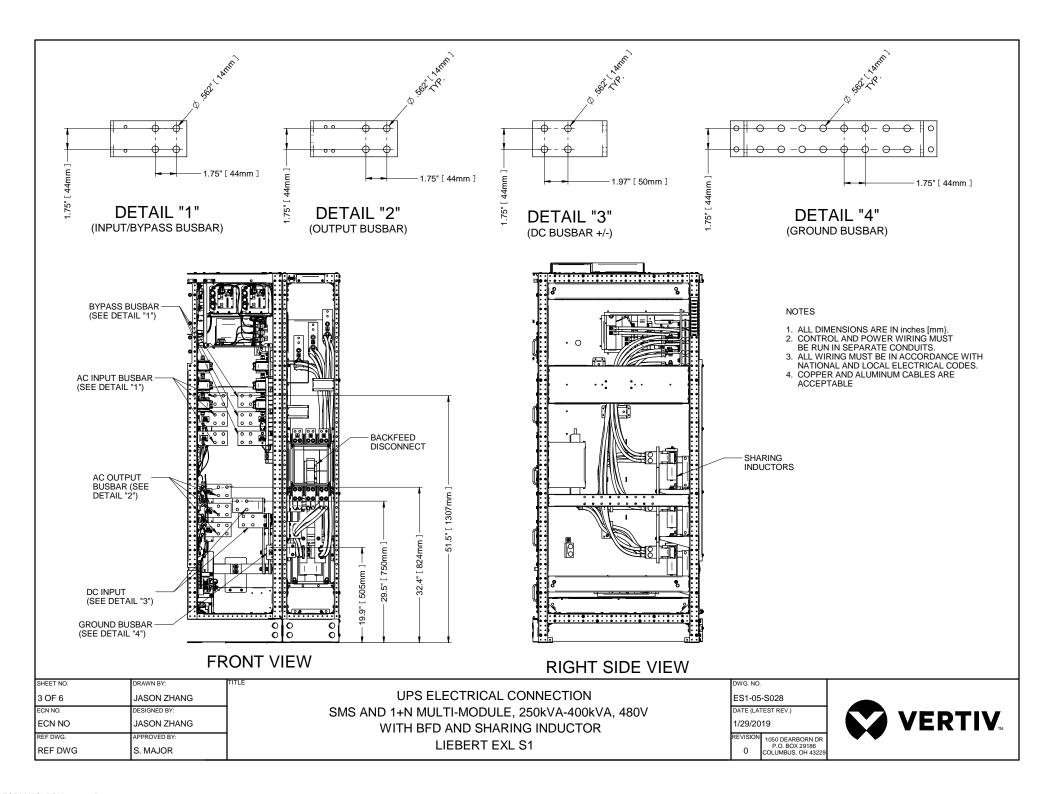


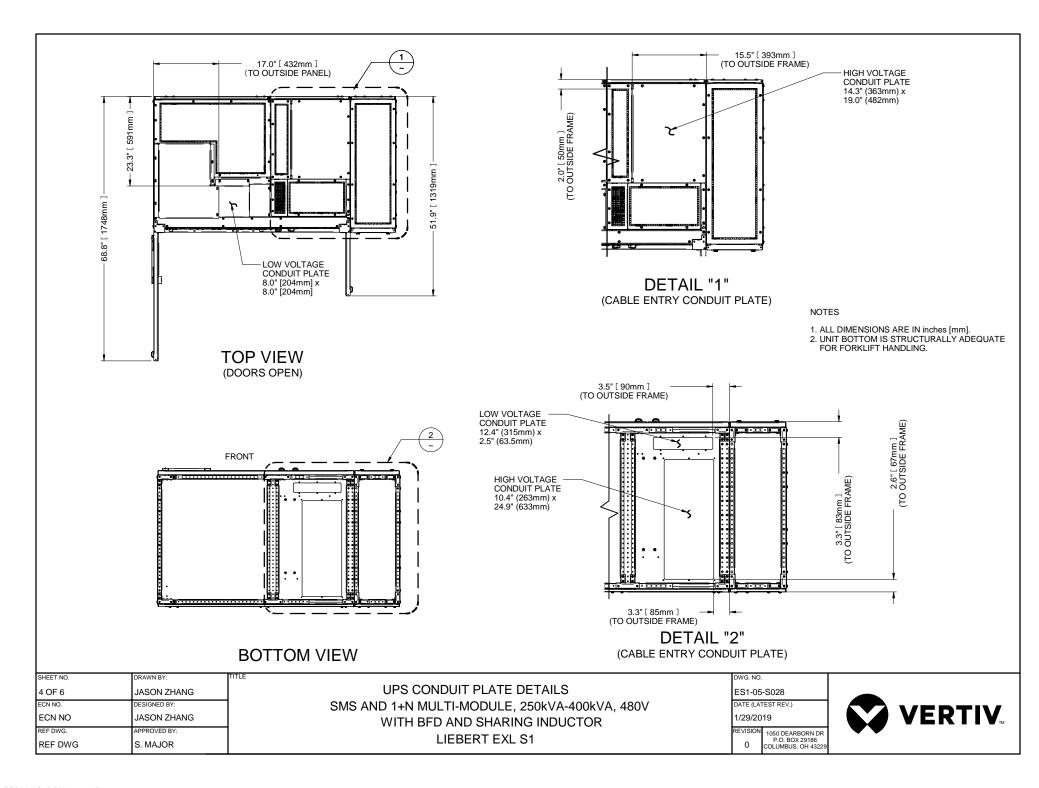


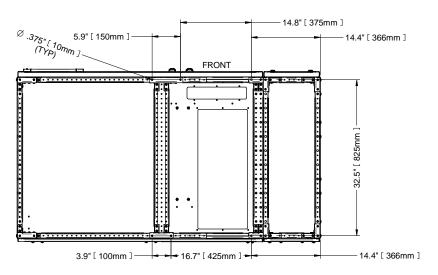

- ALL DIMENSIONS ARE IN inches [mm].
 UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

BOTTOM VIEW (BOLT HOLE LAYOUT)

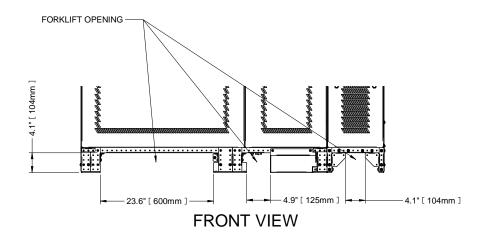

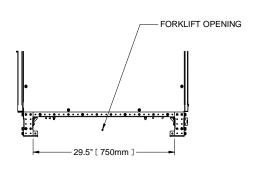

RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:	
5 OF 6	JASON ZHANG	
ECN NO.	DESIGNED BY:	
ECN NO	JASON ZHANG	
REF DWG.	APPROVED BY:	
REF DWG	S. MAJOR	


UPS BASE DRAWING SMS AND 1+N MULTI-MODULE, 250kVA-400kVA, 480V WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1

ES1-05-S028 DATE (LATEST REV.) 1/29/2019 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



1. ALL DIMENSIONS ARE IN inches [mm].

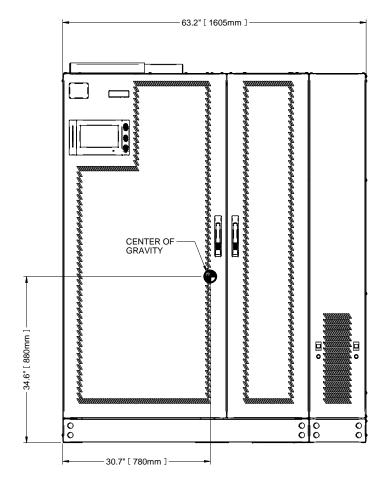

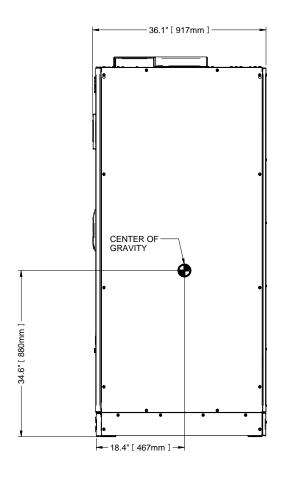

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
6 OF 6	JASON ZHANG
ECN NO.	DESIGNED BY:
ECN NO	JASON ZHANG
REF DWG.	APPROVED BY:
REF DWG	S. MAJOR

UPS SHIPPING SMS AND 1+N MULTI-MODULE, 250kVA-400kVA, 480V WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1 DWG. NO.


ES1-05-S028

DATE (LATEST REV.)


1/29/2019

REVISION
1050 DEARBORN DR
P.O. BOX 29186
0 COLUMBUS, OH 43229



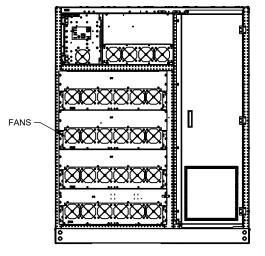

FRONT VIEW (DOORS REMOVED)

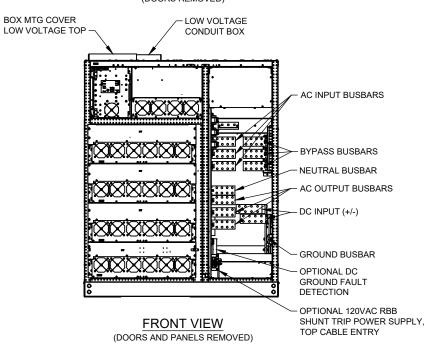


SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE, 400kVA-500kVA UPS, 415V LIEBERT EXL S1 ES1-05-S021


DATE (LATEST REV.)


10/11/2018



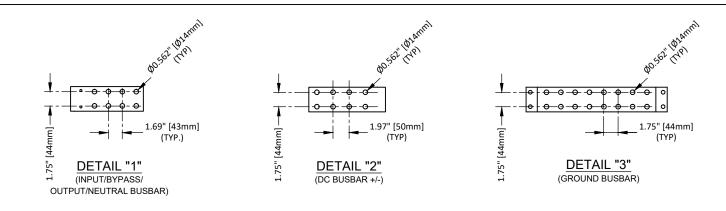

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. CONTROL AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- 4. COPPER AND ALUMINUM CABLES ARE ACCEPTABLE.

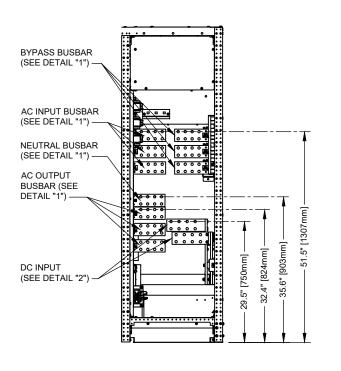

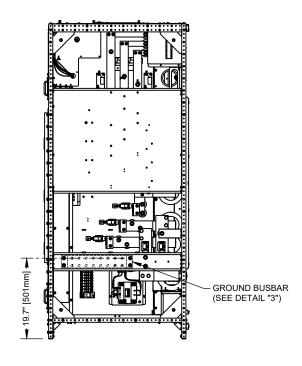

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
3 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS ELECTRICAL CONNECTION
SMS AND 1+N MULTI-MODULE, 400kVA-500kVA UPS, 415V I/O CABINET
LIEBERT EXL S1

ES1-05-S021

DATE (LATEST REV.)


10/11/2018 REVISION 1050 DEARBO



17.0" [433mm] (TO OUTSIDE PANEL) 23.3" [591mm] 60.8" [1544mm] 71.7" [1820mm] LOW VOLTAGE CONDUIT PLATE 8.0" [204mm] x 8.0" [204mm] **TOP VIEW**


(DOORS OPEN)


BOTTOM VIEW

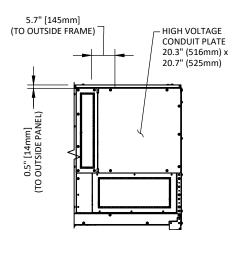

NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

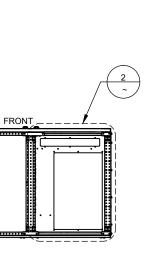

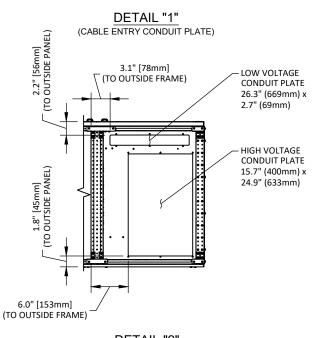

DETAIL "2" (CABLE ENTRY CONDUIT PLATE)


SHEET NO.	DRAWN BY:	TITLE
4 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS CONDUIT PLATE DETAILS SMS AND 1+N MULTI-MODULE, 400kVA-500kVA UPS, 415V LIEBERT EXL S1


ES1-05-S021 DATE (LATEST REV.)

10/11/2018



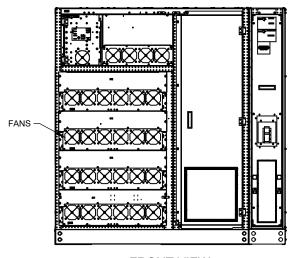

FRONT VIEW (DOORS REMOVED)

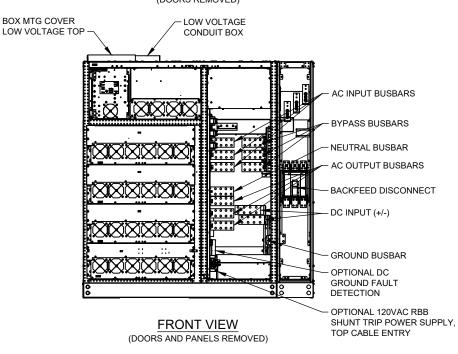


SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE, 400kVA-500kVA, 415V, WITH BFD LIEBERT EXL S1 ES1-05-S022
DATE (LATEST REV.)

11/21/2018



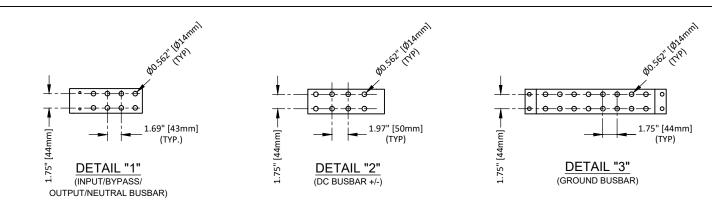

- 1. ALL DIMENSIONS ARE IN inches [mm].
- CONTROL AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- 4. COPPER AND ALUMINUM CABLES ARE ACCEPTABLE.

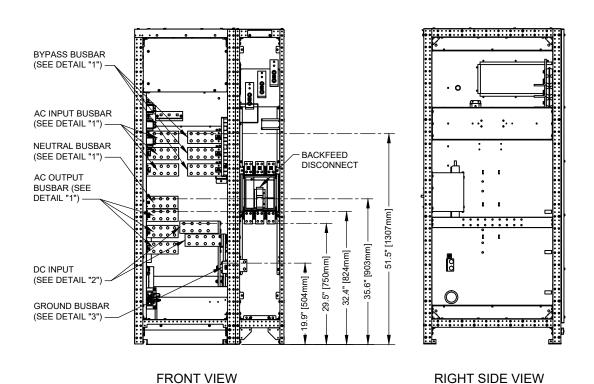

J. SHIPMAN
JESIGNED BY:
S. MAJOR

S. MAJOR

3 OF 6

ECN NO.

REF DWG.

UPS ELECTRICAL CONNECTION
SMS AND 1+N MULTI-MODULE, 400kVA-500kVA, 415V, WITH BFD
LIEBERT EXL S1

DWG. NO.

ES1-05-S022

DATE (LATEST REV.)

11/21/2018

11/21/2018


REVISION | 1050 DEARBORN DR | P.O. BOX 29186 | COLUMBUS, OH 43229



17.0" [433mm] (TO OUTSIDE PANEL) LOW VOLTAGE CONDUIT PLATE 8.0" [204mm] x 8.0" [204mm]


TOP VIEW

(DOORS OPEN)

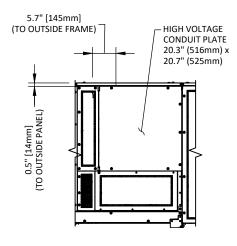


NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

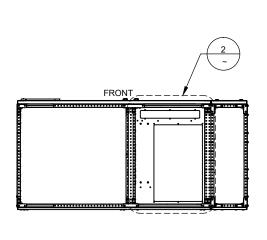

BOTTOM VIEW

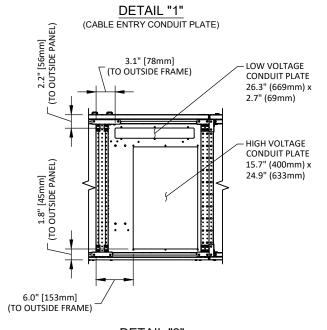


DETAIL "2"
(CABLE ENTRY CONDUIT PLATE)

SHEET NO.	DRAWN BY:	TITLE
4 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


UPS CONDUIT PLATE DETAILS SMS AND 1+N MULTI-MODULE, 400kVA-500kVA, 415V, WITH BFD LIEBERT EXL S1 ES1-05-S022 DATE (LATEST REV.)

11/21/2018



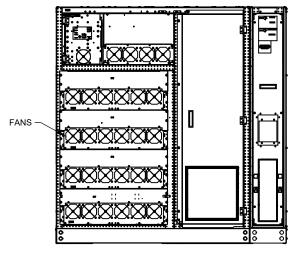

FRONT VIEW (DOORS REMOVED)

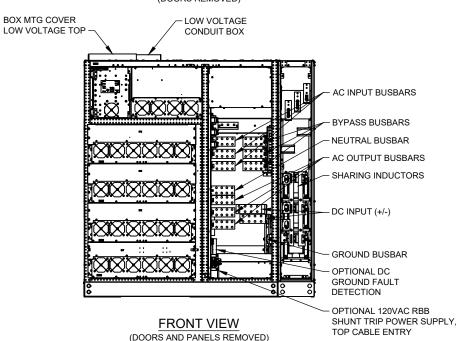


SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE, 400kVA-500kVA, 415V WITH SHARING INDUCTORS LIEBERT EXL S1 ES1-05-S023


11/21/2018



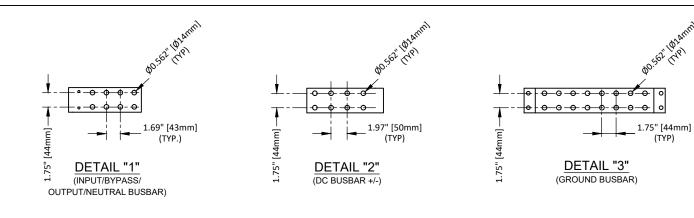

(TYP)

- 1. ALL DIMENSIONS ARE IN inches [mm].
- CONTROL AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- COPPER AND ALUMINUM CABLES ARE ACCEPTABLE.

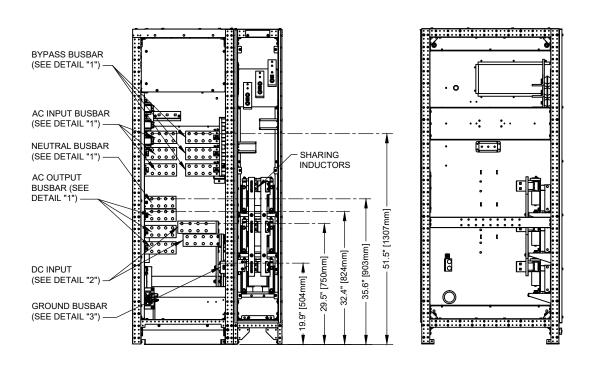

SHEET NO.	DRAWN BY:	TITLE
3 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REE DWG	APPROVED BY:	

S. MAJOR

FRONT VIEW

UPS ELECTRICAL CONNECTION SMS AND 1+N MULTI-MODULE, 400kVA-500kVA, 415V WITH SHARING INDUCTORS LIEBERT EXL S1

RIGHT SIDE VIEW

ES1-05-S023 DATE (LATEST REV.)

11/21/2018


1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



17.0" [433mm] (TO OUTSIDE PANEL) LOW VOLTAGE CONDUIT PLATE 8.0" [204mm] x 8.0" [204mm]


TOP VIEW

(DOORS OPEN)

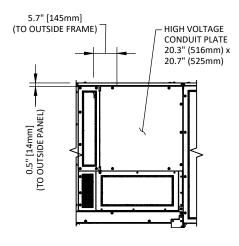


NOTES

- . ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

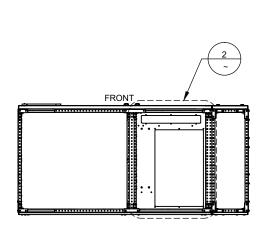

BOTTOM VIEW

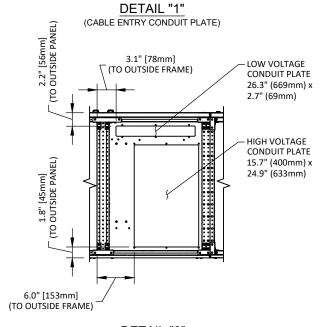

DETAIL "2"
(CABLE ENTRY CONDUIT PLATE)


| DRAWN BY: | J. SHIPMAN | SHIPMAN | DESIGNED BY: | S. MAJOR | S.

UPS CONDUIT PLATE DETAILS
SMS AND 1+N MULTI-MODULE, 400kVA-500kVA, 415V
WITH SHARING INDUCTORS
LIEBERT EXL S1


ES1-05-S023

11/21/2018



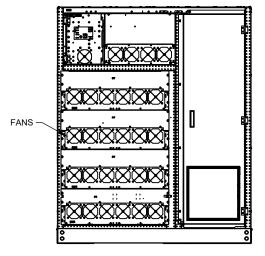

FRONT VIEW (DOORS REMOVED)

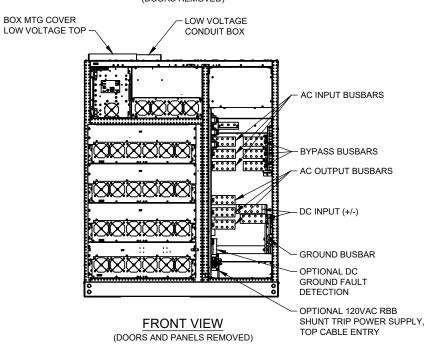


SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA UPS, 480V LIEBERT EXL S1 DATE (LATEST REV.)


09/21/2018



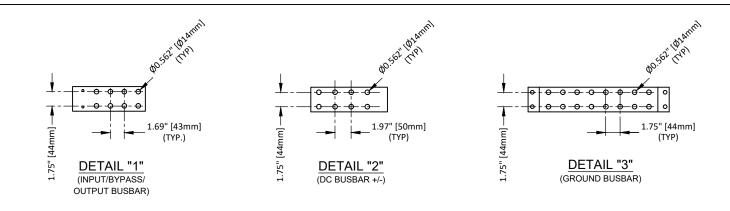

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. CONTROL AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- COPPER AND ALUMINUM CABLES ARE ACCEPTABLE.

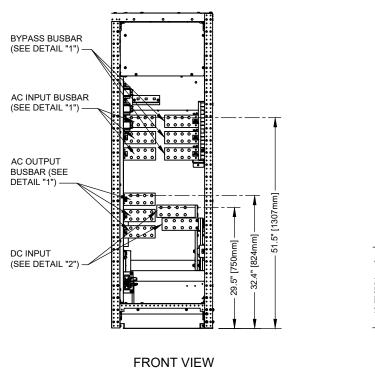

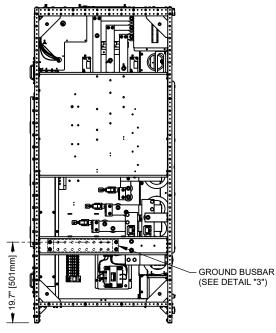

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
3 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS ELECTRICAL CONNECTION SMS AND 1+N MULTI-MODULE, 500kVA-600kVA UPS, 480V I/O CABINET LIEBERT EXL S1


ES1-05-S017 DATE (LATEST REV.)

09/21/2018

VERTIV_m 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229


17.0" [433mm] (TO OUTSIDE PANEL) 23.3" [591mm] 60.8" [1544mm] 71.7" [1820mm] LOW VOLTAGE CONDUIT PLATE 8.0" [204mm] x 8.0" [204mm] **TOP VIEW**

(DOORS OPEN)

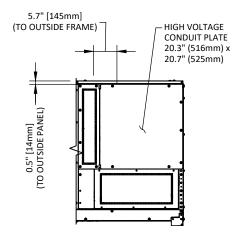


NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

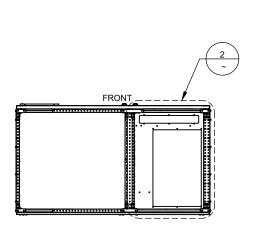

BOTTOM VIEW

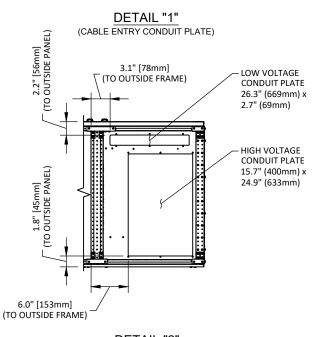

DETAIL "2" (CABLE ENTRY CONDUIT PLATE)

SHEET NO.	DRAWN BY:	TITLE
4 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


UPS CONDUIT PLATE DETAILS SMS AND 1+N MULTI-MODULE, 500kVA-600kVA UPS, 480V LIEBERT EXL S1


ES1-05-S017 DATE (LATEST REV.)

09/21/2018



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

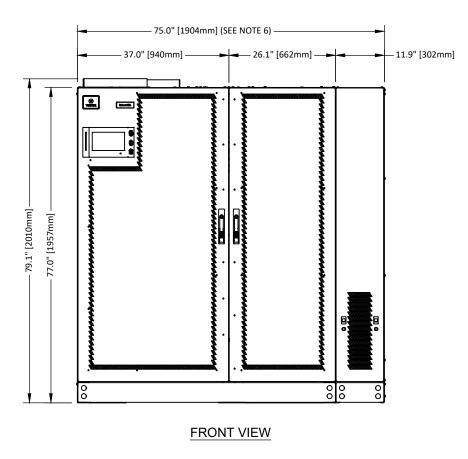

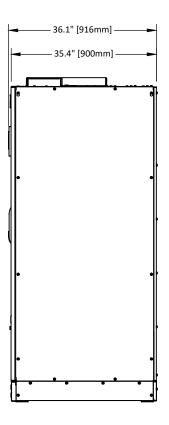

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


OUTLINE DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V, WITH BFD LIEBERT EXL S1 DWG. NO.

ES1-05-S018


DATE (LATEST REV.)

11/21/2018



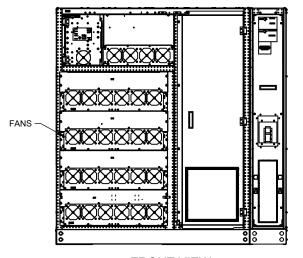

FRONT VIEW (DOORS REMOVED)

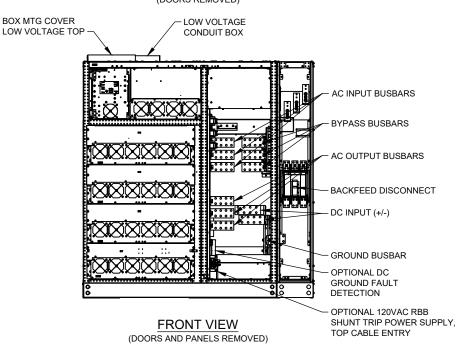

SHEET NO.	DRAWN BY:	
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


TITLE

MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V, WITH BFD LIEBERT EXL S1


ES1-05-S018 DATE (LATEST REV.)


11/21/2018



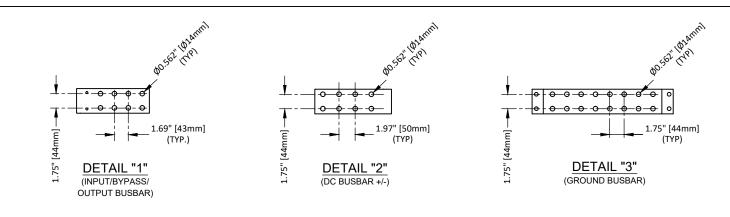

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. CONTROL AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- 4. COPPER AND ALUMINUM CABLES ARE ACCEPTABLE.

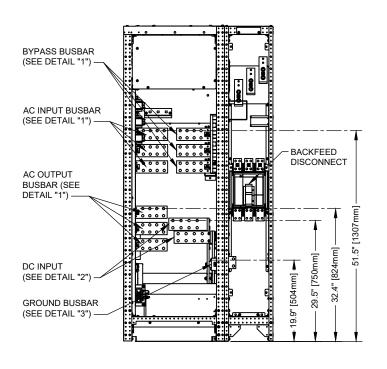

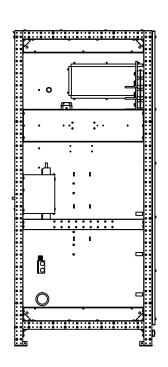

FRONT VIEW

TITLE

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	
3 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS ELECTRICAL CONNECTION
SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V, WITH BFD
LIEBERT EXL S1

DWG. NO.

ES1-05-S018

DATE (LATEST REV.)


11/21/2018



17.0" [433mm] (TO OUTSIDE PANEL) 23.3" [591mm] 71.7" [1820mm] LOW VOLTAGE CONDUIT PLATE 8.0" [204mm] x 8.0" [204mm]

TOP VIEW

(DOORS OPEN)

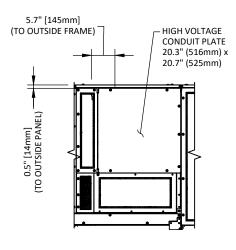

DETAIL "1" (CABLE ENTRY CONDUIT PLATE) 2.2" [56mm] (TO OUTSIDE PANEL) 3.1" [78mm] - LOW VOLTAGE (TO OUTSIDE FRAME) CONDUIT PLATE 26.3" (669mm) x 2.7" (69mm) HIGH VOLTAGE **CONDUIT PLATE** 1.8" [45mm] (TO OUTSIDE PANEL) 15.7" (400mm) x 24.9" (633mm) 6.0" [153mm] (TO OUTSIDE FRAME)

FRONT

BOTTOM VIEW

DETAIL "2" (CABLE ENTRY CONDUIT PLATE)

SHEET NO.	DRAWN BY:	TITLE
4 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS CONDUIT PLATE DETAILS SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V, WITH BFD LIEBERT EXL S1

ES1-05-S018 DATE (LATEST REV.)

NOTES

1. ALL DIMENSIONS ARE IN inches [mm].


FOR FORKLIFT HANDLING.

UNIT BOTTOM IS STRUCTURALLY ADEQUATE


11/21/2018




- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

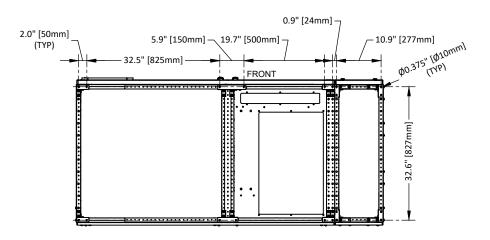

BOTTOM VIEW (BOLT HOLE LAYOUT)

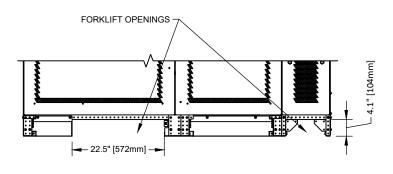

FRONT VIEW

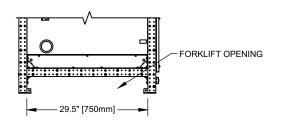

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	
5 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


UPS BASE DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V, WITH BFD LIEBERT EXL S1


ES1-05-S018 DATE (LATEST REV.)

11/21/2018



1. ALL DIMENSIONS ARE IN inches [mm].

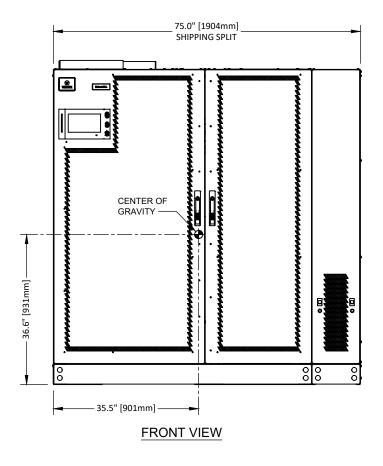

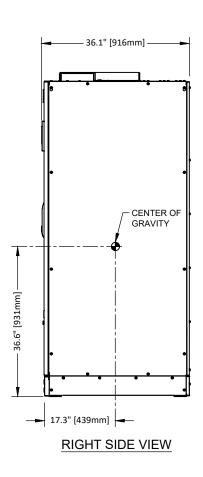


SHEET NO.	DRAWN BY:
6 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


UPS SHIPPING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V, WITH BFD LIEBERT EXL S1

DWG. NO.
ES1-05-S018
DATE (LATEST REV.)
11/21/2018
REVISION 1050 DEARBORN DR



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

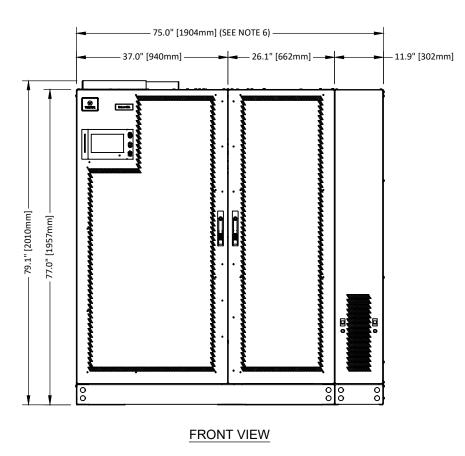

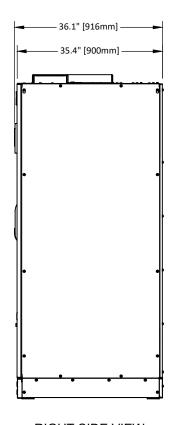

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	Т
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


OUTLINE DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V WITH SHARING INDUCTORS LIEBERT EXL S1 DWG. NO.

ES1-05-S019


DATE (LATEST REV.)

11/21/2018



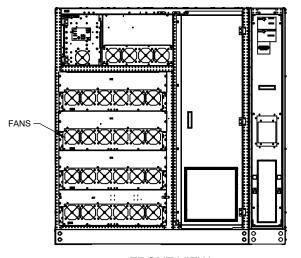

FRONT VIEW (DOORS REMOVED)

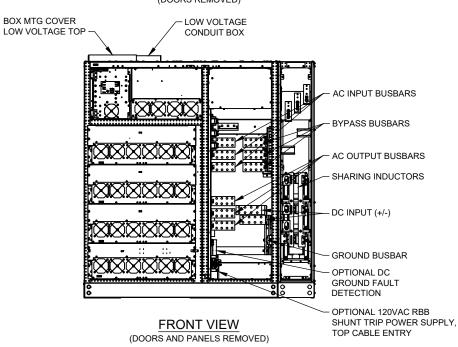


SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V WITH SHARING INDUCTORS LIEBERT EXL S1


ES1-05-S019 DATE (LATEST REV.)


11/21/2018



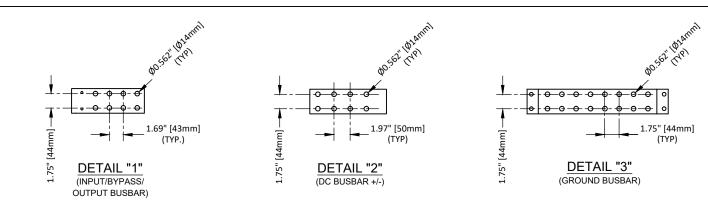

- 1. ALL DIMENSIONS ARE IN inches [mm].
- CONTROL AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- COPPER AND ALUMINUM CABLES ARE ACCEPTABLE.

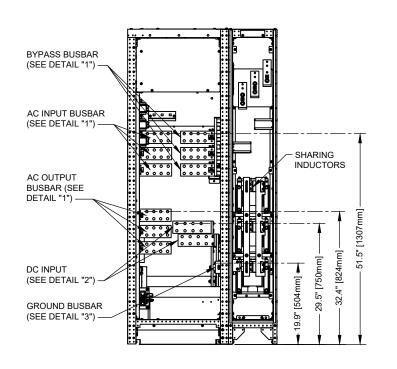

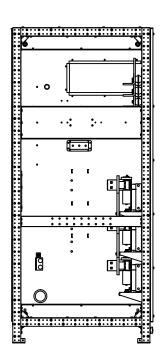

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
3 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS ELECTRICAL CONNECTION SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V WITH SHARING INDUCTORS LIEBERT EXL S1

ES1-05-S019 DATE (LATEST REV.)

11/21/2018 1050 DEARBORN DR






17.0" [433mm] (TO OUTSIDE PANEL) LOW VOLTAGE CONDUIT PLATE 8.0" [204mm] x 8.0" [204mm]

TOP VIEW

(DOORS OPEN)

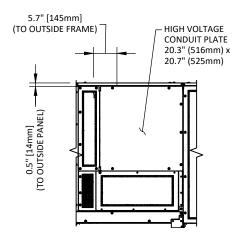

DETAIL "1" (CABLE ENTRY CONDUIT PLATE) 3.1" [78mm] (TO OUTSIDE FRAME) CONDUIT PLATE 26.3" (669mm) x 2.7" (69mm) HIGH VOLTAGE CONDUIT PLATE 15.7" (400mm) x 24.9" (633mm)

FRONT _____

BOTTOM VIEW

DETAIL "2"
(CABLE ENTRY CONDUIT PLATE)

SHEET NO.	DRAWN BY:
4 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS CONDUIT PLATE DETAILS
SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V
WITH SHARING INDUCTORS
LIEBERT EXL S1

(TO OUTSIDE FRAME)

ES1-05-S019
DATE (LATEST REV.)

NOTES

1. ALL DIMENSIONS ARE IN inches [mm].


FOR FORKLIFT HANDLING.

UNIT BOTTOM IS STRUCTURALLY ADEQUATE


11/21/2018




- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

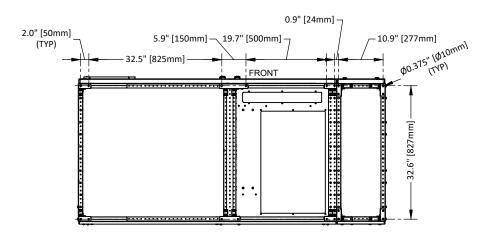

BOTTOM VIEW (BOLT HOLE LAYOUT)

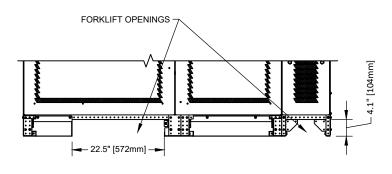

FRONT VIEW

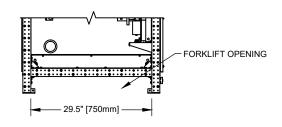

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


UPS BASE DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V WITH SHARING INDUCTORS LIEBERT EXL S1


ES1-05-S019 DATE (LATEST REV.)

11/21/2018



1. ALL DIMENSIONS ARE IN inches [mm].

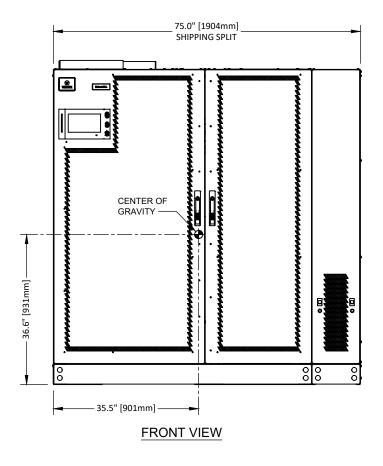

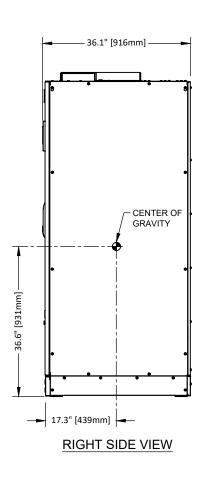

SHEET NO.	DRAWN BY:	TITLE
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS SHIPPING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V WITH SHARING INDUCTORS LIEBERT EXL S1 DWG. NO.

ES1-05-S019

DATE (LATEST REV.)


11/21/2018


REVISION 1050 DEARBORN DR P.O. BOX 29186

O COLUMBUS, 0H 43229



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

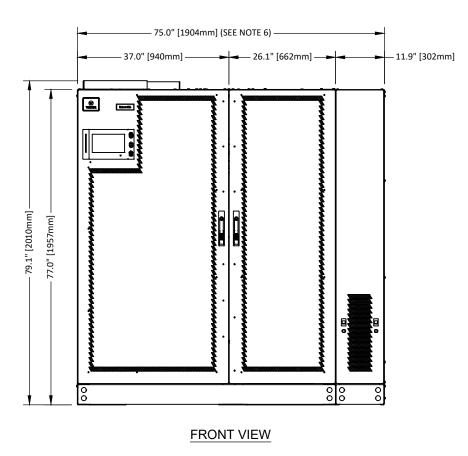

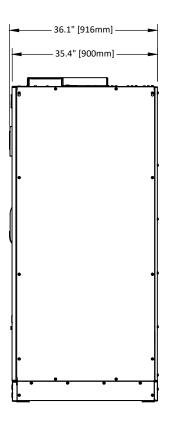

RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:	٦
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

OUTLINE DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1


ES1-05-S020 DATE (LATEST REV.)

11/21/2018



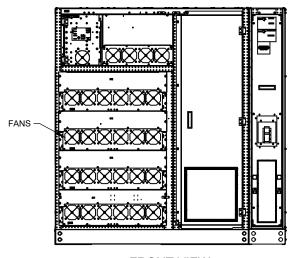

$\frac{\text{FRONT VIEW}}{\text{(DOORS REMOVED)}}$

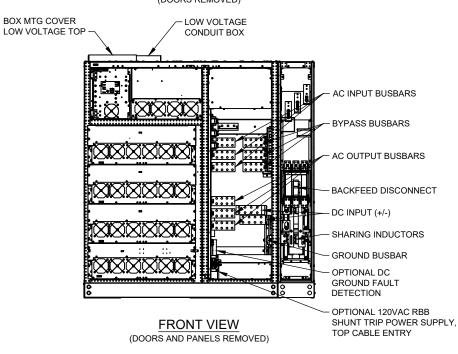


SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1 ES1-05-S020 DATE (LATEST REV.)


11/21/2018



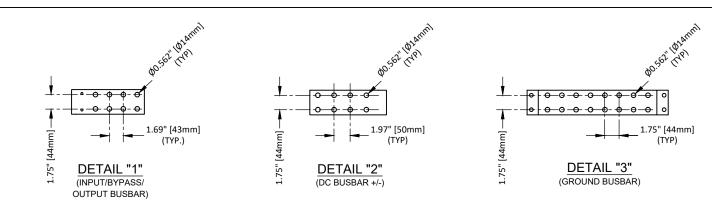

- 1. ALL DIMENSIONS ARE IN inches [mm].
- CONTROL AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- 4. COPPER AND ALUMINUM CABLES ARE ACCEPTABLE.

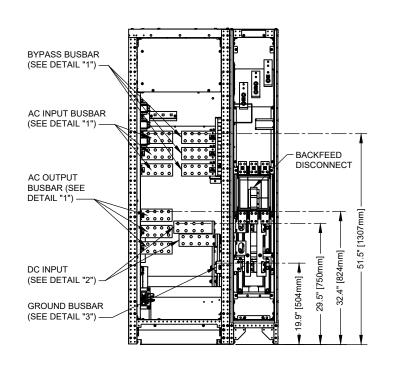

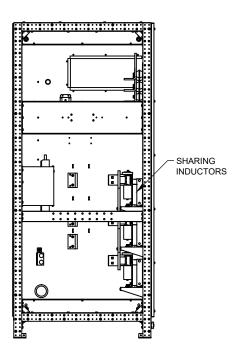

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
3 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS ELECTRICAL CONNECTION
SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V
WITH BFD AND SHARING INDUCTOR
LIEBERT EXL S1

ES1-05-S020
DATE (LATEST REV.)
11/21/2018

11/21/2018

REVISION | 1050 DEARBORN DR P.O. BOX 29186 | COLUMBUS, OH 43229




VERTIV_{TM}

17.0" [433mm] (TO OUTSIDE PANEL) LOW VOLTAGE CONDUIT PLATE 8.0" [204mm] x 8.0" [204mm]


TOP VIEW

(DOORS OPEN)

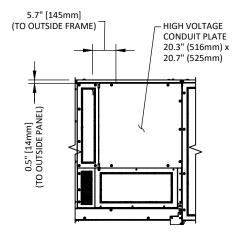


NOTES

- . ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

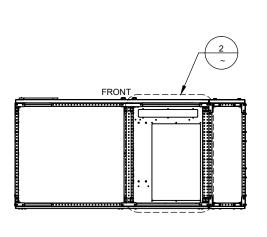

BOTTOM VIEW

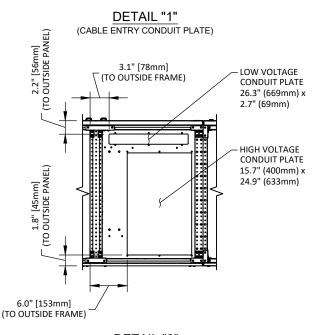

DETAIL "2"
(CABLE ENTRY CONDUIT PLATE)

SHEET NO.

4 OF 6

ECN NO.

DESIGNED BY:

S. MAJOR

REF DWG.

APPROVED BY:

S. MAJOR


UPS CONDUIT PLATE DETAILS
SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V
WITH BFD AND SHARING INDUCTOR
LIEBERT EXL S1

ES1-05-S020 DATE (LATEST REV.)


11/21/2018




- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

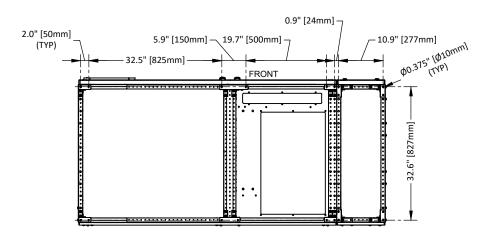

BOTTOM VIEW (BOLT HOLE LAYOUT)

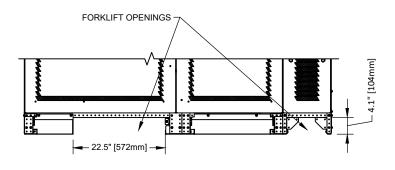

FRONT VIEW

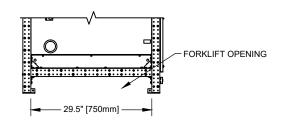


RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS BASE DRAWING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1 ES1-05-S020
DATE (LATEST REV.)
11/21/2018



1. ALL DIMENSIONS ARE IN inches [mm].

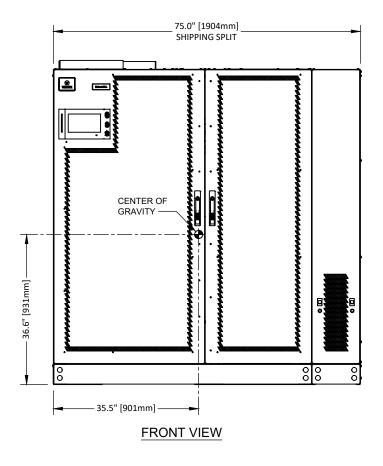

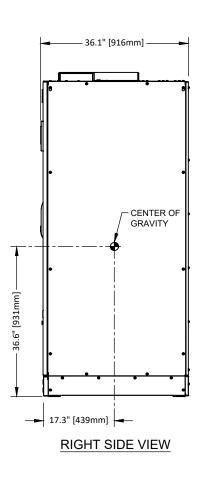

SHEET NO.	DRAWN BY:	٦
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


UPS SHIPPING SMS AND 1+N MULTI-MODULE, 500kVA-600kVA, 480V WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1 DWG. NO.

ES1-05-S020


DATE (LATEST REV.)



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

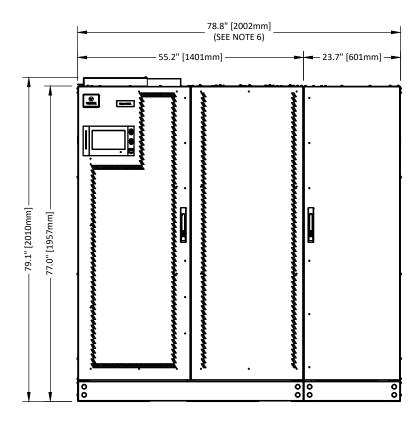

FRONT VIEW

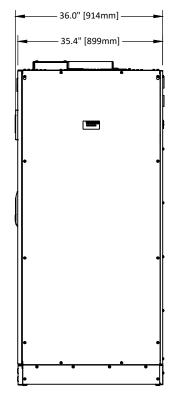


RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:
1 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

OUTLINE DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA LIEBERT EXL S1 ES1-05-S009
DATE (LATEST REV.)
03/27/2018



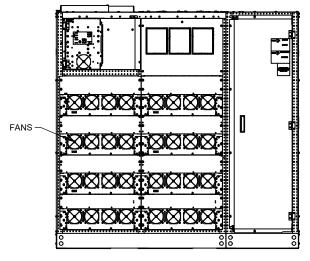

FRONT VIEW

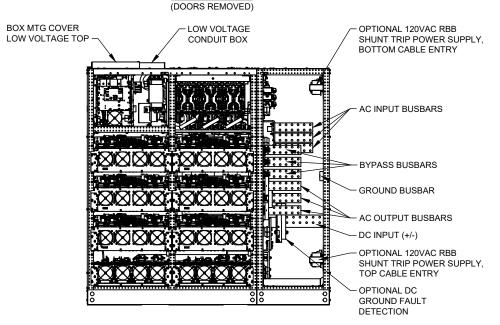


FRONT VIEW (DOORS AND PANELS REMOVED)

SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA LIEBERT EXL S1 ES1-05-S009
DATE (LATEST REV.)

03/27/2018



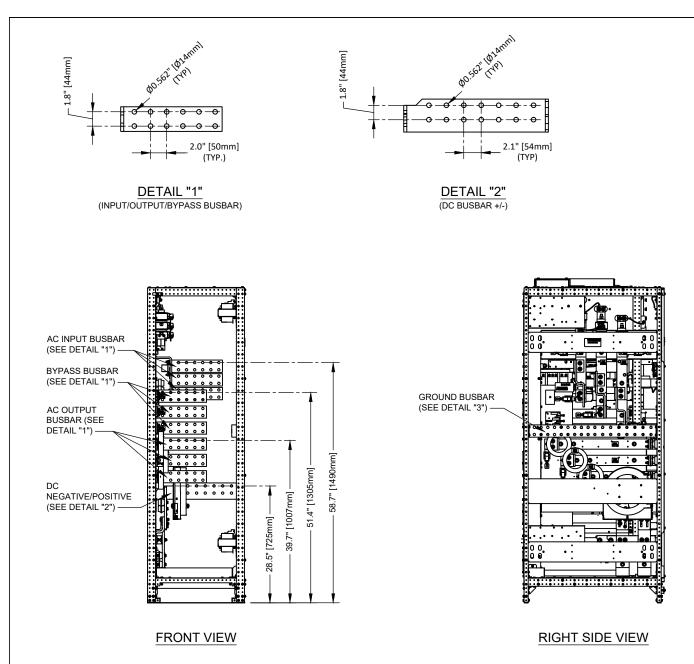

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. CONTROL AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- 4. COPPER AND ALUMINUM CABLES ARE ACCEPTABLE.

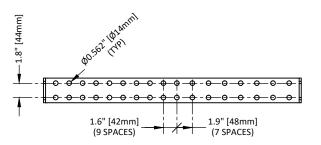

DETAIL "3"
(GROUND BUSBAR)

SHEET NO.	DRAWN BY:	TITLE
3 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS ELECTRICAL CONNECTION
SMS AND 1+N MULTI-MODULE I/O CABINET
625kVA-800kVA
LIEBERT EXL S1


DWG. NO.

ES1-05-S009

DATE (LATEST REV.)

03/27/2018




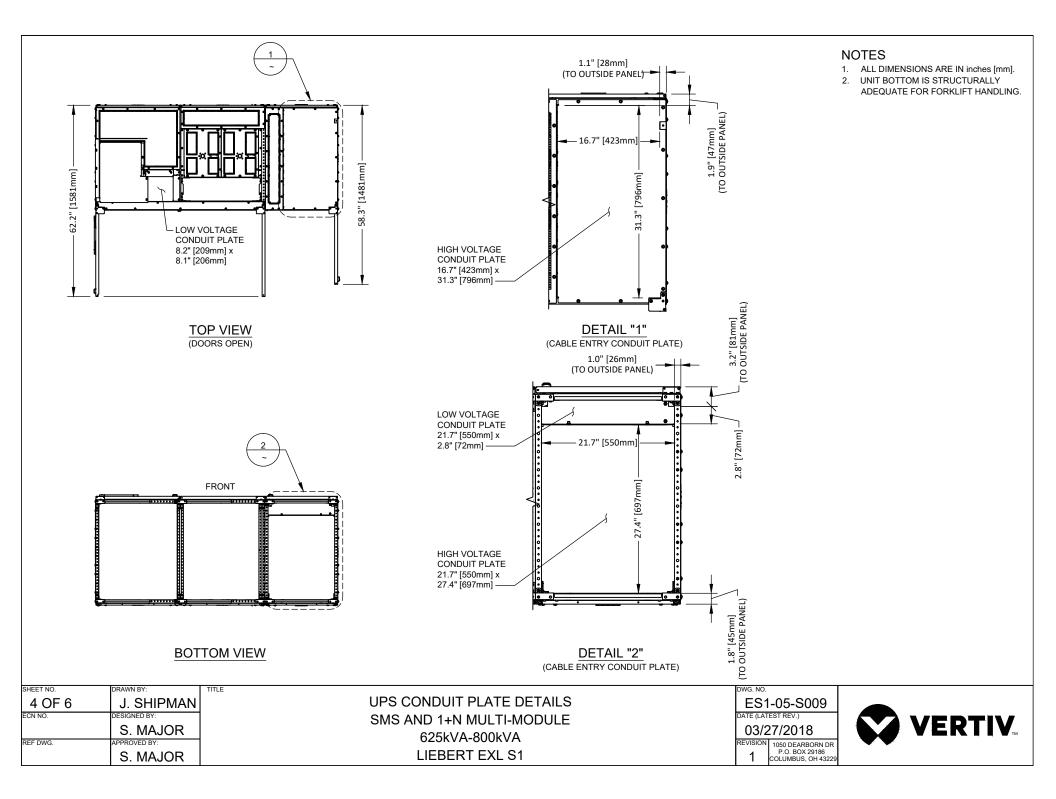

– 1.0" [25mm] 2.0" [50mm] _ (TYP) - 18.7" [475mm] 24.6" [625mm] - 23.6" [600mm] FRONT


NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

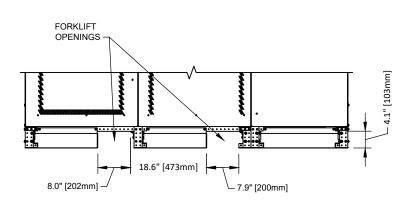

BOTTOM VIEW (BOLT HOLE PATTERN)

FRONT VIEW

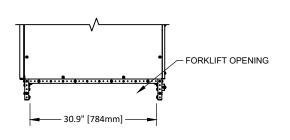

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	TITLE
5 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


UPS BASE DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA LIEBERT EXL S1

ES1-05-S009 DATE (LATEST REV.)

03/27/2018



1. ALL DIMENSIONS ARE IN inches [mm].

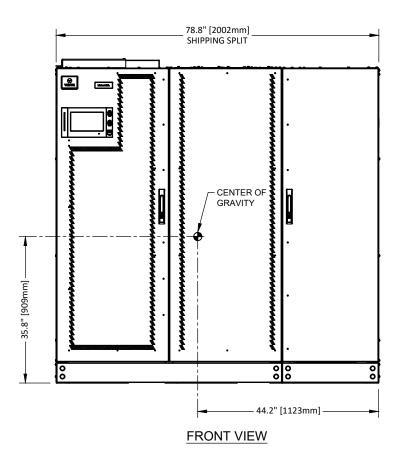

SHEET NO.	DRAWN BY:	TITLE
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS SHIPPING SMS AND 1+N MULTI-MODULE 625kVA-800kVA LIEBERT EXL S1 DWG. NO.


ES1-05-S009

DATE (LATEST REV.)


03/27/2018



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT. 36" [914mm] FRONT AND TOP ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

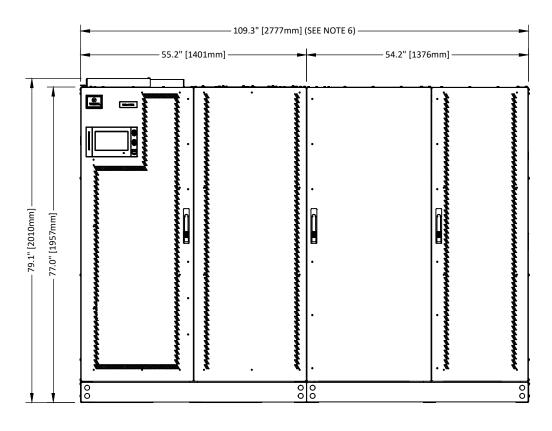

FRONT VIEW

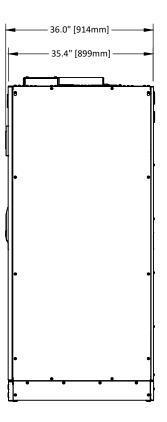


RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:	Г
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

OUTLINE DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA WITH BFD LIEBERT EXL S1 ES1-05-S010
DATE (LATEST REV.)
08/08/2017



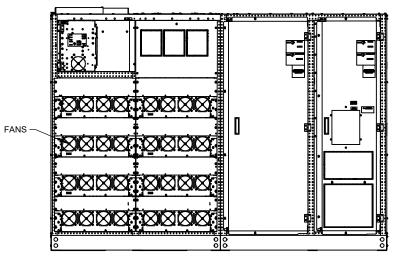

FRONT VIEW (DOORS REMOVED)

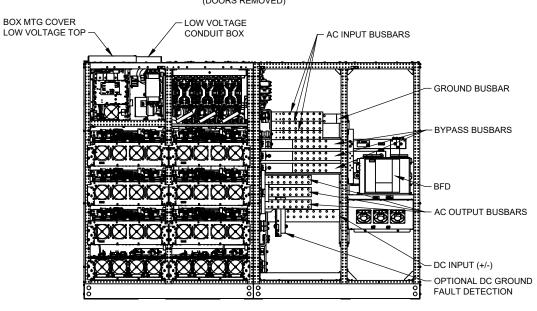

FRONT VIEW


(DOORS AND PANELS REMOVED)


SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA WITH BFD LIEBERT EXL S1 ES1-05-S010
DATE (LATEST REV.)

08/08/2017
REVISION 1050 DEARBORN DR



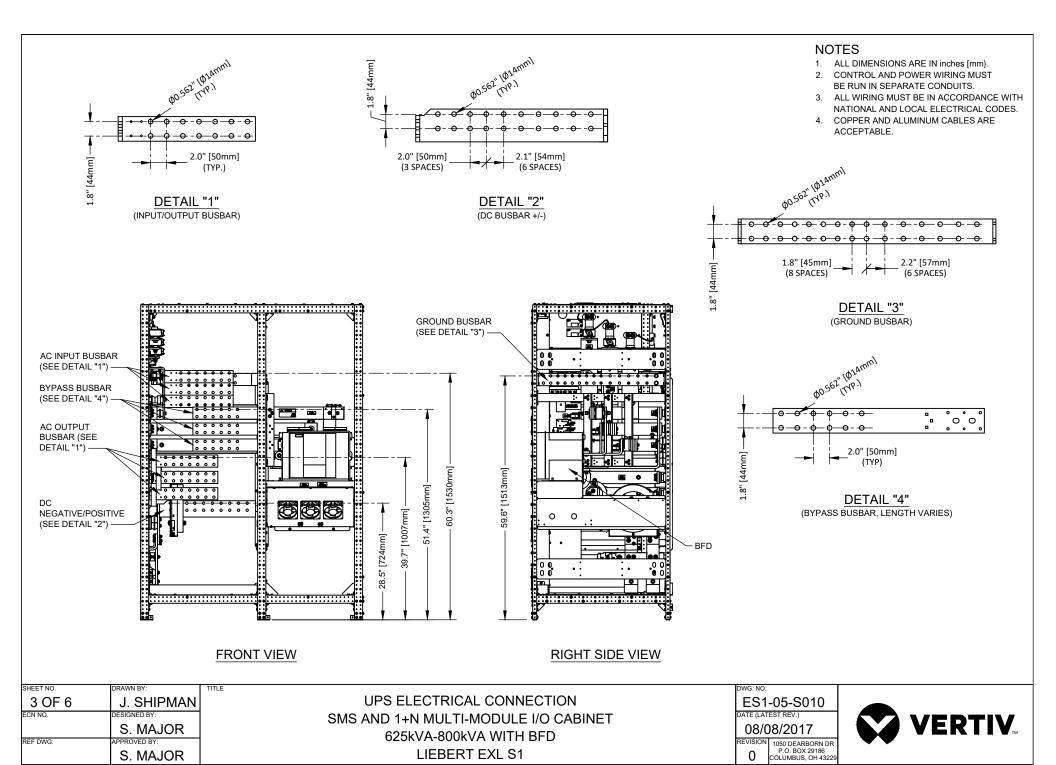


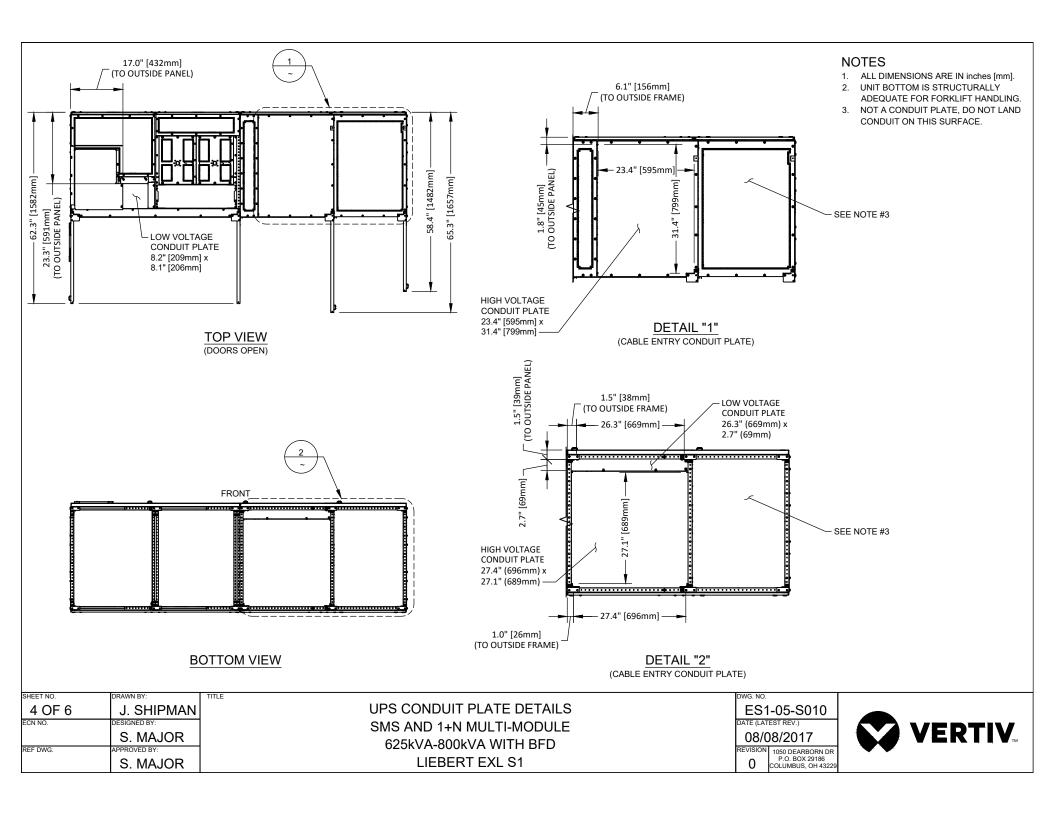

1.0" [25mm] 2.0" [50mm] 20.7" [525mm] 23.6" [600mm] 24.6" [625mm] — FRONT


NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

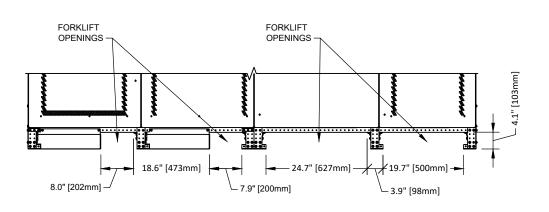

FRONT VIEW

BOTTOM VIEW (BOLT HOLE PATTERN)

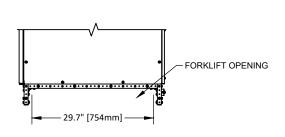

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	TITLE
5 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


(TYP)

UPS BASE DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA WITH BFD LIEBERT EXL S1

ES1-05-S010 DATE (LATEST REV.)



1. ALL DIMENSIONS ARE IN inches [mm].

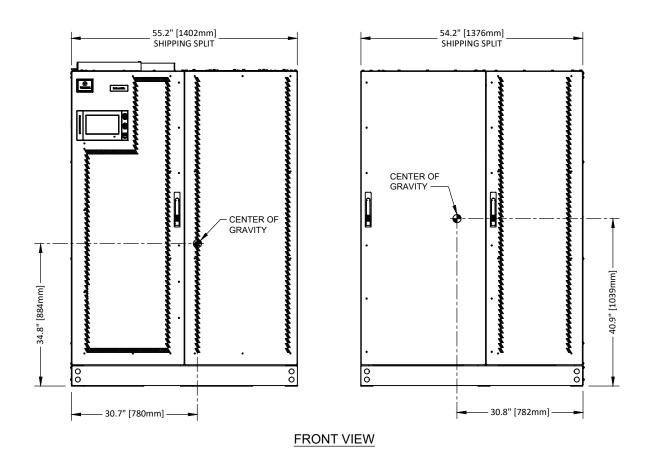

SHEET NO.	DRAWN BY:
6 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


UPS SHIPPING SMS AND 1+N MULTI-MODULE 625kVA-800kVA WITH BFD LIEBERT EXL S1 ES1-05-S010
DATE (LATEST REV.)
08/08/2017

08/08/2017

REVISION | 1050 DEARBORN DR P.O. BOX 29186 | COLUMBUS, OH 43229



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

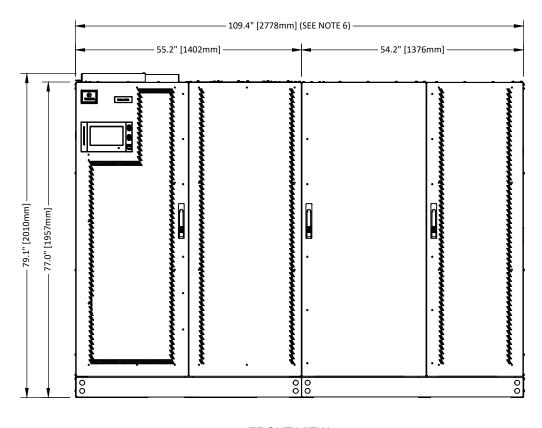

FRONT VIEW

			
il [®]			1
Ϊl			
]			
•			•
Al .			
1			
•			┪
			╟
•			
	•	• •	• #
<u> </u>			

– 36.0" [914mm] -

· 35.4" [899mm] -

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	٦
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


OUTLINE DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA WITH SHARING INDUCTOR LIEBERT EXL S1 DWG. NO.

ES1-05-S011


DATE (LATEST REV.)

03/27/2018



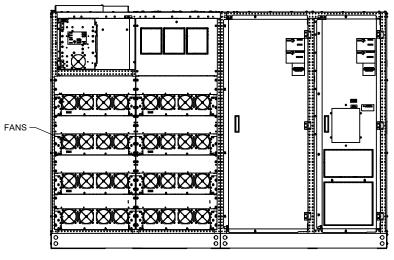

FRONT VIEW (DOORS REMOVED)

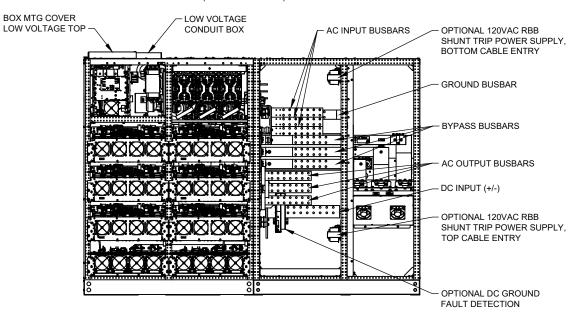

FRONT VIEW

(DOORS AND PANELS REMOVED)

SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA WITH SHARING INDUCTOR LIEBERT EXL S1 DWG. NO.


ES1-05-S011

DATE (LATEST REV.)

03/27/2018



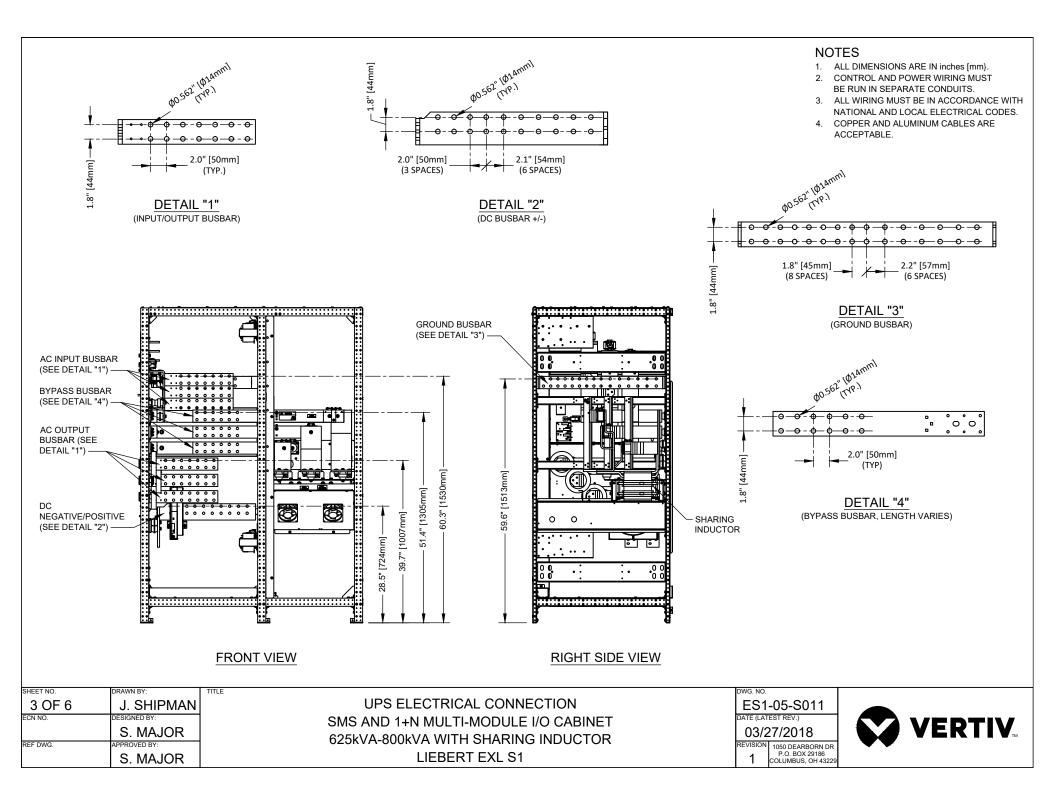

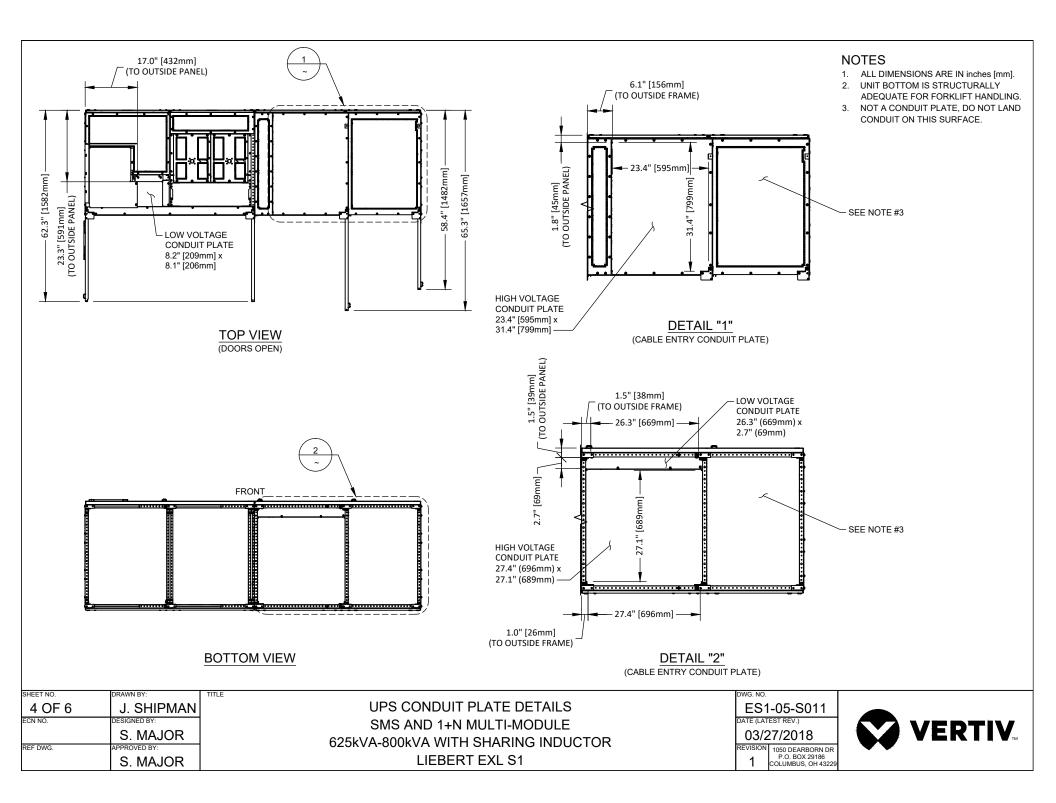


1.0" [25mm] 2.0" [50mm] 20.7" [525mm] 23.6" [600mm] 24.6" [625mm] — FRONT


NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

BOTTOM VIEW (BOLT HOLE PATTERN)

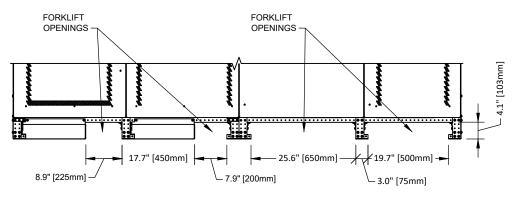

FRONT VIEW

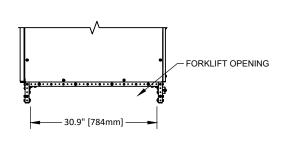

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


(TYP)

UPS BASE DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA WITH SHARING INDUCTOR LIEBERT EXL S1

ES1-05-S011 DATE (LATEST REV.) 03/27/2018



1. ALL DIMENSIONS ARE IN inches [mm].

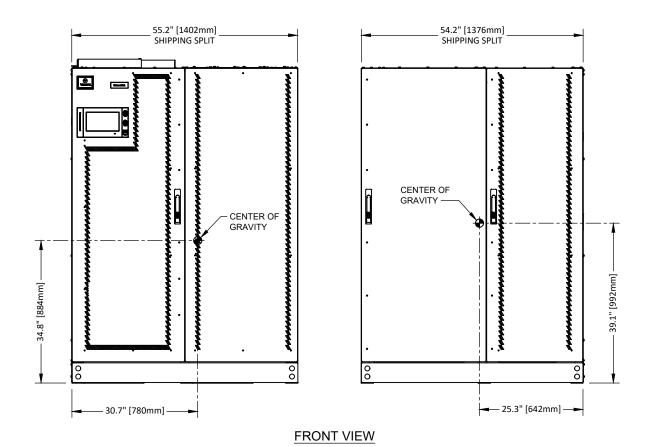

SHEET NO.	DRAWN BY:	TITLE
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS SHIPPING
SMS AND 1+N MULTI-MODULE
625kVA-800kVA WITH SHARING INDUCTOR
LIEBERT EXL S1

DWG. NO.

ES1-05-S011


DATE (LATEST REV.)

03/27/2018

REVISION | 1969 DEADBROOM DR.



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT. 36" [914mm] FRONT AND TOP ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

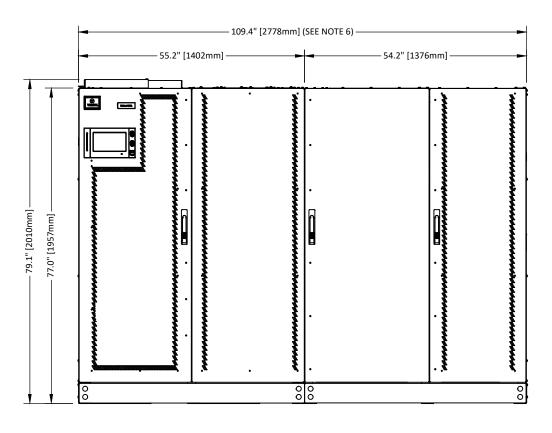

FRONT VIEW

-	—— 35.4" [899mm] ——	-
الم		3 1.
		1
		ľ
1		
		1
1		
•		∦
•		•
-	• • •	╌╫
<u> </u>		

· 36.0" [914mm] -

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
1 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

OUTLINE DRAWING
SMS AND 1+N MULTI-MODULE
625kVA-800kVA WITH BFD AND SHARING INDUCTOR
LIEBERT EXL S1


DWG. NO.

ES1-05-S012


DATE (LATEST REV.)

08/08/2017



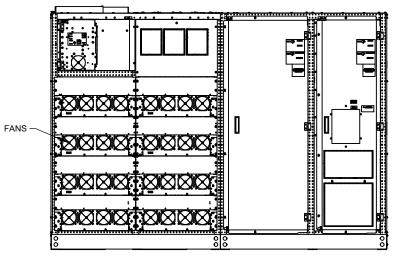

FRONT VIEW (DOORS REMOVED)

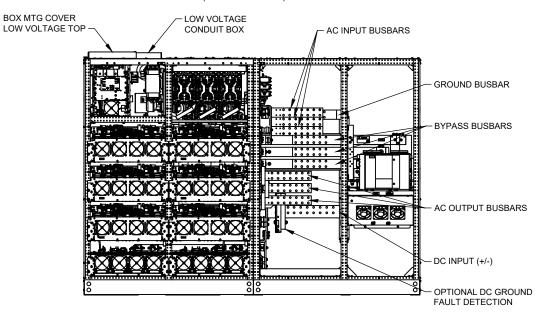


FRONT VIEW


(DOORS AND PANELS REMOVED)

SHEET NO.	DRAWN BY:
2 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1 ES1-05-S012
DATE (LATEST REV.)
08/08/2017



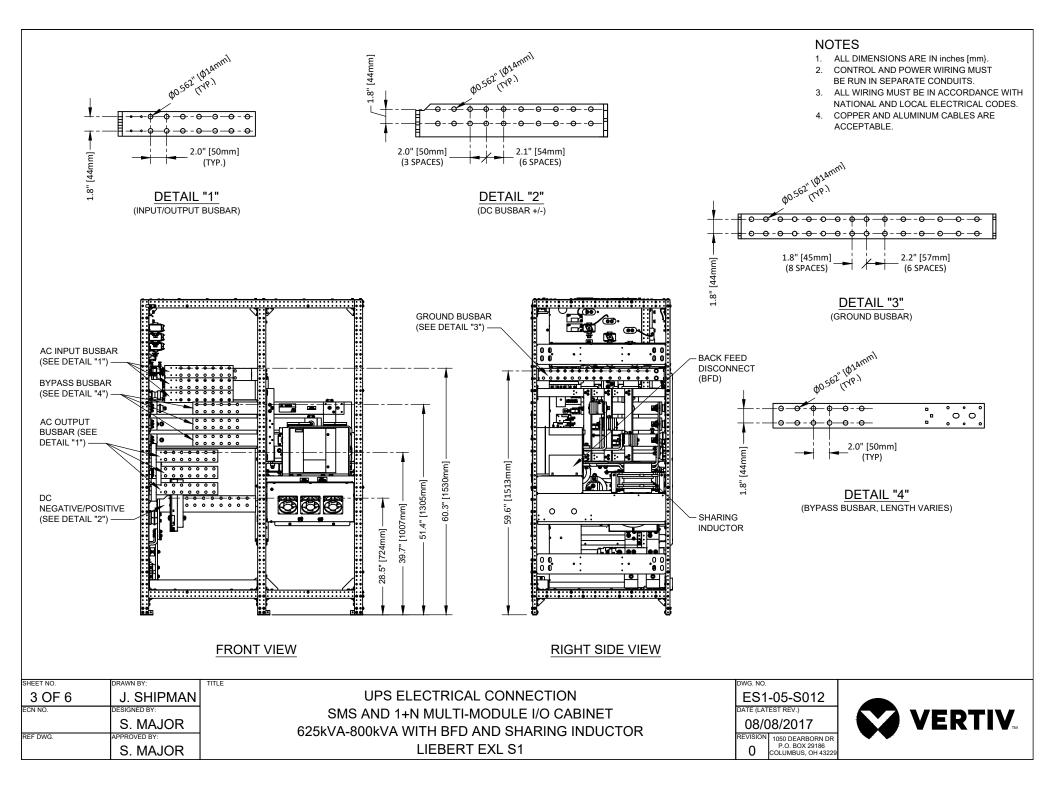

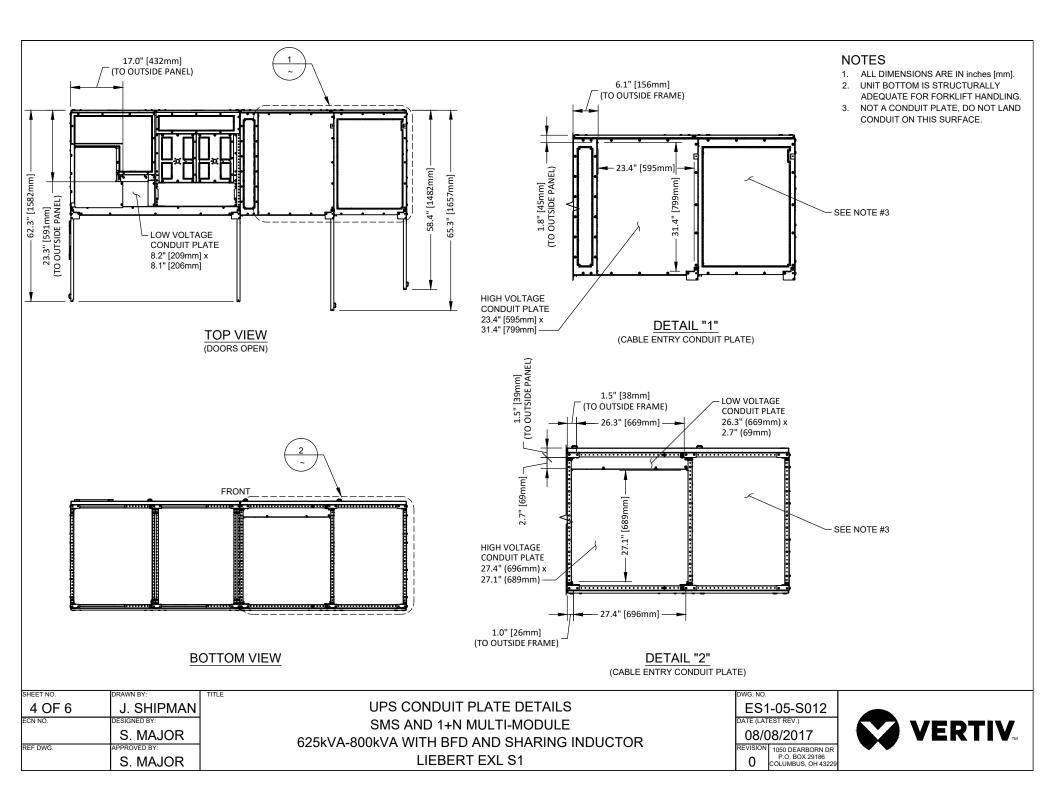


1.0" [25mm] 2.0" [50mm] 20.7" [525mm] 23.6" [600mm] 24.6" [625mm] -FRONT


NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

BOTTOM VIEW (BOLT HOLE PATTERN)

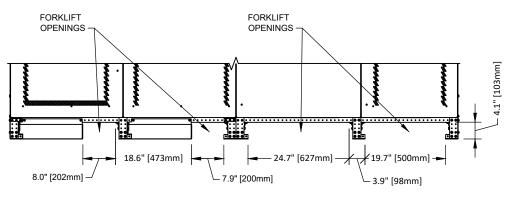

FRONT VIEW

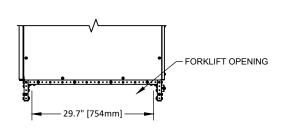

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	
5 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	


(TYP)

UPS BASE DRAWING SMS AND 1+N MULTI-MODULE 625kVA-800kVA WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1

ES1-05-S012 DATE (LATEST REV.) 08/08/2017



1. ALL DIMENSIONS ARE IN inches [mm].

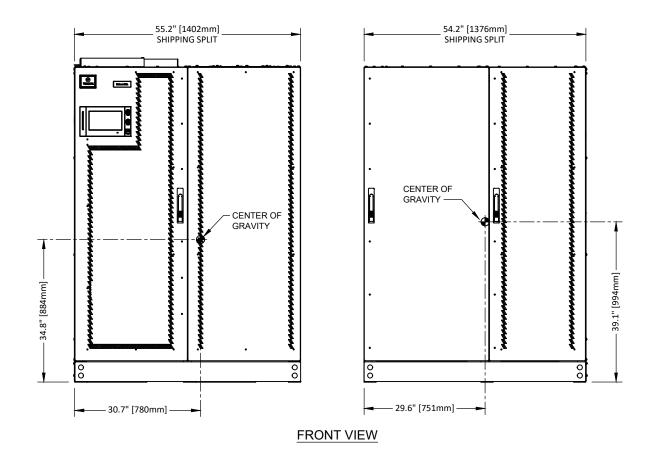

SHEET NO.	DRAWN BY:	TITLE
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS SHIPPING
SMS AND 1+N MULTI-MODULE
625kVA-800kVA WITH BFD AND SHARING INDUCTOR
LIEBERT EXL S1

DWG. NO.

ES1-05-S012


DATE (LATEST REV.)

08/08/2017





- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

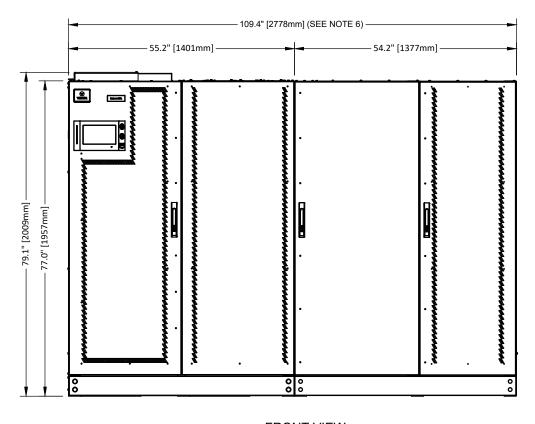

FRONT VIEW

-	— 36.0" [914mm] – — 35.4" [899mm] -	
	 ,	•
		•
		•
	·	•

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
1 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


OUTLINE DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 625kVA-800kVA WITH COMMON MODE CHOKE LIEBERT EXL S1 DWG. NO.

ES1-05-S013


DATE (LATEST REV.)

03/27/2018



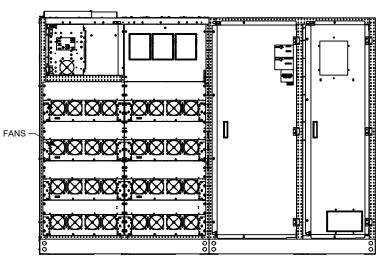

FRONT VIEW (DOORS REMOVED)

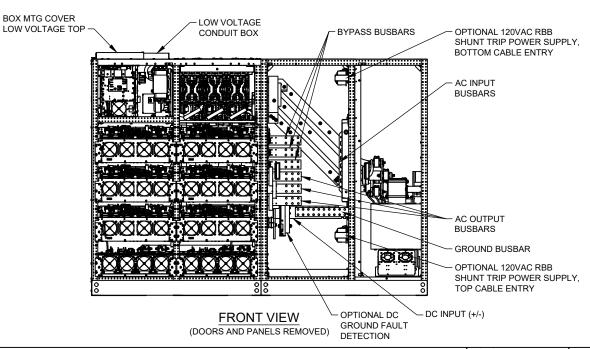

SHEET NO.	DRAWN BY:
2 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

TITLE


MAIN COMPONENTS DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 625kVA-800kVA WITH COMMON MODE CHOKE LIEBERT EXL S1 ES1-05-S013

DATE (LATEST REV.)

03/27/2018
REVISION 1050 DEARBO

1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



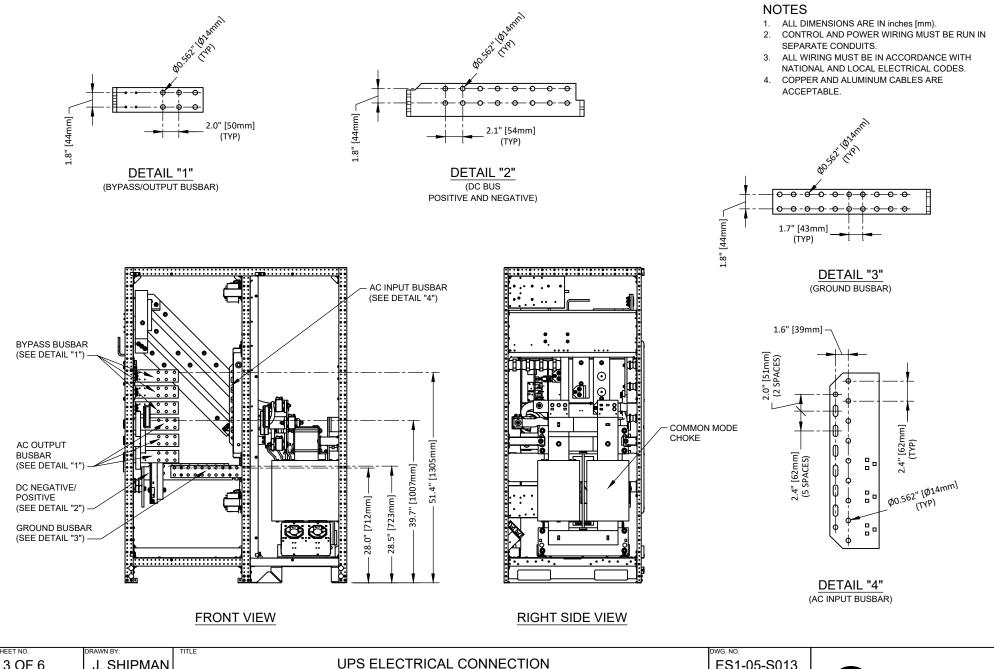

3 OF 6

J. SHIPMAN

DESIGNED BY:
S. MAJOR

REF DWG.

PAPPROVED BY:
S. MAJOR

APPROVED BY:
S. MAJOR

APPROVED BY:
S. MAJOR


LIEBERT EXL S1

ES1-05-S013

DATE (LATEST REV.)

03/27/2018
REVISION 1050 DEARBORN




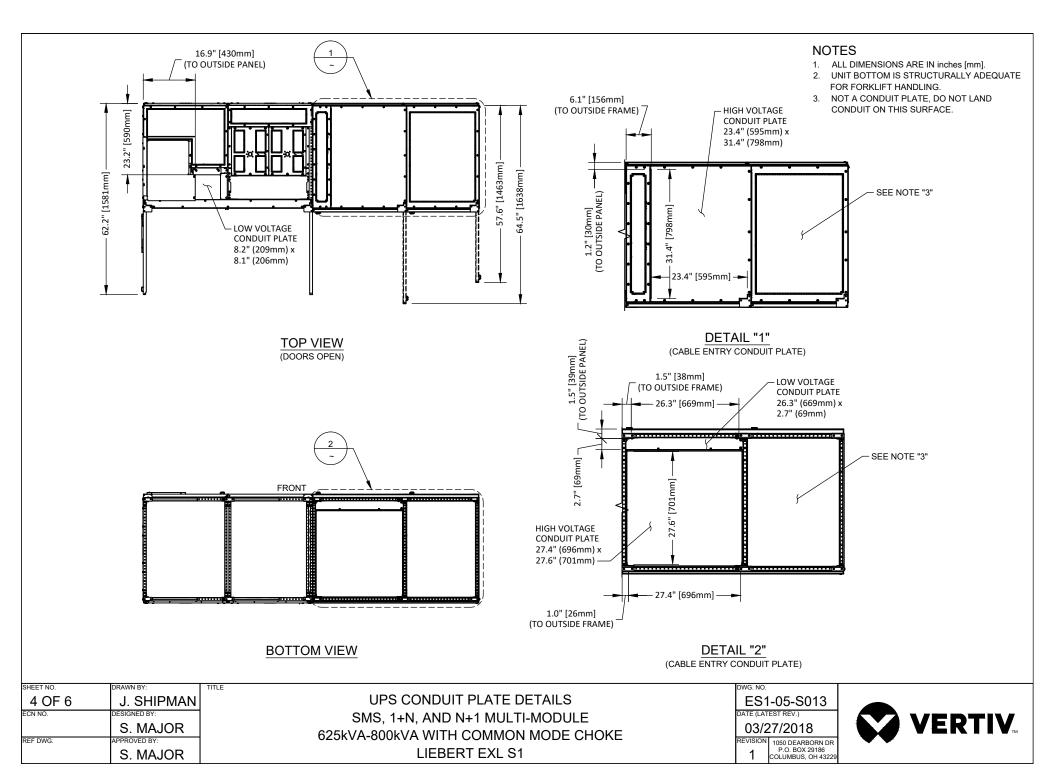



2.0" [50mm] (TYP) -24.6" [625mm] - 23.6" [600mm] - | -26.6" [675mm] - 20.7" [525mm] - | -20.7" [525mm] - |

NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

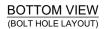

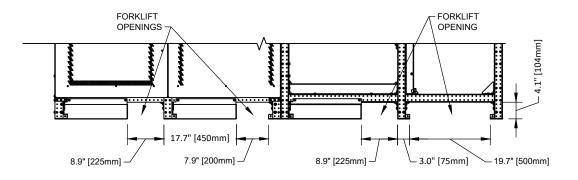

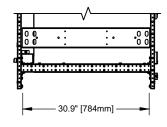

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS BASE DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 625kVA-800kVA WITH COMMON MODE CHOKE LIEBERT EXL S1 DWG. NO.


ES1-05-S013

DATE (LATEST REV.)

03/27/2018



1. ALL DIMENSIONS ARE IN inches [mm].

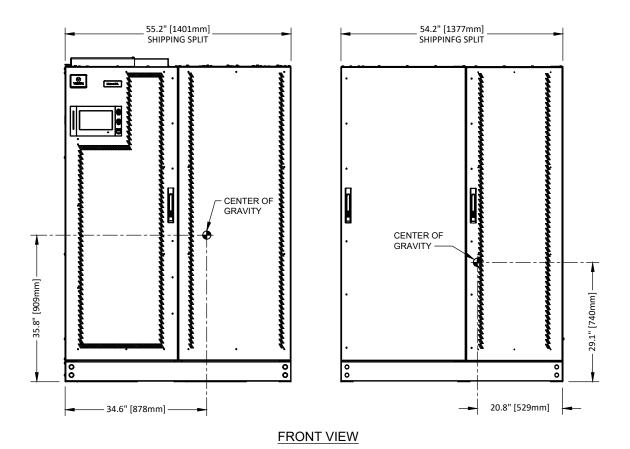

SHEET NO.	DRAWN BY:	٦
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS SHIPPING SMS, 1+N, AND N+1 MULTI-MODULE 625kVA-800kVA WITH COMMON MODE CHOKE LIEBERT EXL S1 DWG. NO.

ES1-05-S013


DATE (LATEST REV.)

03/27/2018

REVISION LOSS DE ARRODON DR.



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT. 36" [914mm] FRONT AND TOP ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

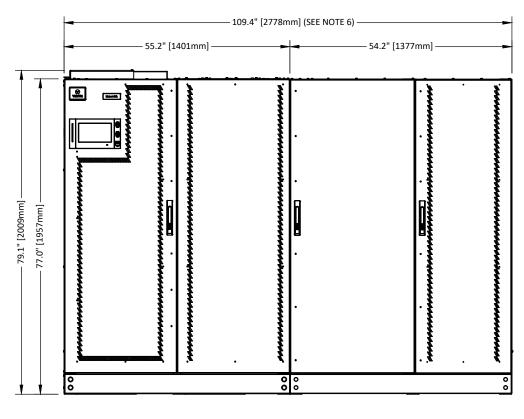

FRONT VIEW

-	- 36.0" [914mm]	-
	- 35.4" [899mm]	_
		٥
ŀ		•
	• • • • • • • • • • • • • • • • • • • •	

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
1 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


OUTLINE DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 625kVA-800kVA WITH COMMON MODE CHOKE AND BFD LIEBERT EXL S1 DWG. NO.

ES1-05-S014


DATE (LATEST REV.)

09/19/2017



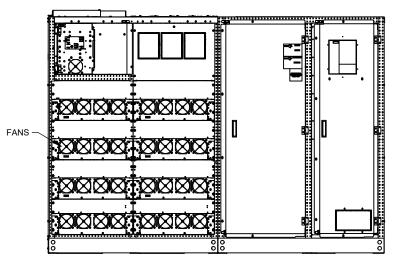

FRONT VIEW (DOORS REMOVED)

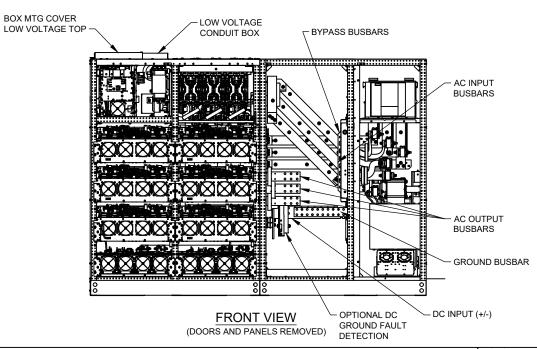



SHEET NO.	DRAWN BY:
2 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

MAIN COMPONENTS DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 625kVA-800kVA WITH COMMON MODE CHOKE AND BFD LIEBERT EXL S1 ES1-05-S014


DATE (LATEST REV.)
09/19/2017



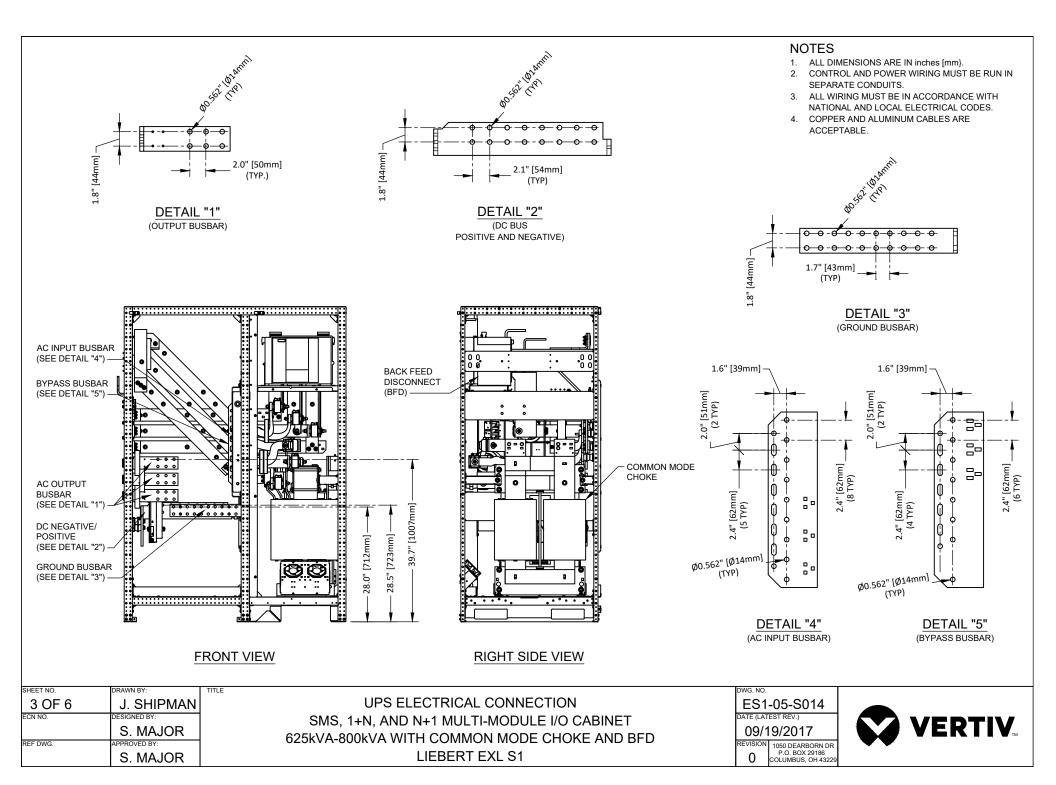


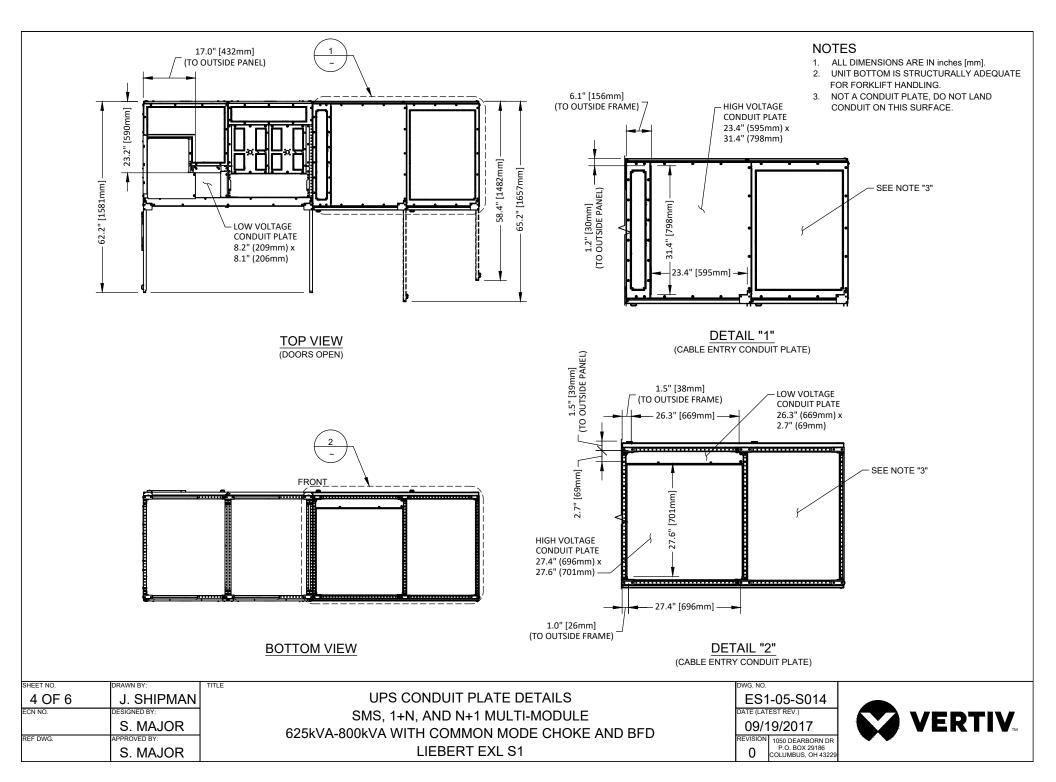


- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

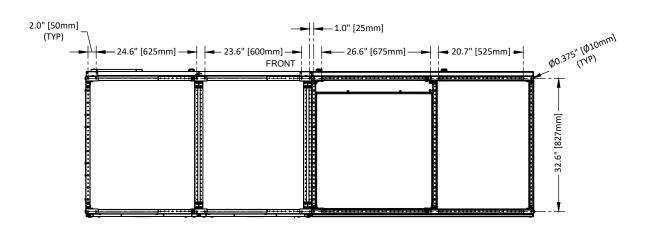

 $\frac{\text{BOTTOM VIEW}}{\text{(BOLT HOLE LAYOUT)}}$

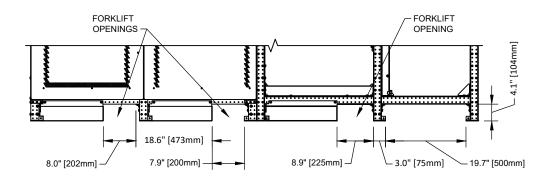

FRONT VIEW

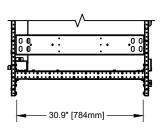

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS BASE DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 625kVA-800kVA WITH COMMON MODE CHOKE AND BFD LIEBERT EXL S1 DWG. NO.

ES1-05-S014


DATE (LATEST REV.)

09/19/2017

REVISION 1050 DEARBORN DR

P.O. BOX 29186 COLUMBUS, OH 43229



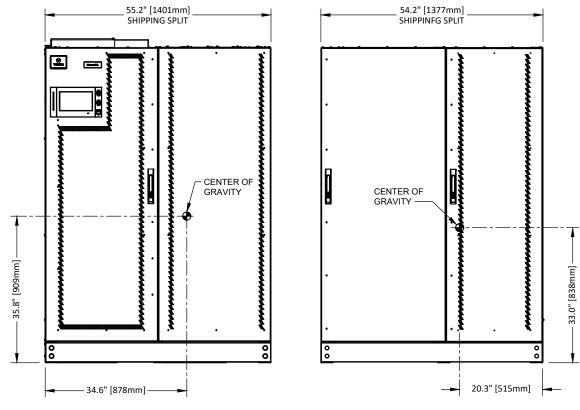

FRONT VIEW

SHEET NO.	DRAWN BY:	TITLE
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS SHIPPING
SMS, 1+N, AND N+1 MULTI-MODULE
625kVA-800kVA WITH COMMON MODE CHOKE AND BFD
LIEBERT EXL S1

DWG. NO.

ES1-05-S014


DATE (LATEST REV.)

0/19/2017


REVISION 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

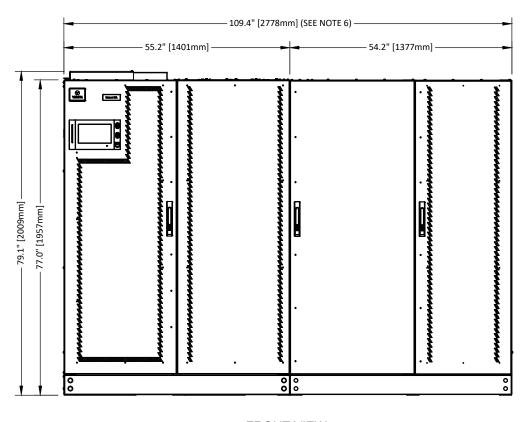

FRONT VIEW

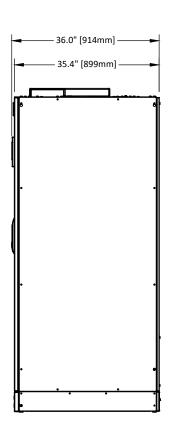

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	Г
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

OUTLINE DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
625kVA-800kVA WITH COMMON MODE CHOKE AND SHARING INDUCTOR
LIEBERT EXL S1


DWG. NO.

ES1-05-S015


DATE (LATEST REV.)

03/27/2018



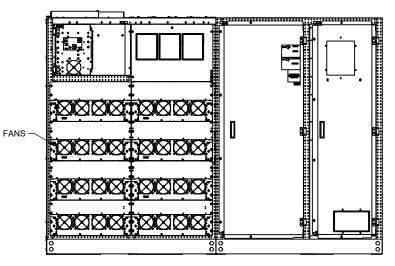

FRONT VIEW (DOORS REMOVED)

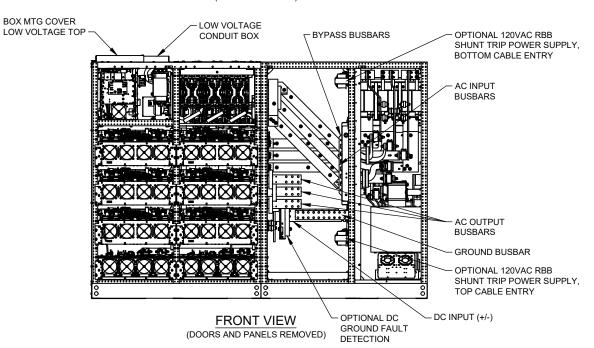



SHEET NO.	DRAWN BY:
2 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

MAIN COMPONENTS DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 625kVA-800kVA WITH COMMON MODE CHOKE AND SHARING INDUCTOR LIEBERT EXL S1 ES1-05-S015

03/27/2018



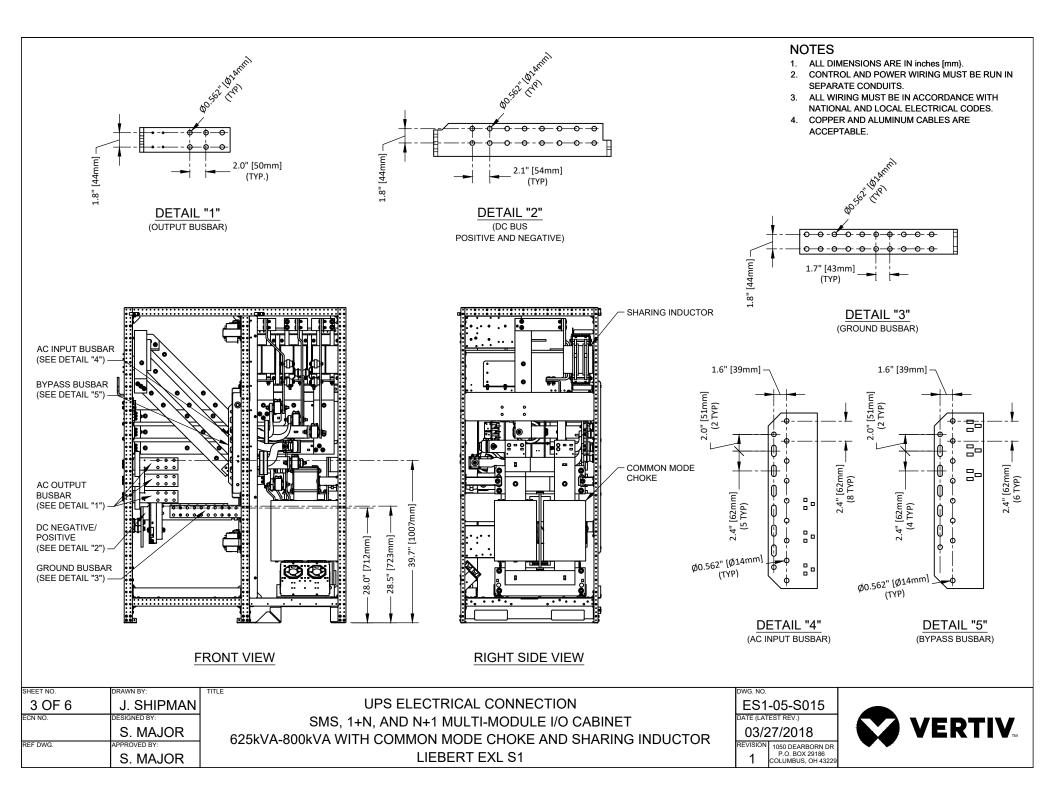

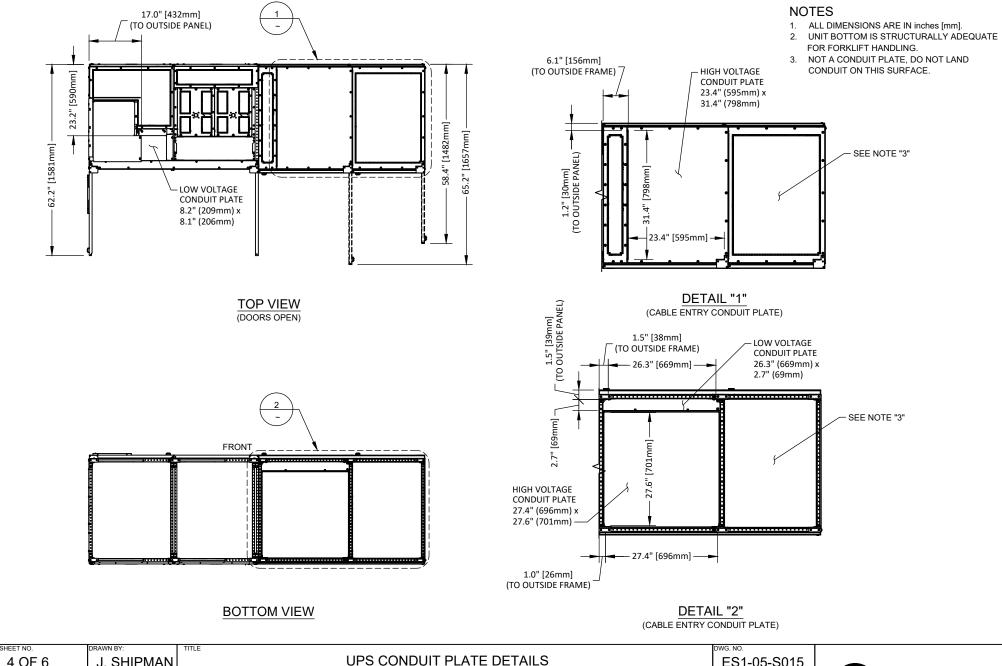

4 OF 6

J. SHIPMAN

DESIGNED BY:
S. MAJOR

REF DWG.

APPROVED BY:
S. MAJOR

APPROVED BY:
S. MAJOR

APPROVED BY:
S. MAJOR

LIEBERT EXL S1

ES1-05-S015


DATE (LATEST REV.)

03/27/2018



2.0" [50mm] (TYP) 24.6" [625mm] - 23.6" [600mm] - 26.6" [675mm] - 20.7" [525mm] - 20.7" [525mm

BOTTOM VIEW (BOLT HOLE LAYOUT)

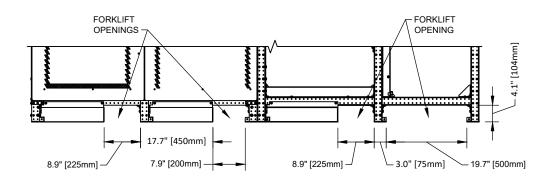

FRONT VIEW

30.9" [784mm]

NOTES

ALL DIMENSIONS ARE IN inches [mm].
 UNIT BOTTOM IS STRUCTURALLY ADEQUATE

FOR FORKLIFT HANDLING.

RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:	_
5 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS BASE DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
625kVA-800kVA WITH COMMON MODE CHOKE AND SHARING INDUCTOR
LIEBERT EXL S1

DWG. NO. ES1-05-S015 DATE (LATEST REV.) 03/27/2018



1. ALL DIMENSIONS ARE IN inches [mm].

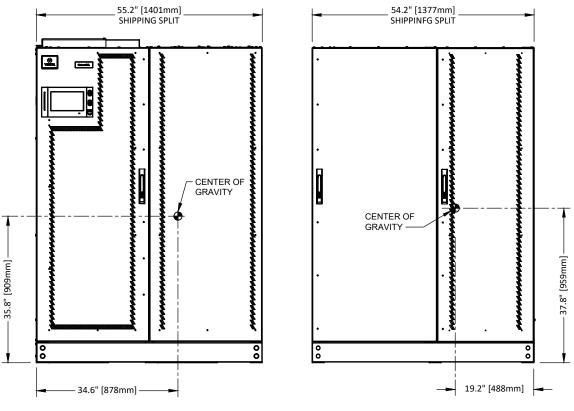


SHEET NO.	DRAWN BY:
6 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


UPS SHIPPING
SMS, 1+N, AND N+1 MULTI-MODULE
625kVA-800kVA WITH COMMON MODE CHOKE AND SHARING INDUCTOR
LIEBERT EXL S1

DWG. NO.
ES1-05-S015
DATE (LATEST REV.)
03/27/2018
REVISION 1050 DEARBORN DR



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT. 36" [914mm] FRONT AND TOP ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- 5. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

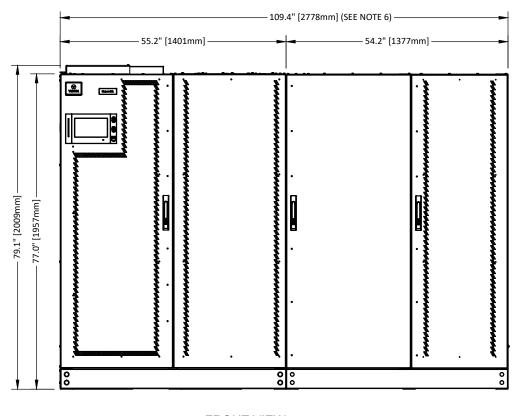

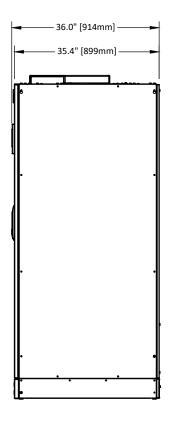

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	T
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	1
	S. MAJOR	
REF DWG.	APPROVED BY:	1
	S. MAJOR	

OUTLINE DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
625kVA-800kVA WITH COMMON MODE CHOKE, BFD AND SHARING INDUCTOR
LIEBERT EXL S1


DWG. NO.

ES1-05-S016


DATE (LATEST REV.)

09/19/2017
REVISION 1050 DEARBORN



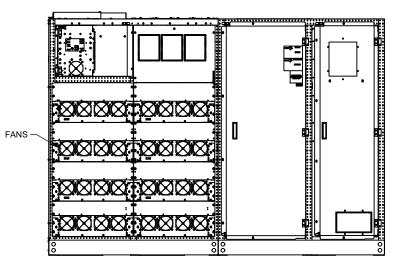

FRONT VIEW (DOORS REMOVED)

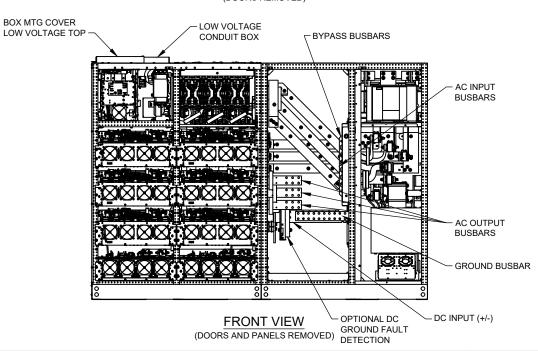

SHEET NO.	DRAWN BY:
2 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

TITLE


MAIN COMPONENTS DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
625kVA-800kVA WITH COMMON MODE CHOKE, BFD AND SHARING INDUCTOR
LIEBERT EXL S1


ES1-05-S016
DATE (LATEST REV.)

09/19/2017

0 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



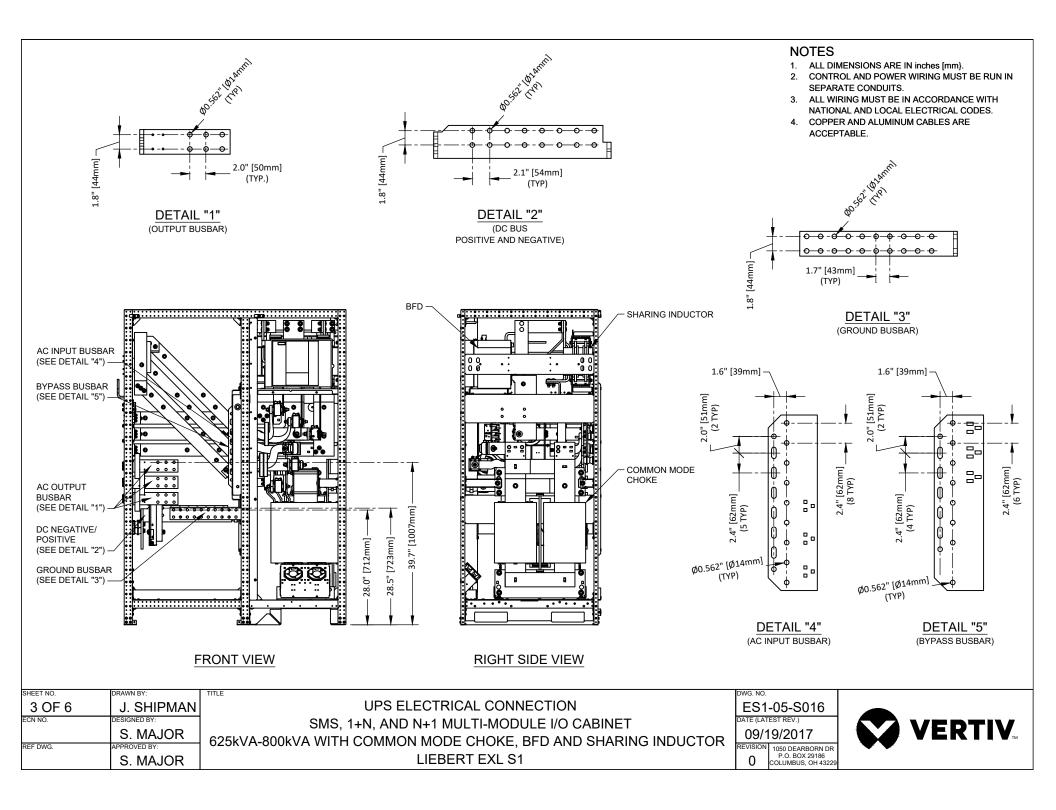

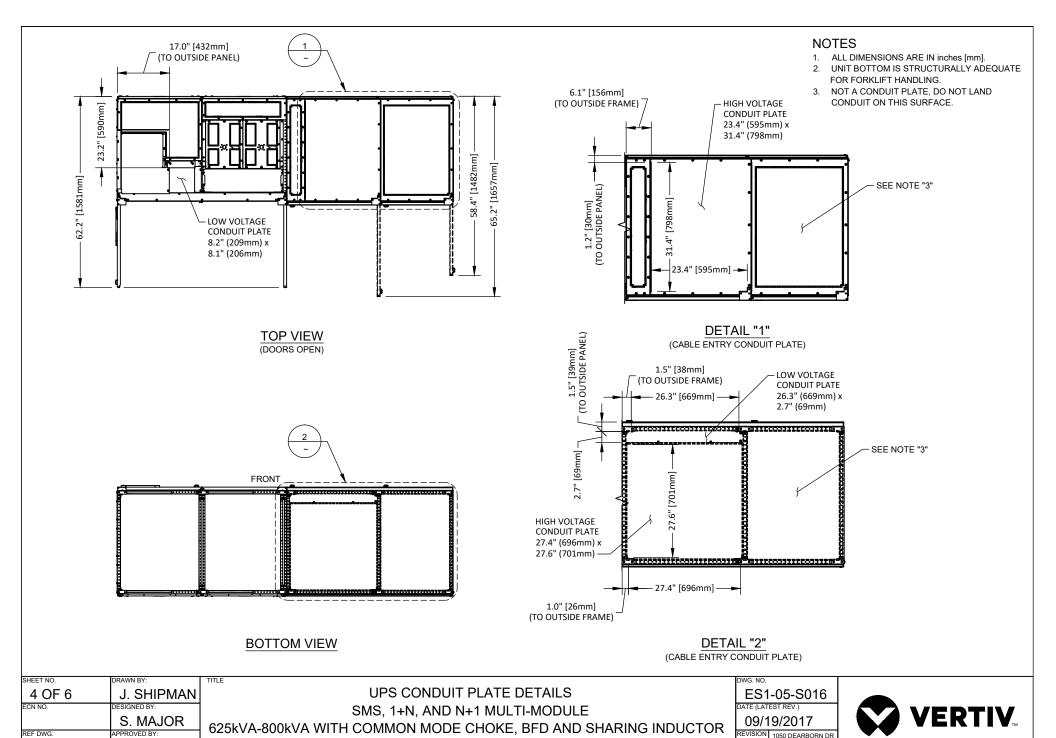


LIEBERT EXL S1

S. MAJOR

P.O. BOX 29186 COLUMBUS, OH 43229

2.0" [50mm] (TYP) 24.6" [625mm] — 23.6" [600mm] — 26.6" [675mm] — 20.7" [525mm] — 00.315" (010mm) — 00

BOTTOM VIEW (BOLT HOLE LAYOUT)

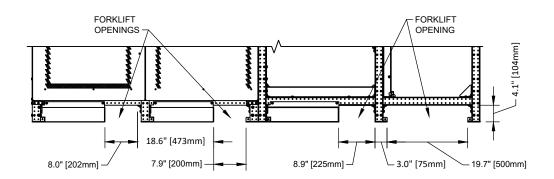

FRONT VIEW

# T		/	H.
00	•:		•00
		•••••••••••••••••••••••••••••••••••••••	
4	— 30.9" [7	784mm] —	

NOTES

ALL DIMENSIONS ARE IN inches [mm].
 UNIT BOTTOM IS STRUCTURALLY ADEQUATE

FOR FORKLIFT HANDLING.

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	_
5 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS BASE DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
625kVA-800kVA WITH COMMON MODE CHOKE, BFD AND SHARING INDUCTOR
LIEBERT EXL S1


DWG. NO.

ES1-05-S016

DATE (LATEST REV.)

09/19/2017



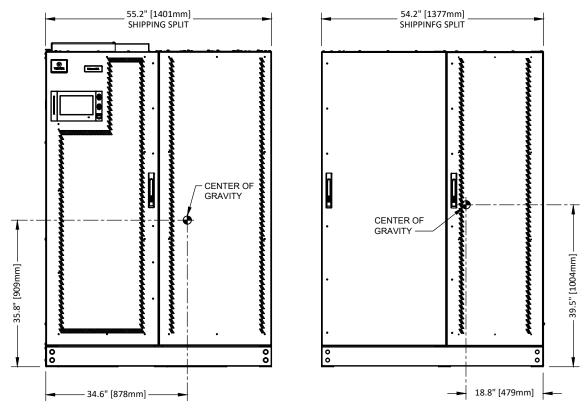

FRONT VIEW


ш			
S	SHEET NO.	DRAWN BY:	TITLE
	6 OF 6	J. SHIPMAN	
E	ECN NO.	DESIGNED BY:	
		S. MAJOR	625
F	REF DWG.	APPROVED BY:	020
		S. MAJOR	

UPS SHIPPING SMS, 1+N, AND N+1 MULTI-MODULE 625kVA-800kVA WITH COMMON MODE CHOKE, BFD AND SHARING INDUCTOR LIEBERT EXL S1






- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

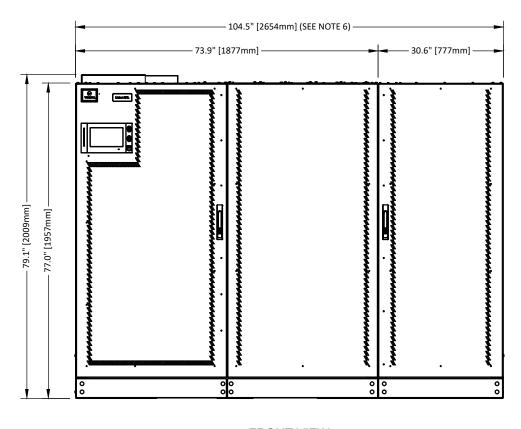

FRONT VIEW

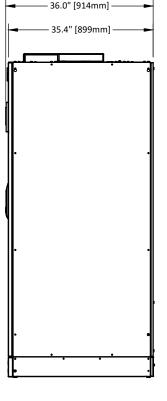


RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:
1 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

OUTLINE DRAWING SMS AND 1+N MULTI-MODULE 1000kVA-1200kVA LIEBERT EXL S1 ES1-05-S001
DATE (LATEST REV.)
03/23/2018



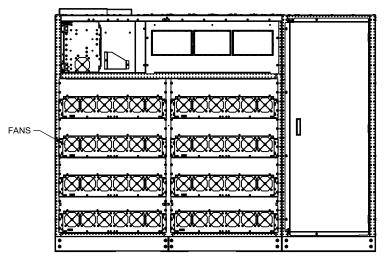

FRONT VIEW (DOORS REMOVED)

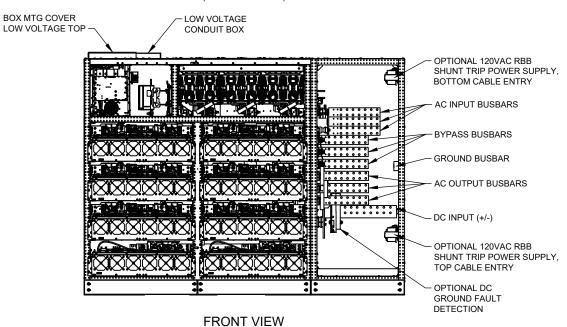

(DOORS AND PANELS REMOVED)

SHEET NO.	DRAWN BY:
2 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


MAIN COMPONENTS DRAWING SMS AND 1+N MULTI-MODULE 1000kVA-1200kVA LIEBERT EXL S1 ES1-05-S001

DATE (LATEST REV.)

03/23/2018

P.O. BOX 29186 COLUMBUS, OH 43229



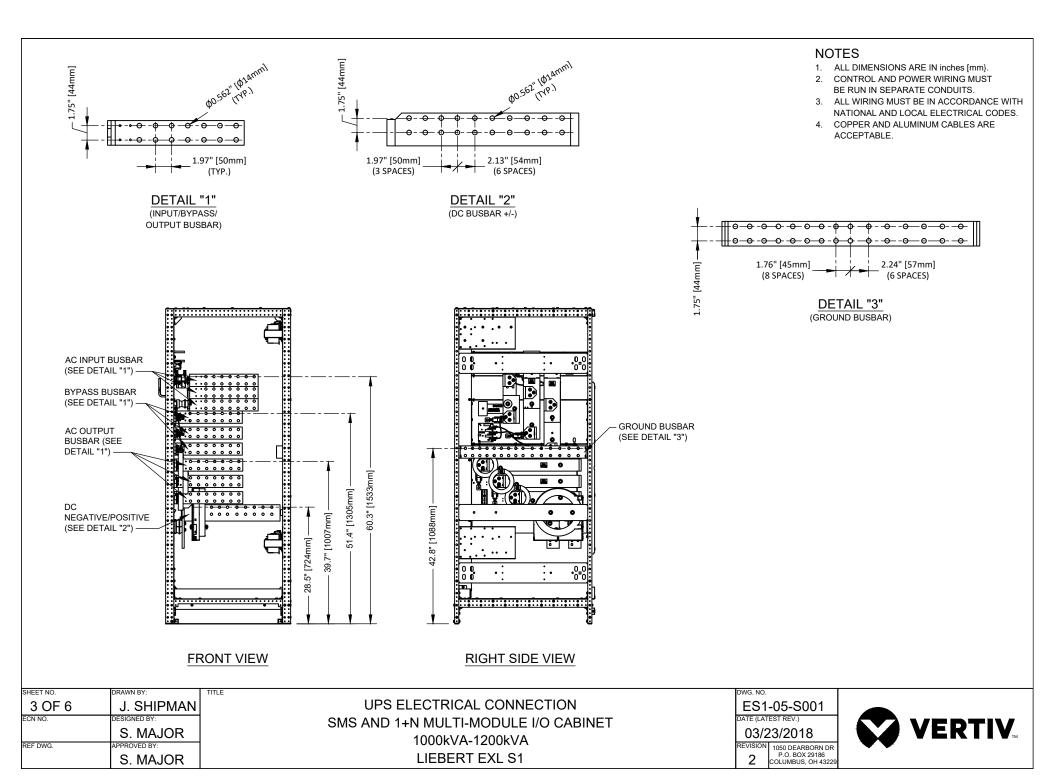

NOTES 17.0" [432mm] (TO OUTSIDE PANEL) 6.1" [156mm] (TO OUTSIDE FRAME) 7 - HIGH VOLTAGE CONDUIT PLATE 23.4" (595mm) x 23.4" [594mm] 31.4" (798mm) 1.2" [30mm] (TO OUTSIDE PANEL) 72.3" [1836mm] 65.2" [1656mm] 71.7" [1820mm] LOW VOLTAGE CONDUIT PLATE 7.9" [200mm] x 23.4" [595mm] 7.9" [200mm] **DETAIL "1"** (CABLE ENTRY CONDUIT PLATE) **TOP VIEW** 1.5" [39mm] (TO OUTSIDE PANEL) (DOORS OPEN) 1.5" [38mm] LOW VOLTAGE (TO OUTSIDE FRAME) **CONDUIT PLATE** 26.3" [669mm] 26.3" (669mm) x 2.7" (69mm) 2.7" [69mm] -FRONT HIGH VOLTAGE CONDUIT PLATE 27.4" (696mm) x 27.6" (701mm) - 27.4" [696mm] – 1.0" [26mm] (TO OUTSIDE FRAME) DETAIL "2" **BOTTOM VIEW** (CABLE ENTRY CONDUIT PLATE)

UPS CONDUIT PLATE DETAILS SMS AND 1+N MULTI-MODULE 1000kVA-1200kVA LIEBERT EXL S1

4 OF 6

ECN NO.

REF DWG.

J. SHIPMAN

S. MAJOR

S. MAJOR

ESIGNED BY:

ES1-05-S001
DATE (LATEST REV.)

03/23/2018

REVISION 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



ALL DIMENSIONS ARE IN inches [mm].

FOR FORKLIFT HANDLING.

UNIT BOTTOM IS STRUCTURALLY ADEQUATE

2.0" [50mm] (TYP) 32.5" [825mm] 32.5" [825mm] 25.6" [650mm] 0.315" (\$\phi_10mm)\$

BOTTOM VIEW (BOLT HOLE LAYOUT)

FRONT VIEW

FORKLIFT OPENING

RIGHT SIDE VIEW

30.9" [784mm] -

NOTES

1. ALL DIMENSIONS ARE IN inches [mm].

FORKLIFT HANDLING.

2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR

SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


UPS BASE DRAWING SMS AND 1+N MULTI-MODULE 1000kVA-1200kVA LIEBERT EXL S1 ES1-05-S001

DATE (LATEST REV.)

03/23/2018



1. ALL DIMENSIONS ARE IN inches [mm].

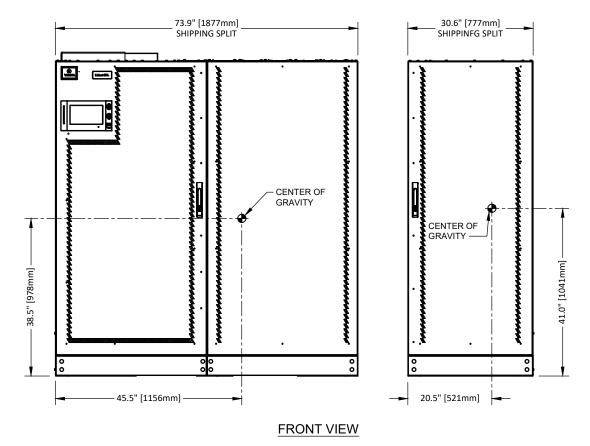


SHEET NO.	DRAWN BY:	TITLE
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS SHIPPING SMS AND 1+N MULTI-MODULE 1000kVA-1200kVA LIEBERT EXL S1


DWG. NO.		
ES1-05-S001		
DATE (LAT	EST REV.)	
03/23/2018		
	23/2018	
03/2 REVISION	23/2018 1050 DEARBORN DR P.O. BOX 29186	



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

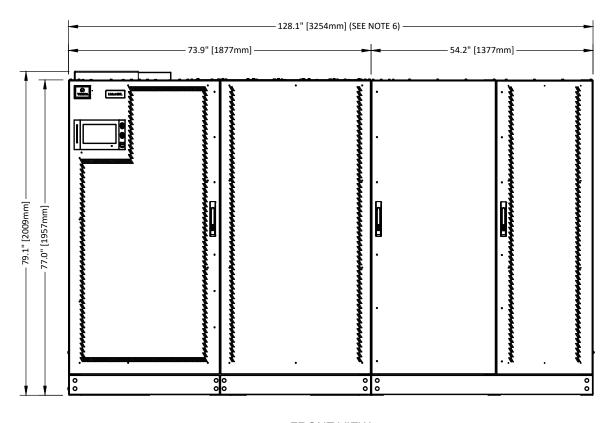

FRONT VIEW

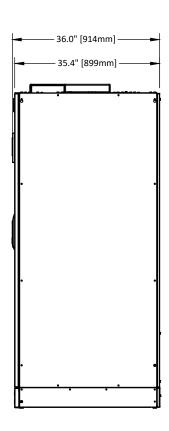


RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:	7
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

OUTLINE DRAWING SMS AND 1+N 1000kVA-1200kVA WITH BFD LIEBERT EXL S1 ES1-05-S002
DATE (LATEST REV.)
03/27/2018



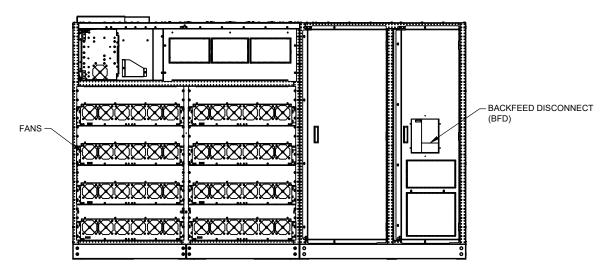

FRONT VIEW (DOORS REMOVED)

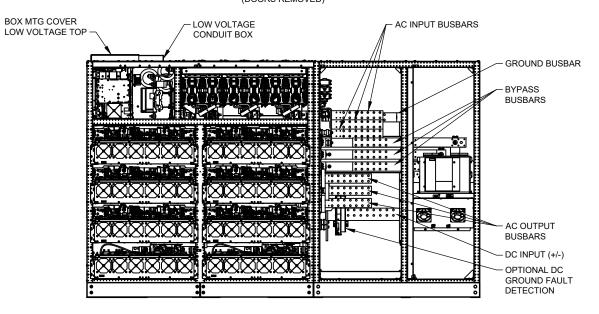


FRONT VIEW (DOORS AND PANELS REMOVED)


SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

MAIN COMPONENTS DRAWING SMS AND 1+N 1000kVA-1200kVA WITH BFD LIEBERT EXL S1 ES1-05-S002
DATE (LATEST REV.)


03/27/2018



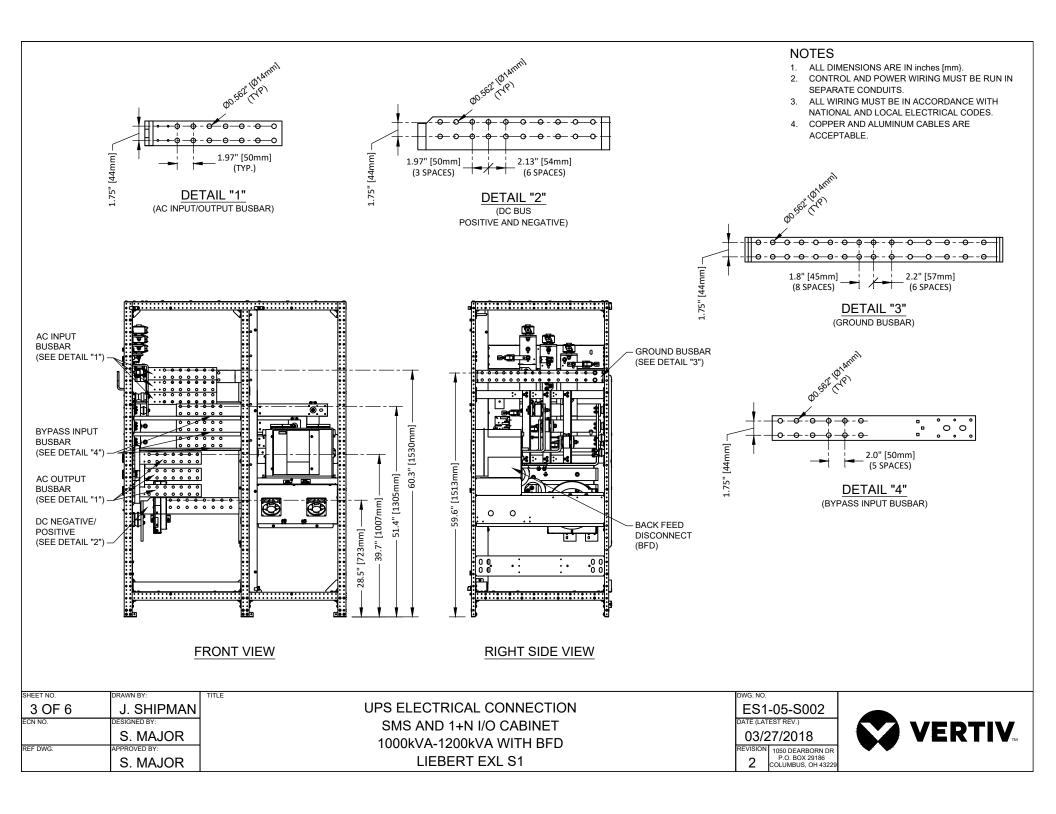


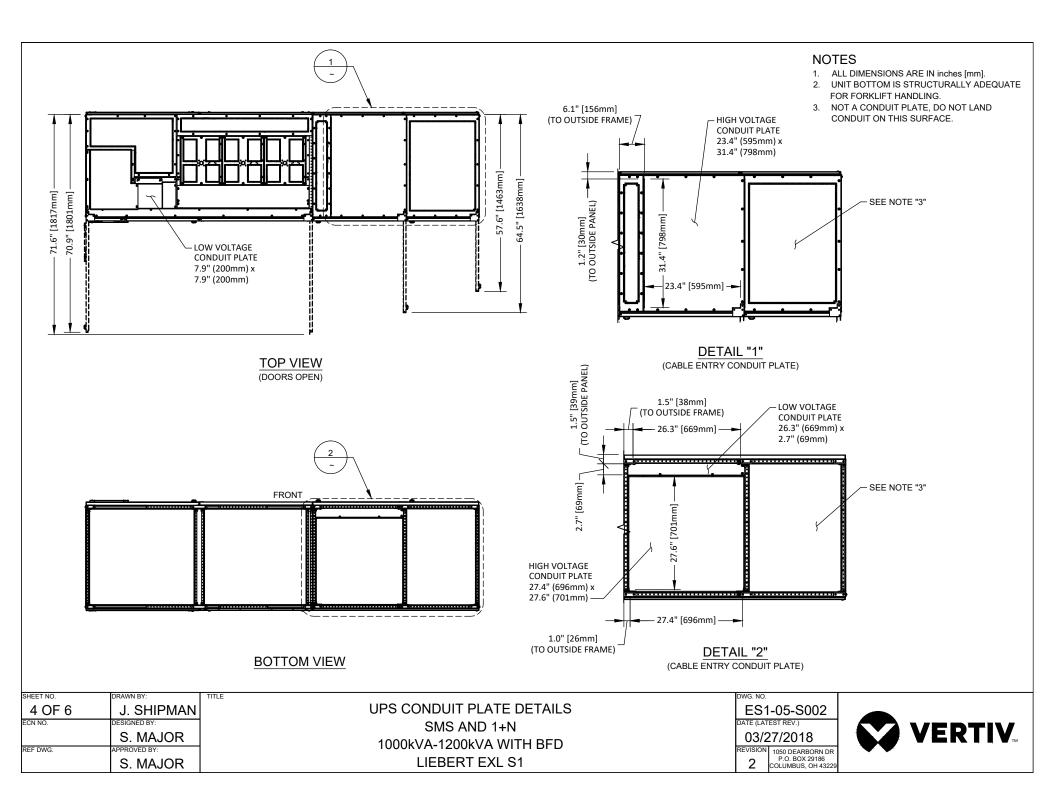


- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

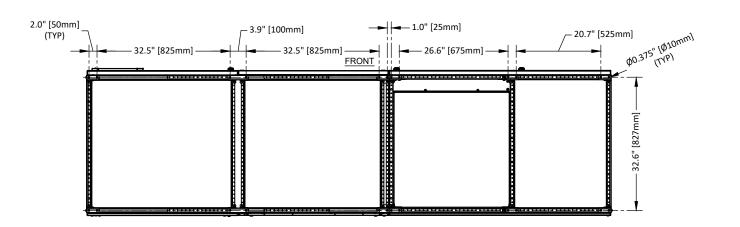

BOTTOM VIEW (BOLT HOLE LAYOUT)

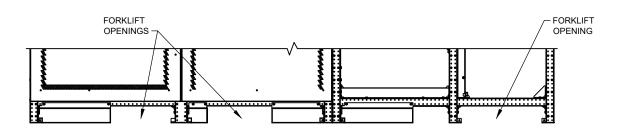

FRONT VIEW

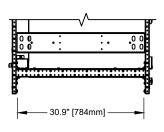

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS BASE DRAWING SMS AND 1+N 1000kVA-1200kVA WITH BFD LIEBERT EXL S1 DWG. NO.


ES1-05-S002

DATE (LATEST REV.)

03/27/2018




1. ALL DIMENSIONS ARE IN inches [mm].

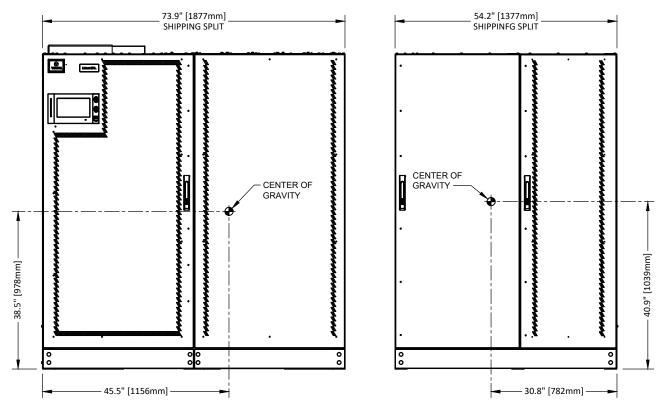

FRONT VIEV	۷	
------------	---	--

SHEET NO. 6 OF 6	J. SHIPMAN	UPS SHIPPING	DWG. NO. ES1-05-S002	
6 OF 6 ECN NO.	J. SHIPMAN DESIGNED BY: S. MAJOR APPROVED BY: S. MAJOR	UPS SHIPPING SMS AND 1+N 1000kVA-1200kVA WITH BFD LIEBERT EXL S1	ES1-05-S002 DATE (LATEST REV.) 03/27/2018 REVISION 1050 DEARBORN DR P.O. BOX 29186 2 COLUMBUS, 0H 43225	

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

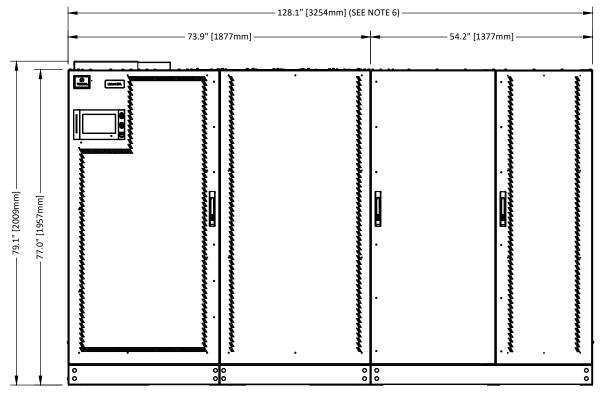

FRONT VIEW

-	36.0" [914mm] ———	-
-	35.4" [899mm] ——	-
		8
		•
-		•
	·	٠

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
1 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


OUTLINE DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH OPTIONAL SHARING INDUCTOR
LIEBERT EXL S1

ES1-05-S003


DATE (LATEST REV.)

03/23/2018



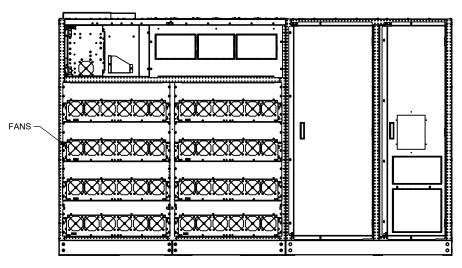

FRONT VIEW (DOORS REMOVED)

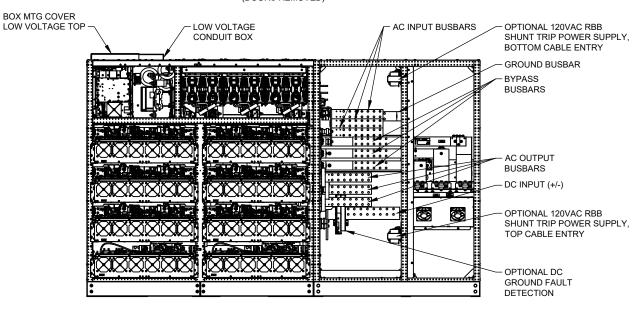

FRONT VIEW (DOORS AND PANELS REMOVED)

SHEET NO.	DRAWN BY:
2 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


MAIN COMPONENTS DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH OPTIONAL SHARING INDUCTOR LIEBERT EXL S1


ES1-05-S003 DATE (LATEST REV.)

03/23/2018


1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



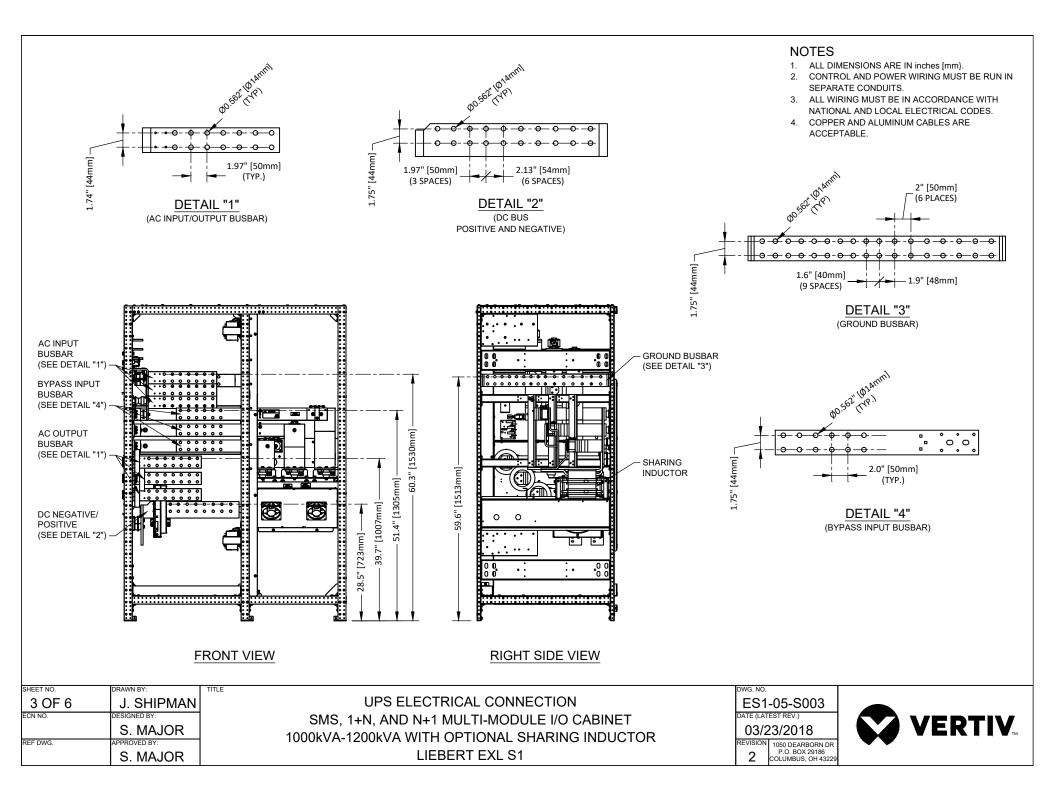


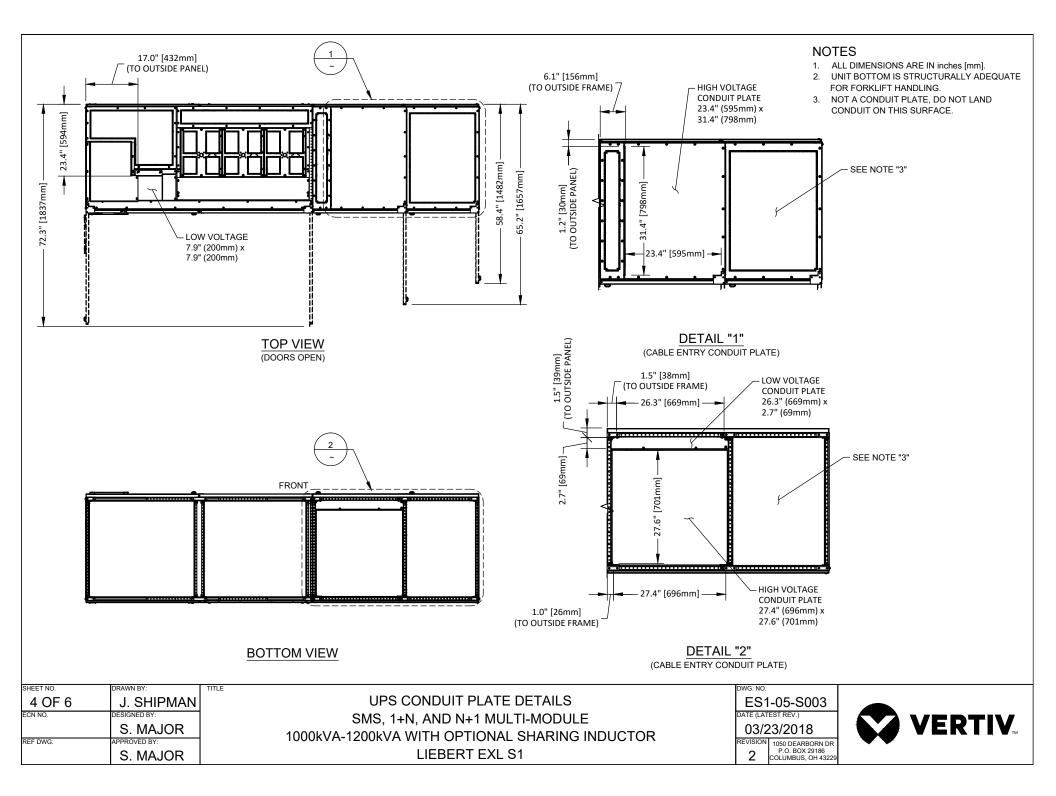


- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

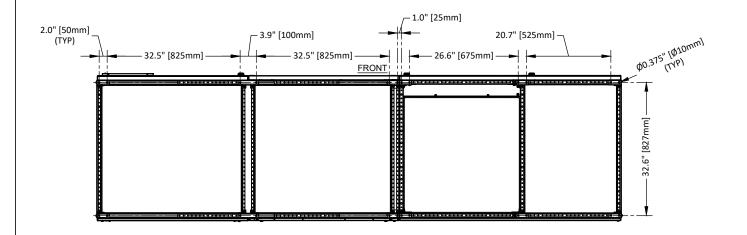

BOTTOM VIEW (BOLT HOLE LAYOUT)

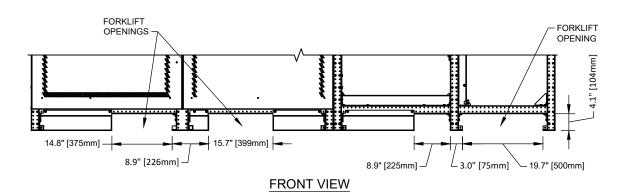

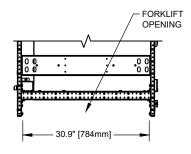

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

UPS BASE DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH OPTIONAL SHARING INDUCTOR
LIEBERT EXL S1

DWG. NO.


ES1-05-S003

DATE (LATEST REV.)

03/23/2018



1. ALL DIMENSIONS ARE IN inches [mm].

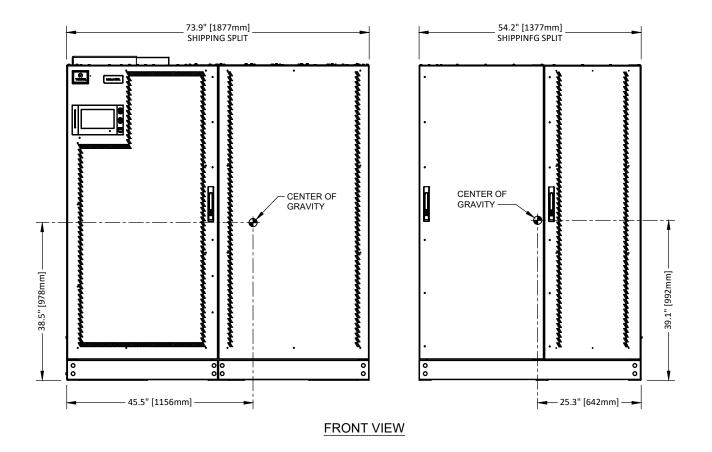


SHEET NO.	DRAWN BY:	7
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS SHIPPING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH OPTIONAL SHARING INDUCTOR
LIEBERT EXL S1

DWG. NO.
ES1-05-S003
DATE (LATEST REV.)
03/23/2018
ES1-05-S003 DATE (LATEST REV.)



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

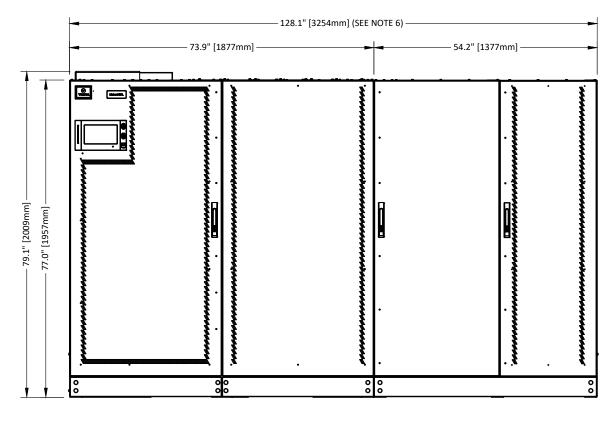

- 36.0" [914mm] -

35.4" [899mm]

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	TITLE
1 OF 6	N.M.	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	1
	S. MAJOR	


OUTLINE DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH BFD AND SHARING INDUCTOR
LIEBERT EXL S1

ES1-05-S004


06/12/2019

DWG. NO.



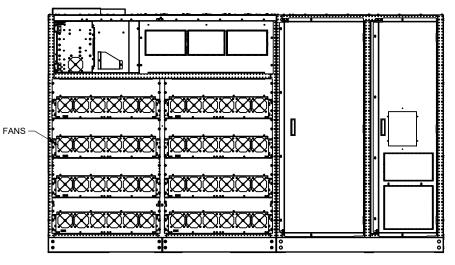

FRONT VIEW (DOORS REMOVED)

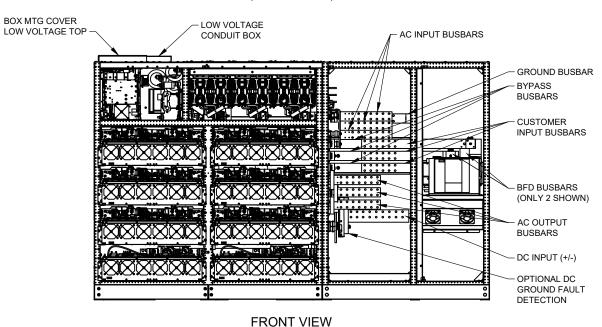

(DOORS AND PANELS REMOVED)

SHEET NO.	DRAWN BY:
2 OF 6	N.M.
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


MAIN COMPONENTS DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1 ES1-05-S004


DATE (LATEST REV.)

DWG. NO.


06/12/2019



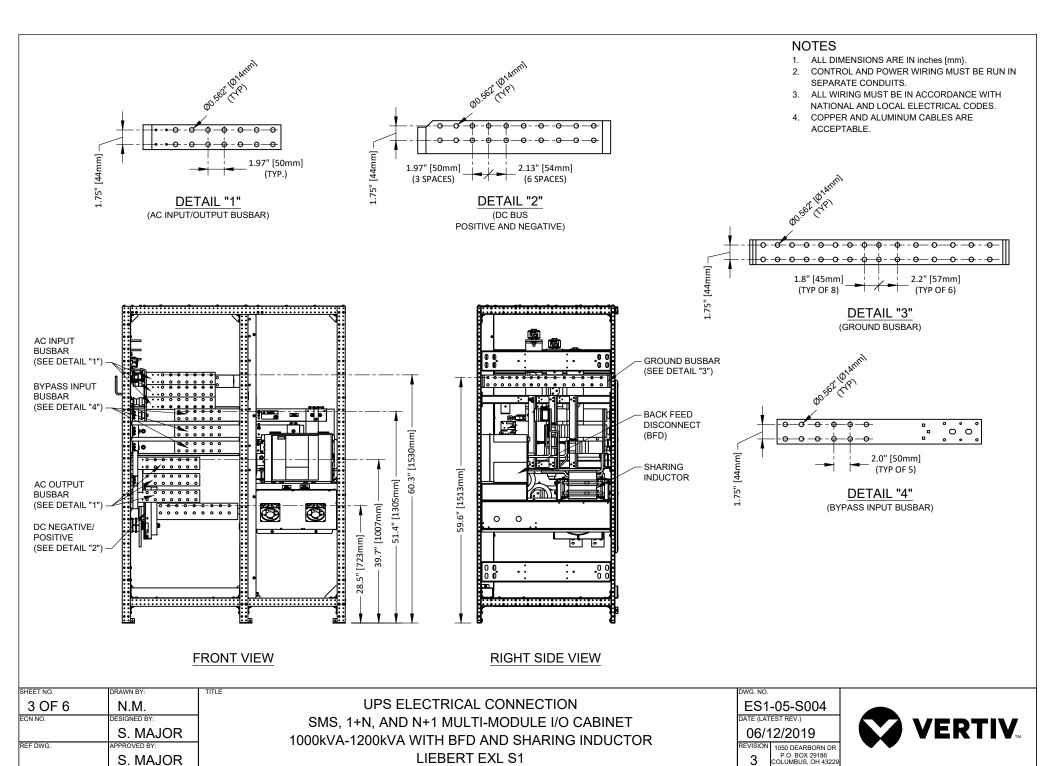


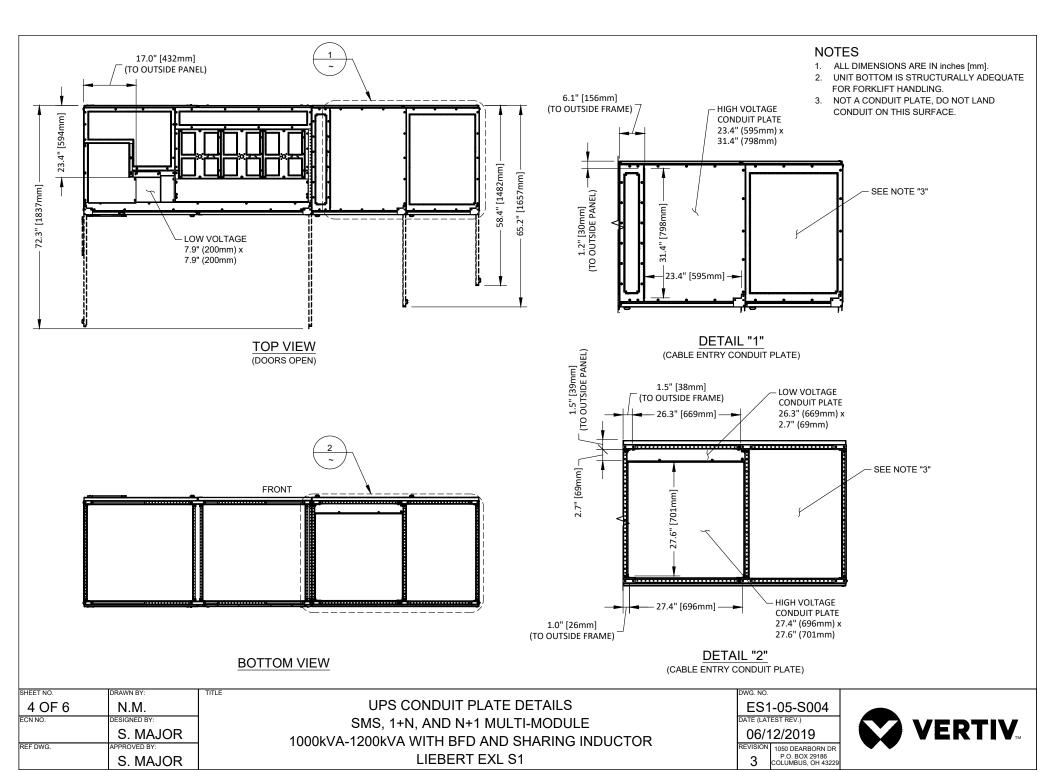

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

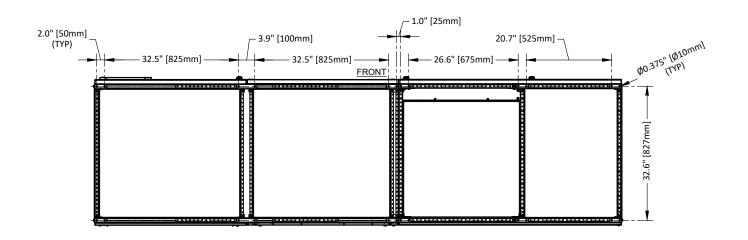

TOP VIEW (FOOTPRINT SPACING)

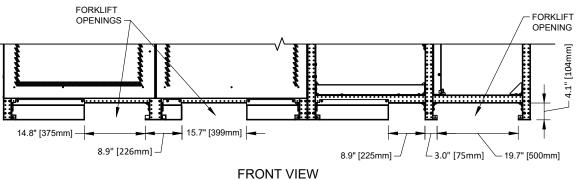

RIGHT SIDE VIEW

TITLE DWG. NO. **UPS BASE DRAWING** DATE (LATEST REV.) SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH BFD AND SHARING INDUCTOR LIEBERT EXL S1

ES1-05-S004

06/12/2019

REVISION 1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229




30.9" [784mm]

FORKLIFT

OPENING

SHEET NO.	DRAWN BY:
5 OF 6	N.M.
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

1. ALL DIMENSIONS ARE IN inches [mm].

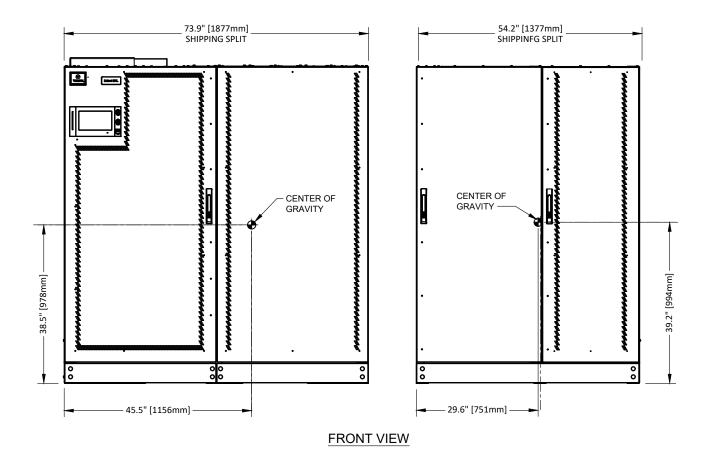

SHEET NO.	DRAWN BY:	TITLE	
6 OF 6	N.M.		

S. MAJOR

S. MAJOR

REF DWG.

UPS SHIPPING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH BFD AND SHARING INDUCTOR
LIEBERT EXL S1


DWG. NO.
ES1-05-S004
DATE (LATEST REV.)

06/12/2019

REVISION	1050	DEA	RBORN	DR
2			X 2918	
J	COLU	мви	S, OH 4	3229



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- 5. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

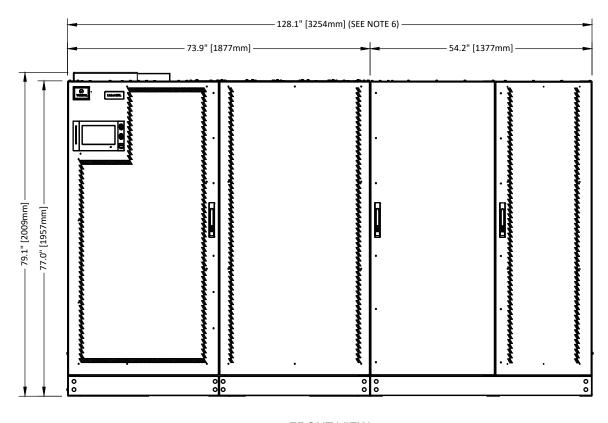

35.4" [899mm]

36.0" [914mm] -


FRONT VIEW

RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:	Г
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

OUTLINE DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH COMMON MODE CHOKE LIEBERT EXL S1 ES1-05-S005
DATE (LATEST REV.)



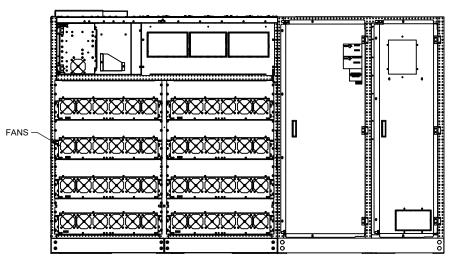


FRONT VIEW (DOORS REMOVED)

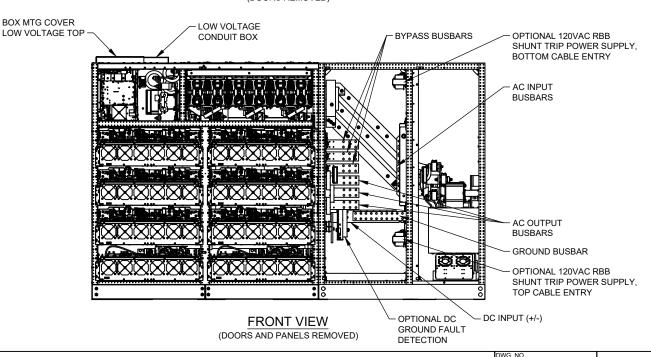

MAIN COMPONENTS DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH COMMON MODE CHOKE LIEBERT EXL S1 ES1-05-S005

03/27/2018



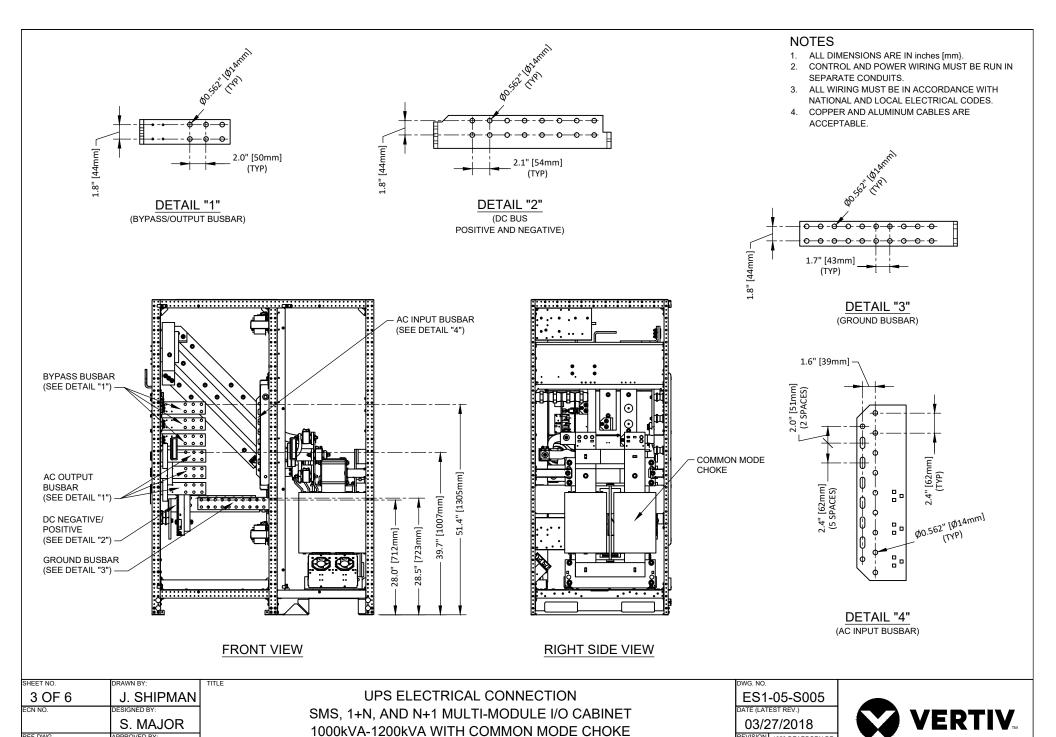


LIEBERT EXL S1

1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229

REF DWG.

S. MAJOR

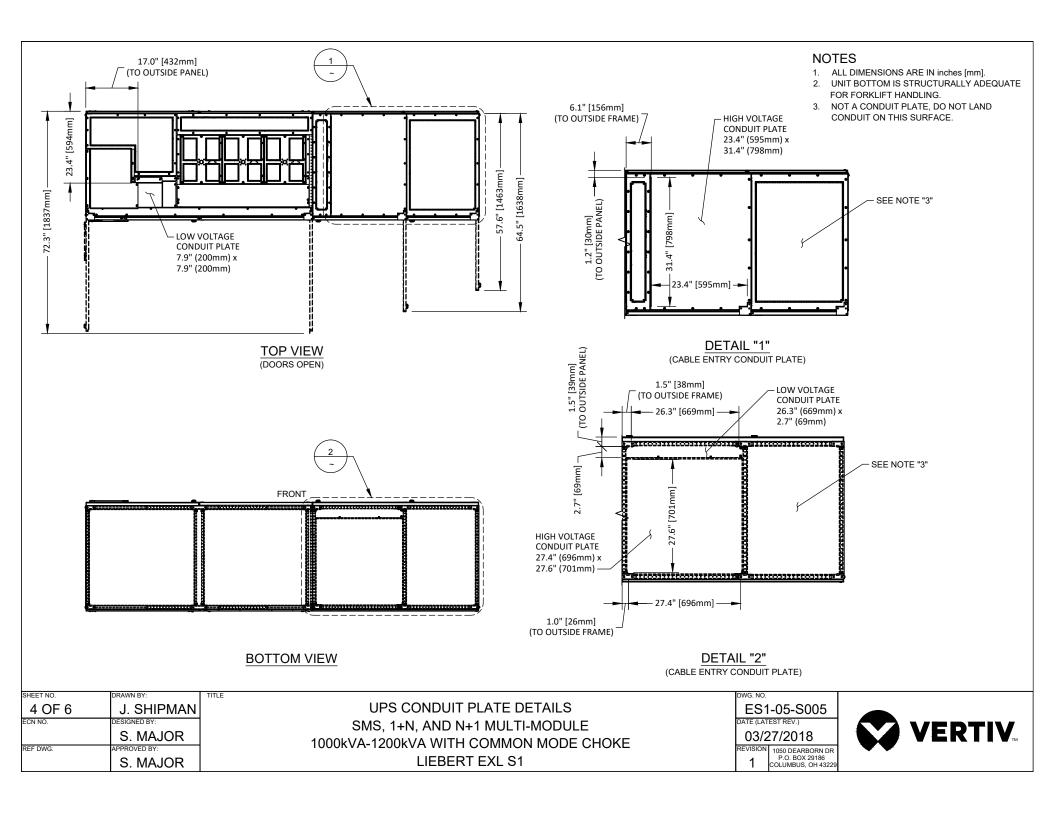


2.0" [50mm] (TYP) 32.5" [825mm] 32.5" [825mm] 26.6" [675mm] 20.7" [525mm] 32.5" [670mm] 20.7" [525mm] 20.7" [525mm

NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

BOTTOM VIEW (BOLT HOLE LAYOUT)

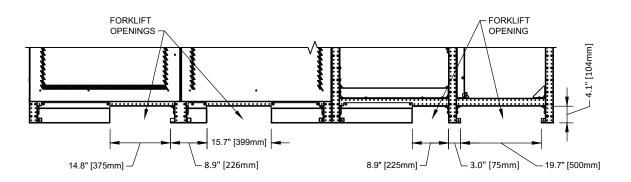

30.9" [784mm]

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


UPS BASE DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH COMMON MODE CHOKE LIEBERT EXL S1 ES1-05-S005

DATE (LATEST REV.)

03/27/2018



1. ALL DIMENSIONS ARE IN inches [mm].

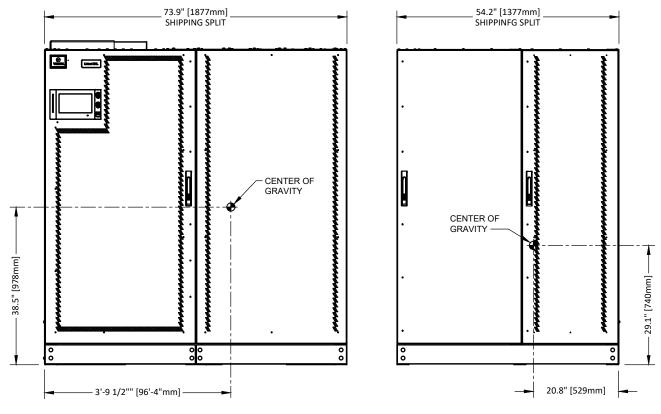

FRONT VIEW


SHEET NO.	DRAWN BY:	T
6 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

UPS SHIPPING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH COMMON MODE CHOKE
LIEBERT EXL S1

DWG. NO.
ES1-05-S005 DATE (LATEST REV.)
DATE (LATEST REV.)
03/27/2018



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT. 36" [914mm] FRONT AND TOP ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- 5. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

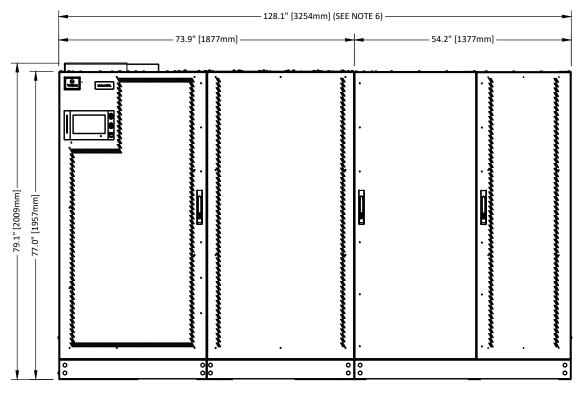

FRONT VIEW

RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:
1 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

OUTLINE DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH COMMON MODE CHOKE AND BFD
LIEBERT EXL S1


ES1-05-S006 DATE (LATEST REV.) 07/11/2017





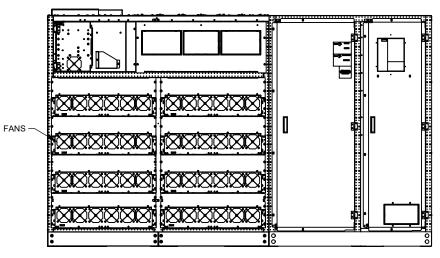


FRONT VIEW (DOORS REMOVED)

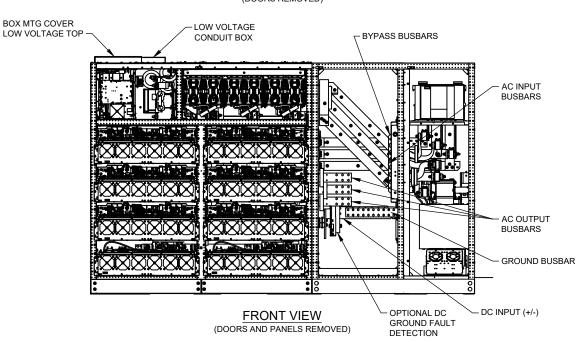

SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

MAIN COMPONENTS DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH COMMON MODE CHOKE AND BFD LIEBERT EXL S1 ES1-05-S006 DATE (LATEST REV.) 07/11/2017



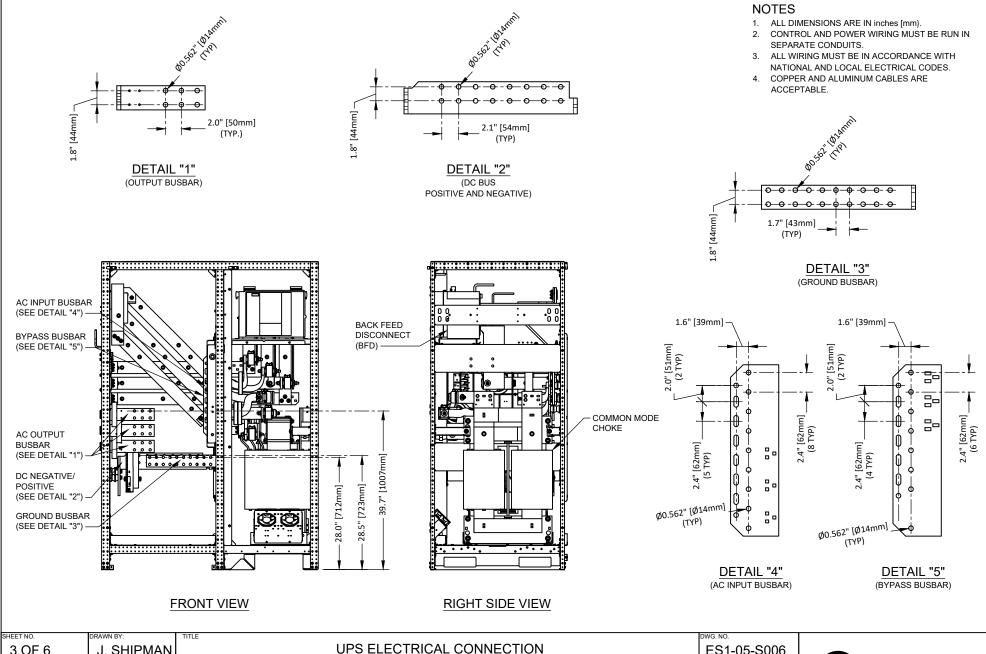

SHEET NO.	DRAWN BY:
3 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


UPS ELECTRICAL CONNECTION
SMS, 1+N, AND N+1 MULTI-MODULE I/O CABINET
1000kVA-1200kVA WITH COMMON MODE CHOKE AND BFD
LIEBERT EXL S1

ES1-05-S006


DATE (LATEST REV.)

07/11/2017




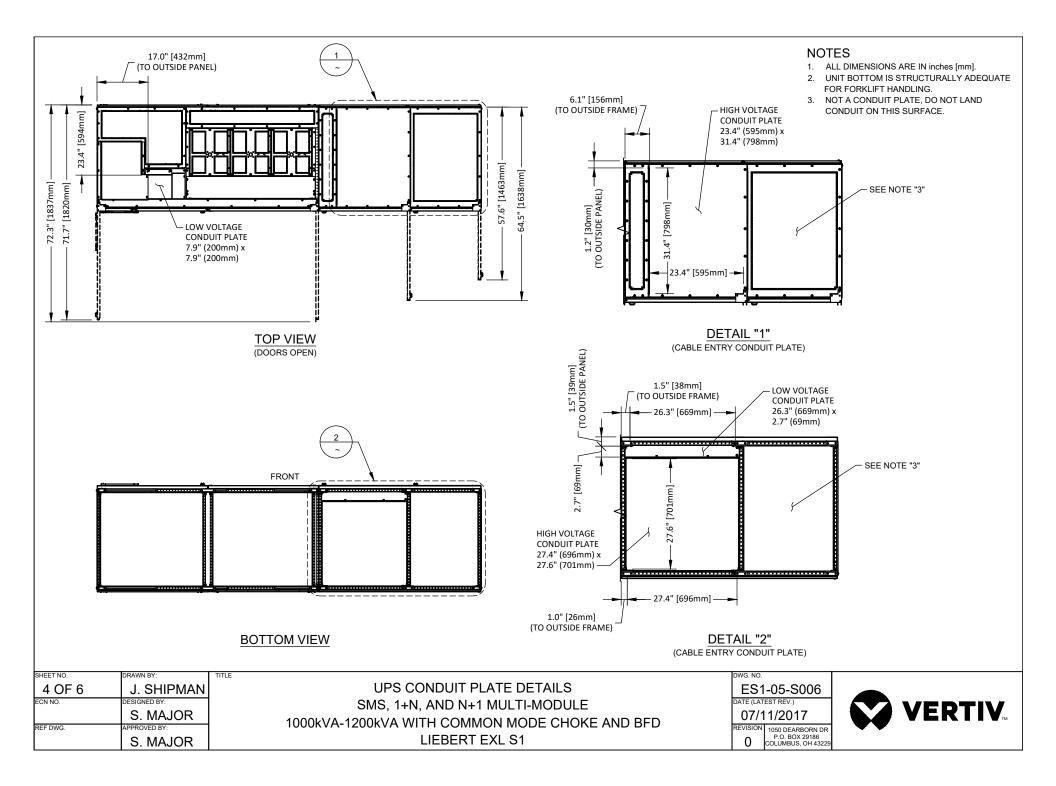

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

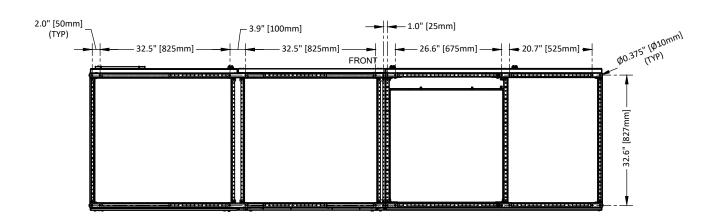

BOTTOM VIEW (BOLT HOLE LAYOUT)

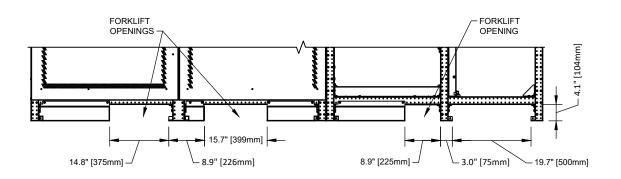

FRONT VIEW

RIGHT SIDE VIEW

		٨	
	'	/	
0 0 0 0	•:	:•	•0 0 0 0
B			Ð
-	– 30.9" [7	'84mm] —	-

1	
SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

TITLE

UPS BASE DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH COMMON MODE CHOKE AND BFD LIEBERT EXL S1 DWG NO.

ES1-05-S006


DATE (LATEST REV.)

07/11/2017

REVISION 1050 DEARBORN DR P.O. BOX 29166

0 COLUMBUS, 0H 43229



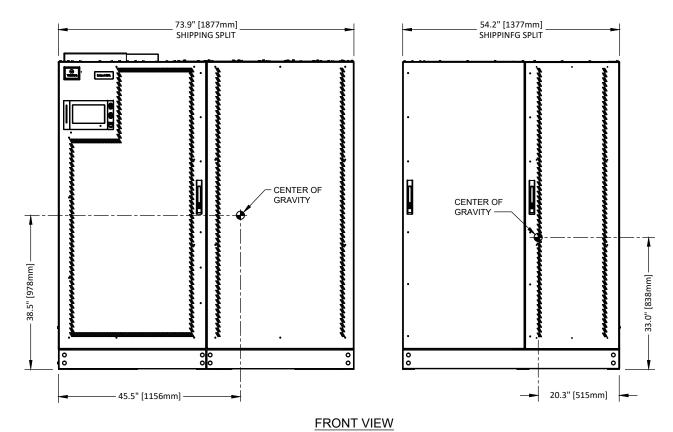


SHEET NO.		DRAWN BY:	TITLE
6 OF	6	J. SHIPMAN	
ECN NO.		DESIGNED BY:	
		S. MAJOR	
REF DWG.		APPROVED BY:	
		S. MAJOR	

UPS SHIPPING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH COMMON MODE CHOKE AND BFD
LIEBERT EXL S1

DWG. NO.		
ES1-05-S006		
DATE (LAT	EST REV.)	
07/11/2017		
REVISION	1050 DEARBORN DR	
0	1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229	



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT REQUIRED FOR AIR EXHAUST. 36" [914mm] FRONT ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- 4. ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

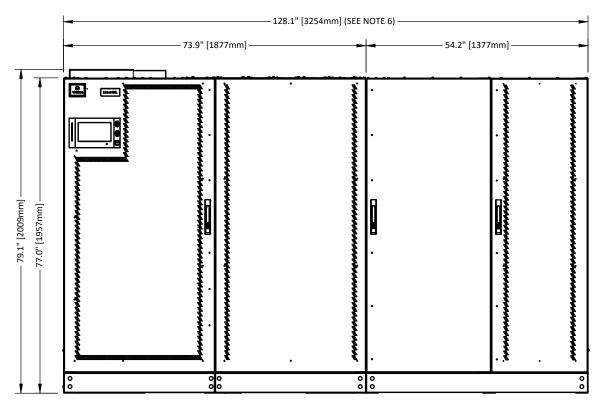

36.0" [914mm] _______ 35.4" [899mm] ______

FRONT VIEW

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	7
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

OUTLINE DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH COMMON MODE CHOKE AND SHARING INDUCTOR
LIEBERT EXL S1


DMG. NO.

ES1-05-S007


DATE (LATEST REV.)

03/27/2018



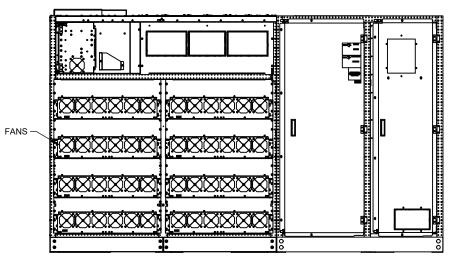

FRONT VIEW (DOORS REMOVED)

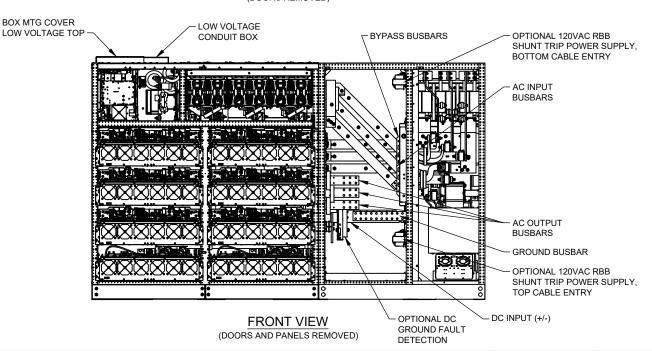


SHEET NO.	DRAWN BY:	TITLE
2 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	1
REF DWG.	APPROVED BY:	
	S. MAJOR	


MAIN COMPONENTS DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH COMMON MODE CHOKE AND SHARING INDUCTOR
LIEBERT EXL S1

ES1-05-S007
DATE (LATEST REV.)

03/27/2018



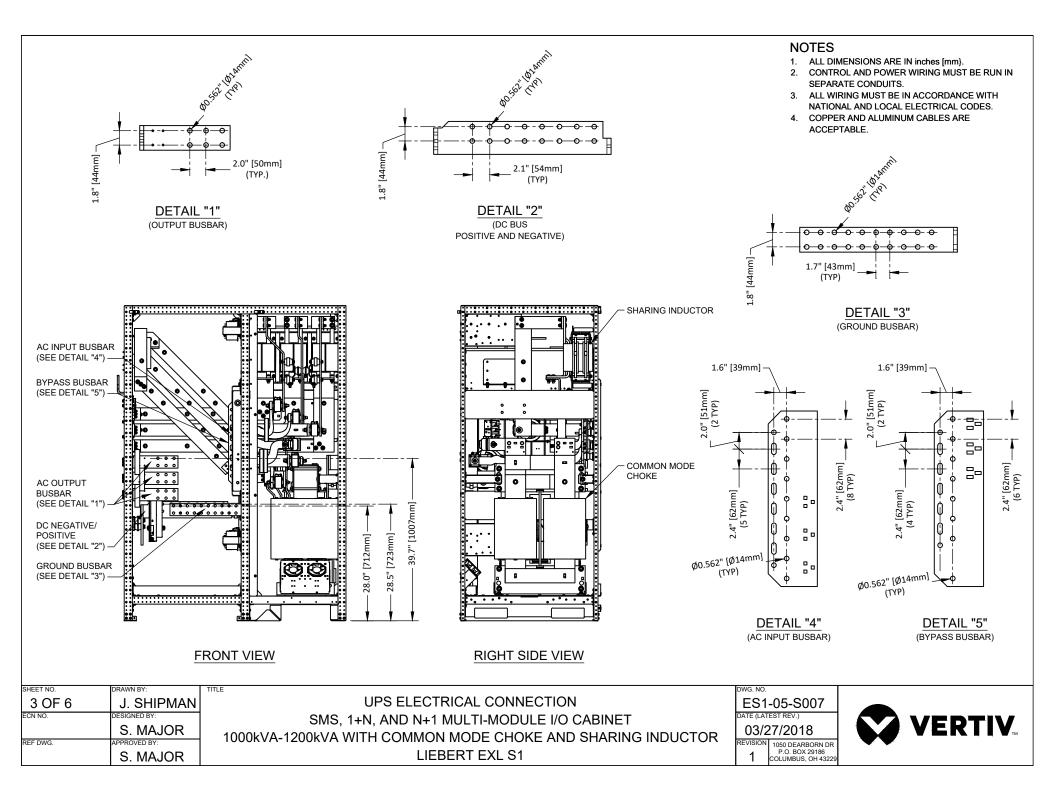

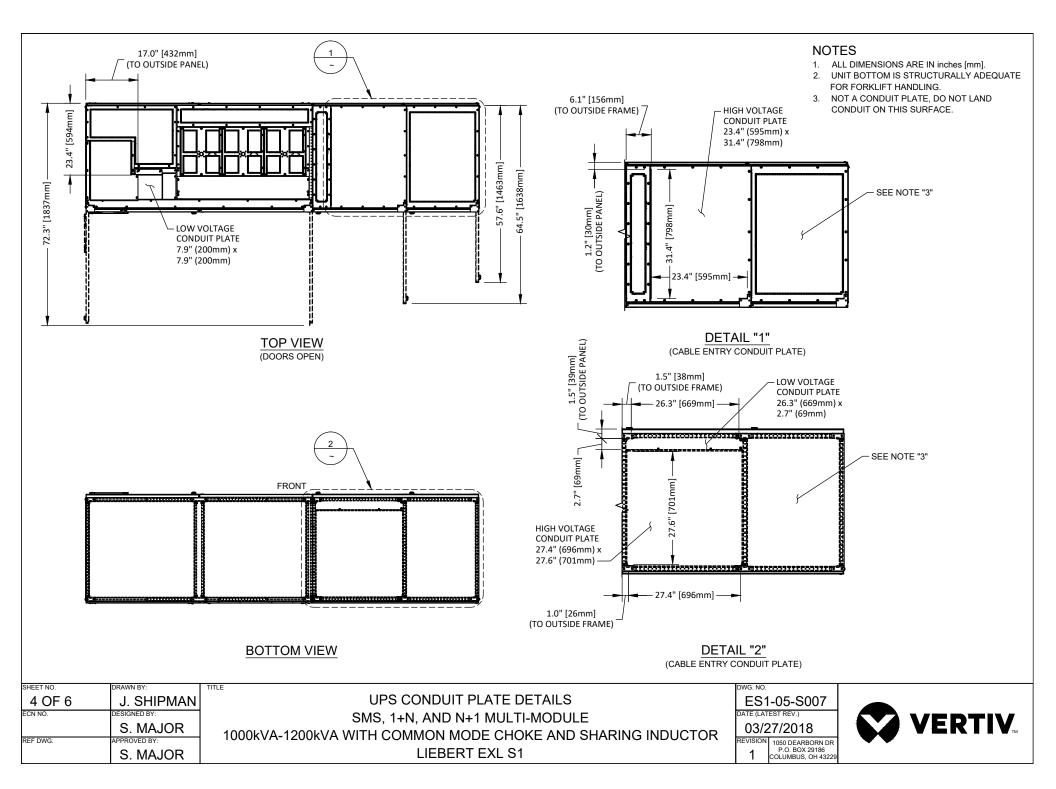


2.0" [50mm] - 1.0" [25mm] - 3.9" [100mm] 32.5" [825mm] 32.5" [825mm] -→ 20.7" [525mm] → - 26.6" [675mm] FRONT [827mm]


NOTES

- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT HANDLING.

BOTTOM VIEW (BOLT HOLE LAYOUT)

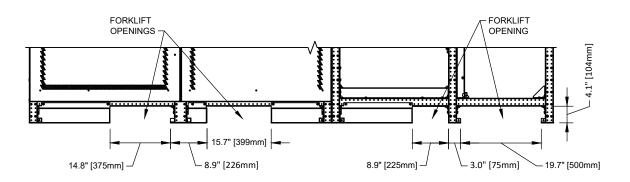

FRONT VIEW

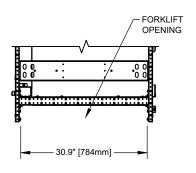

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:
5 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

(TYP)


UPS BASE DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH COMMON MODE CHOKE AND SHARING INDUCTOR LIEBERT EXL S1

ES1-05-S007 DATE (LATEST REV.) 03/27/2018

1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



1. ALL DIMENSIONS ARE IN inches [mm].

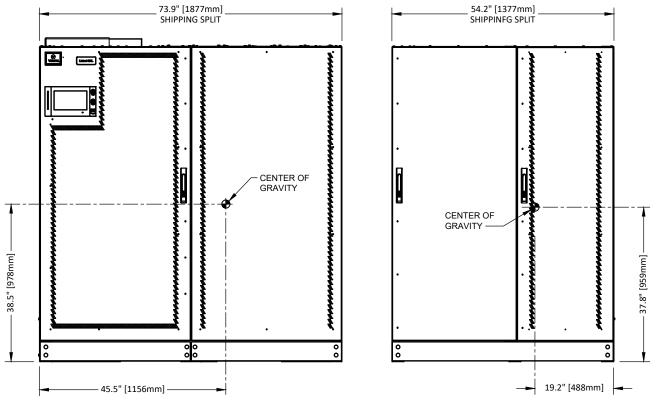

FRONT VIEW


SHEET NO.	DRAWN BY:
6 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR


UPS SHIPPING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH COMMON MODE CHOKE AND SHARING INDUCTOR
LIEBERT EXL S1

DWG. NO.
ES1-05-S007
DATE (LATEST REV.)
03/27/2018



- 1. ALL DIMENSIONS ARE IN inches [mm].
- 2. 24" [610mm] MINIMUM CLEARANCE ABOVE UNIT. 36" [914mm] FRONT AND TOP ACCESS IS REQUIRED FOR SERVICE.
- 3. KEEP CABINET WITHIN 15 DEGREES OF VERTICAL.
- ALL WIRING MUST BE IN ACCORDANCE WITH NATIONAL AND LOCAL ELECTRICAL CODES.
- UNIT BOTTOM IS STRUCTURALLY ADEQUATE FOR FORKLIFT
- 6. WIDTH DIMENSIONS INCLUDE SIDE PANELS.

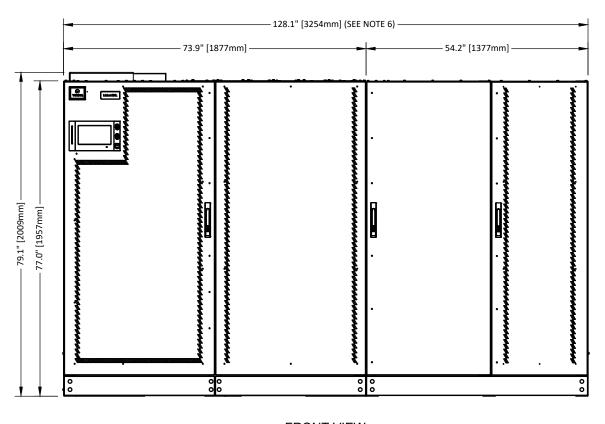

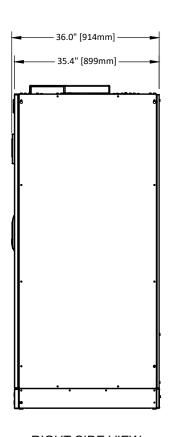

FRONT VIEW

RIGHT SIDE VIEW


SHEET NO.	DRAWN BY:	Γ
1 OF 6	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	,
REF DWG.	APPROVED BY:	
	S. MAJOR	

OUTLINE DRAWING SMS, 1+N, AND N+1 MULTI-MODULE 1000kVA-1200kVA WITH COMMON MODE CHOKE, BFD AND SHARING INDUCTOR REVISION 1050 DEARBORN DR LIEBERT EXL S1


ES1-05-S008 DATE (LATEST REV.)

07/11/2017 P.O. BOX 29186 COLUMBUS, OH 43229



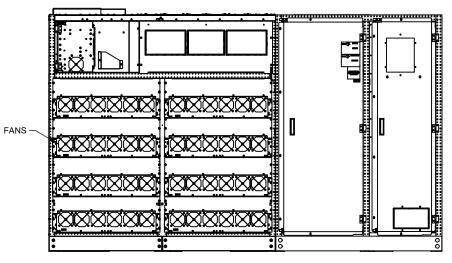

FRONT VIEW (DOORS REMOVED)

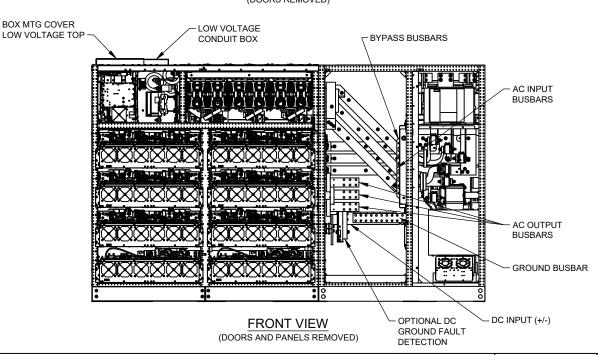

SHEET NO.	DRAWN BY:
2 OF 6	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

TITLE

MAIN COMPONENTS DRAWING
SMS, 1+N, AND N+1 MULTI-MODULE
1000kVA-1200kVA WITH COMMON MODE CHOKE, BFD AND SHARING INDUCTOR
LIEBERT EXL S1


MAIN COMPONENTS DRAWING


DATE (LAT
07/1
REVISION
0

ES1-05-S008 DATE (LATEST REV.)

07/11/2017



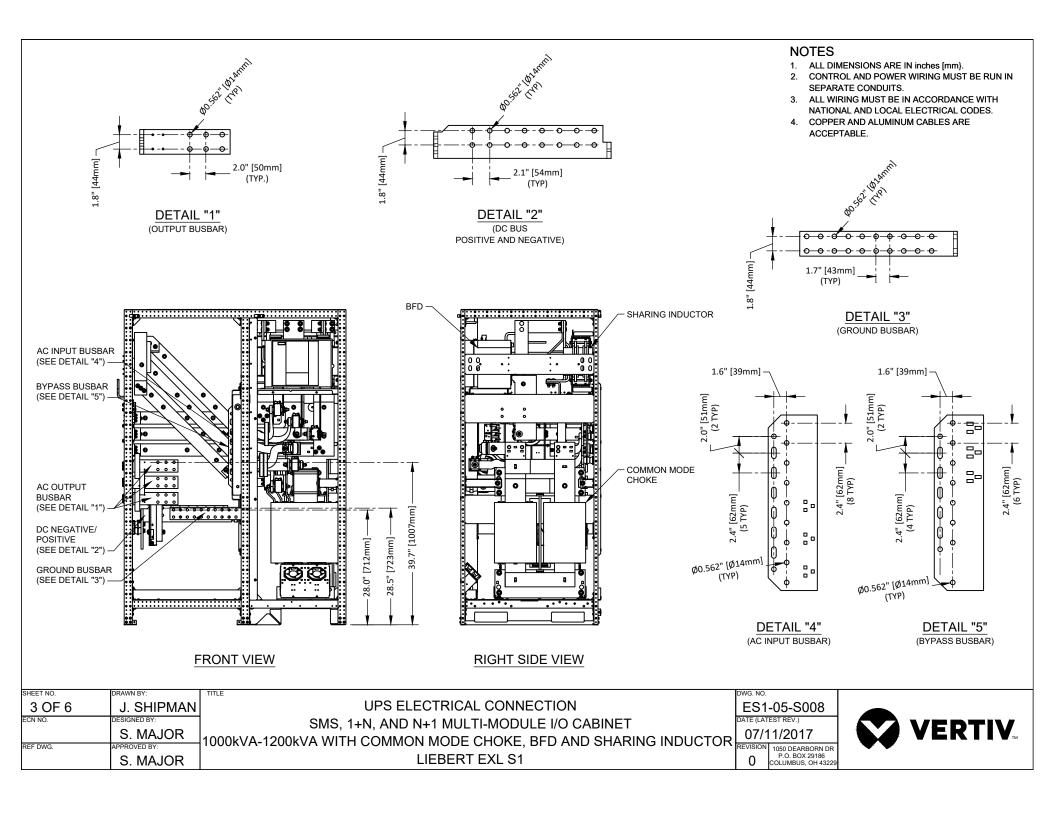

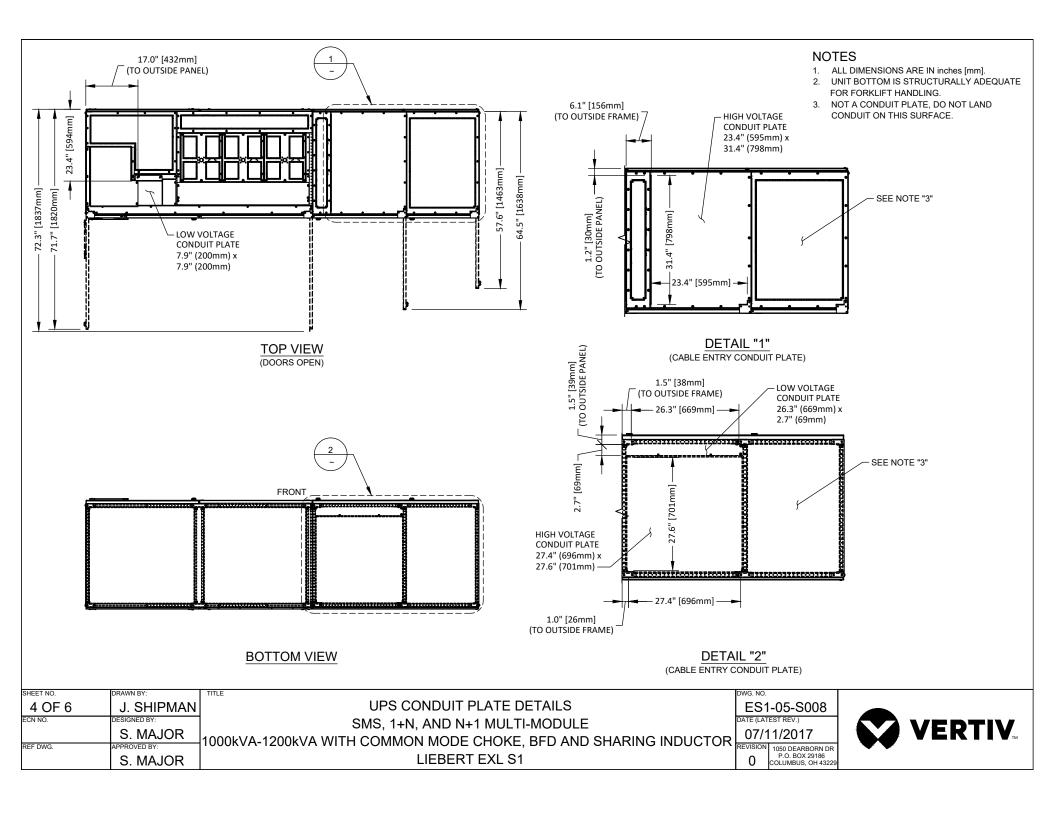

BOTTOM VIEW (BOLT HOLE LAYOUT)

FORKLIFT OPENING | 15.7" [399mm] | 14.8" [375mm] | 19.7" [500mm]

FRONT VIEW

1		/	P
0 0 0 0	• :	: •	.0 0 0 0
4	7	•••••	
			7
-	— 30.9" [⁷	784mm] —	-

NOTES

ALL DIMENSIONS ARE IN inches [mm].
 UNIT BOTTOM IS STRUCTURALLY ADEQUATE

FOR FORKLIFT HANDLING.

RIGHT SIDE VIEW

SHEET NO.	DRAWN BY:	TITLE
5 OF 6	J. SHIPMAN	UPS BASE DRAWING
ECN NO.	DESIGNED BY:	SMS, 1+N, AND N+1 MULTI-MODULE
	S. MAJOR	ome, firt, fitte fitt mobile
		1000kVA-1200kVA WITH COMMON MODE CHOKE. BFD AND SHARING INDUCTOR
REF DWG.	APPROVED BY:	
	S. MAJOR	LIEBERT EXL S1


DMG. NO.

ES1-05-S008

DATE (LATEST REV.)

07/11/2017



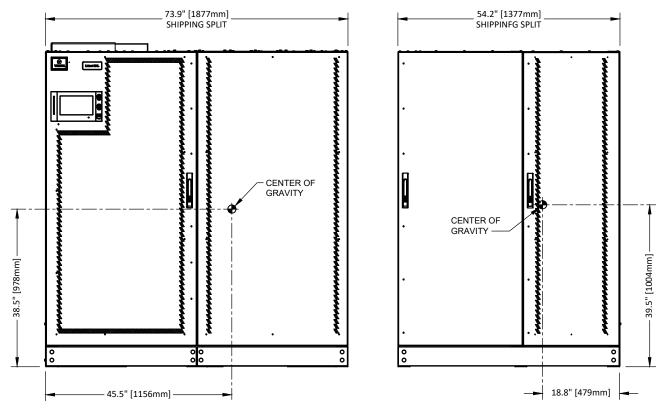


FRONT VIEW

SHEET NO.	DRAWN BY:	TITLE	I
6 OF 6	J. SHIPMAN	UPS SHIPPING	
ECN NO.	DESIGNED BY:	SMS, 1+N, AND N+1 MULTI-MODULE	
	S. MAJOR	, ,	П
		1000kVA-1200kVA WITH COMMON MODE CHOKE, BFD AND SHARING INDUCTOR	έL
REF DWG.	APPROVED BY:	reserve in the second of the s	· IF
	S. MAJOR	LIEBERT EXL S1	



OR REVISION | 050 DEARBORN DR | 0 | 050 DEARBORN DR | 0 | 050 DEARBORN DR | 0 | 050 Z9186 | 0



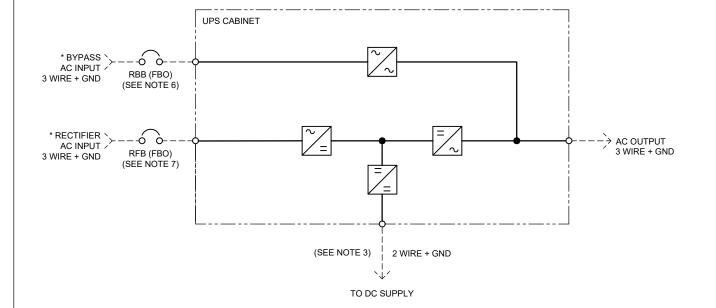

- 1. THE RECTIFIER AND BYPASS INPUTS OF THE UPS MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG. WHEN THE RECTIFIER AND BYPASS INPUT ARE NOT FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR HRG, A COMMON MODE CHOKE MUST BE ORDERED WITH THE UPS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET).
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- 3. POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- 4. UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- RBB MUST BE FURNISHED WITH:
 - SHUNT TRIP WITH MAX 120VAC COIL OPERATING
 VOLTAGE AND MAX 5A CURRENT. IF OUTSIDE OF
 THESE LIMITS AN EXTERNAL RELAY WITH MAX 120VAC
 COIL OPERATING VOLTAGE AND MAX 5A COIL PULL-IN
 CURRENT MUST BE FURNISHED TO OPERATE THE
 SHUNT TRIP. SHUNT TRIP POWER PROVIDED BY
 VERTIV.
- B. 1A/1B AUXILIARY CONTACT.
- RFB MUST BE FURNISHED WITH 1A/1B AUXILIARY CONTACT.
- 8. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

SYSTEM NOTE

A WRAP-AROUND MAINTENANCE BYPASS (FURNISHED BY VERTIV OR OTHERS) IS REQUIRED TO PERMIT ALL COMPONENTS OF THE UPS MODULE TO BE SAFELY SERVICED WHILE MAINTAINING POWER TO THE LOAD

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS RBB - REMOTE BACKFEED BREAKER

RFB - RECTIFIER FEED BREAKER

____ FIELD SUPPLIED WIRING

 TITLE


ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS
DUAL INPUT UPS
LIEBERT EXL S1

DWG. NO. ES1-01-S007

ES1-01-S007 DATE (LATEST REV.)

09/16/2019



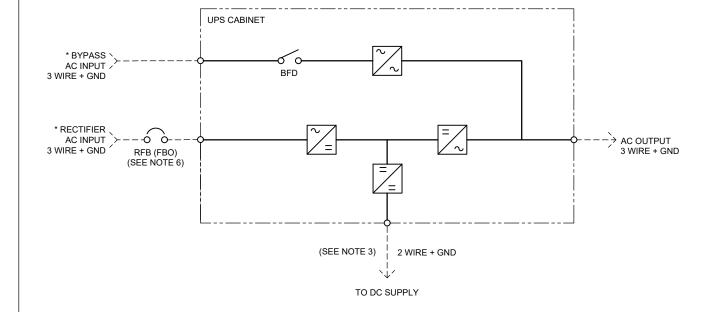

- 1. THE RECTIFIER AND BYPASS INPUTS OF THE UPS MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG. WHEN THE RECTIFIER AND BYPASS INPUT ARE NOT FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR AN HRG, A COMMON MODE CHOKE MUST BE ORDERED WITH THE UPS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET).
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FUNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- 4. UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- RFB MUST BE FURNISHED WITH 1A/1B AUXILIARY CONTACT.
- 7. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

SYSTEM NOTE

A WRAP-AROUND MAINTENANCE BYPASS (FURNISHED BY VERTIV OR OTHERS) IS REQUIRED TO PERMIT ALL COMPONENTS OF THE UPS MODULE TO BE SAFELY SERVICED WHILE MAINTAINING POWER TO THE LOAD

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS RBB - REMOTE BACKFEED BREAKER RFB - RECTIFIER FEED BREAKER

_____ FIELD SUPPLIED WIRING

 TITLE


ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS
DUAL INPUT UPS WITH BFD
LIEBERT EXL S1

DWG. NO.

ES1-01-S008 DATE (LATEST REV.)

09/16/2019



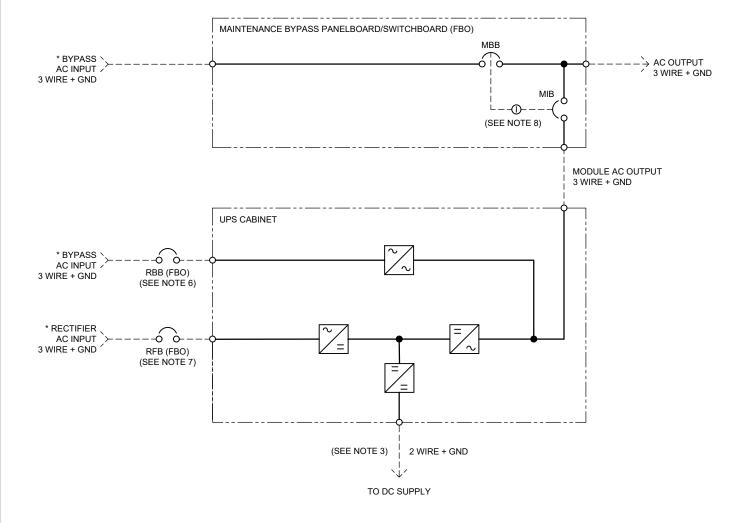

- 1. THE BYPASS INPUT OF THE UPS AND THE INPUT OF THE MAINTENANCE BYPASS MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG. IF THE RECTIFIER AND BYPASS INPUT OF THE UPS ARE NOT FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG, A COMMON MODE CHOKE MUST BE ORDERED WITH THE UPS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET).
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- 5. CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 6. RBB MUST BE FURNISHED WITH:
- A. SHUNT TRIP WITH MAX 120VAC COIL OPERATING
 VOLTAGE AND MAX 5A CURRENT. IF OUTSIDE OF
 THESE LIMITS AN EXTERNAL RELAY WITH MAX 120VAC
 COIL OPERATING VOLTAGE AND MAX 5A COIL PULL-IN
 CURRENT MUST BE FURNISHED TO OPERATE THE
 SHUNT TRIP. SHUNT TRIP POWER PROVIDED BY
 VERTIV.
- B. 1A/1B AUXILIARY CONTACT.
- RFB MUST BE FURNISHED WITH 1A/1B AUXILIARY CONTACT.
- 8. OPTIONAL INTERLOCK SHOWN.
- 9. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.
 - * EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS

RBB - REMOTE BACKFEED BREAKER

RFB - RECTIFIER FEED BREAKER

MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

___ FIELD SUPPLIED WIRING

 TITLE

ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS
DUAL INPUT UPS WITH 2 BREAKER EXTERNAL MAINTENANCE BYPASS
LIEBERT EXL S1


DWG. NO.

ES1-01-S009

DATE (LATEST REV.)

09/16/2019



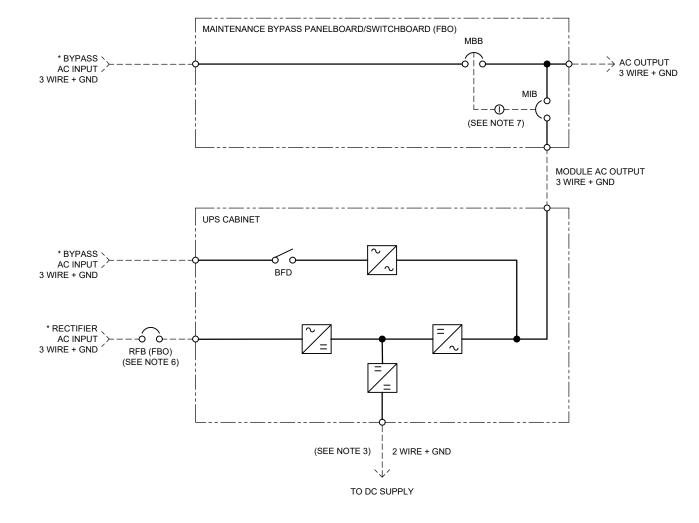

- 1. THE BYPASS INPUT OF THE UPS AND THE INPUT OF THE MAINTENANCE BYPASS MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG. IF THE RECTIFIER AND BYPASS INPUT OF THE UPS ARE NOT FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG, A COMMON MODE CHOKE MUST BE ORDERED WITH THE UPS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET).
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- 3. POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 6. RFB MUST BE FURNISHED WITH AUXILIARY CONTACT.
- 7. OPTIONAL INTERLOCK SHOWN.
- 8. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS

BFD - BACKFEED DISCONNECT

RFB - RECTIFIER FEED BREAKER

MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

---- FIELD SUPPLIED WIRING

 TITLE

ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS, DUAL INPUT UPS WITH
2 BREAKER EXTERNAL MAINTENANCE BYPASS AND BFD
LIEBERT EXL S1


DWG. NO.

ES1-01-S010

DATE (LATEST REV.)

09/16/2019



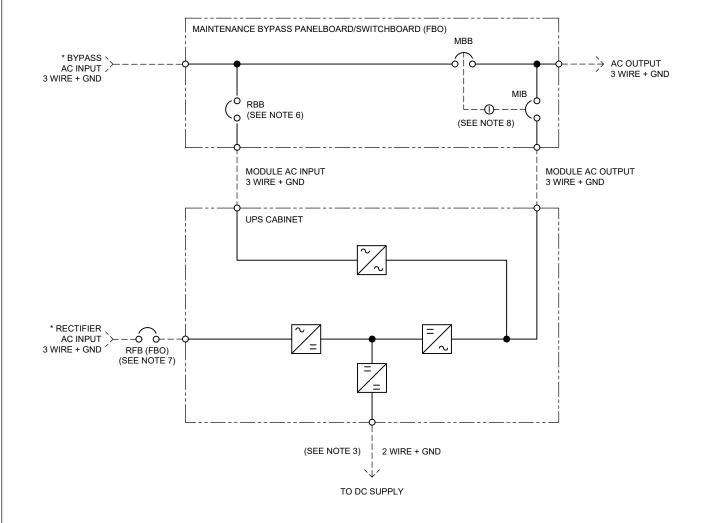

- 1. THE RECTIFIER INPUT OF THE UPS AND THE INPUT OF THE MAINTENANCE BYPASS MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG. IF THE RECTIFIER INPUT OF THE UPS AND THE INPUT OF THE MAINTENANCE BYPASS ARE NOT FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG, A COMMON MODE CHOKE MUST BE ORDERED WITH THE UPS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET).
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- 5. CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 6. RBB MUST BE FURNISHED WITH:
- A. SHUNT TRIP WITH MAX 120VAC COIL OPERATING
 VOLTAGE AND MAX 5A CURRENT. IF OUTSIDE OF
 THESE LIMITS AN EXTERNAL RELAY WITH MAX 120VAC
 COIL OPERATING VOLTAGE AND MAX 5A COIL PULL-IN
 CURRENT MUST BE FURNISHED TO OPERATE THE
 SHUNT TRIP. SHUNT TRIP POWER PROVIDED BY
 VERTIV.
- B. 1A/1B AUXILIARY CONTACT.
- RFB MUST BE FURNISHED WITH 1A/1B AUXILIARY CONTACT.
- 8. OPTIONAL INTERLOCK SHOWN.
- 9. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.
 - * EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS RBB - REMOTE BACKFEED BREAKER RFB - RECTIFIER FEED BREAKER MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

--- FIELD SUPPLIED WIRING

 TITLE


ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS
DUAL INPUT UPS WITH 3 BREAKER EXTERNAL MAINTENANCE BYPASS
LIEBERT EXL S1

DWG. NO.

ES1-01-S011

DATE (LATEST REV.)
09/16/2019



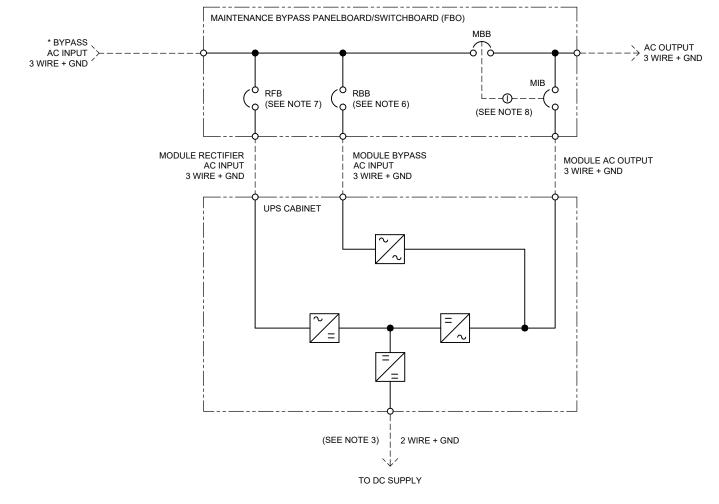

- INPUT OF THE MAINTENANCE BYPASS MUST BE FED FROM A SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG.
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT.
- UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 6. RBB MUST BE FURNISHED WITH:
- A. SHUNT TRIP WITH MAX 120VAC COIL OPERATING
 VOLTAGE AND MAX 5A CURRENT. IF OUTSIDE OF
 THESE LIMITS AN EXTERNAL RELAY WITH MAX 120VAC
 COIL OPERATING VOLTAGE AND MAX 5A COIL PULL-IN
 CURRENT MUST BE FURNISHED TO OPERATE THE
 SHUNT TRIP. SHUNT TRIP POWER PROVIDED BY
 VERTIV.
- B. 1A/1B AUXILIARY CONTACT.
- . RFB MUST BE FURNISHED WITH 1A/1B AUXILIARY CONTACT.
- OPTIONAL INTERLOCK SHOWN.
- 9. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS

RBB - REMOTE BACKFEED BREAKER RFB - RECTIFIER FEED BREAKER

MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

____ FIELD SUPPLIED WIRING

SHEET NO.	DRAWN BY:
1 OF 1	N. M.
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
REF DWG.	APPROVED BT.

TITLE

ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS
DUAL INPUT UPS WITH 4 BREAKER EXTERNAL MAINTENANCE BYPASS
LIEBERT EXL S1


DWG. NO.

ES1-01-S012

DATE (LATEST REV.)

09/17/2019



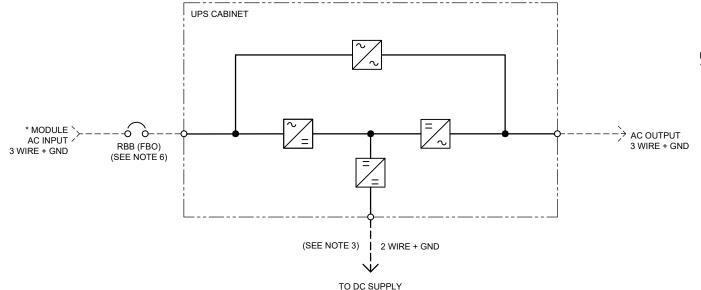

- INPUT OF THE UPS MUST BE FED FROM A SOLIDLY
 GROUNDED WYE SOURCE OR GROUNDED THROUGH AN
 HRG
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- 5. CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 6. RBB MUST BE FURNISHED WITH:
 - A. SHUNT TRIP WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A CURRENT. IF OUTSIDE OF THESE LIMITS AN EXTERNAL RELAY WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A COIL PULL-IN CURRENT MUST BE FURNISHED TO OPERATE THE SHUNT TRIP. SHUNT TRIP POWER PROVIDED BY VERTIV.
- B. 1A/1B AUXILIARY CONTACT.
- 7. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

SYSTEM NOTE

A WRAP-AROUND MAINTENANCE BYPASS (FURNISHED BY VERTIV OR OTHERS) IS REQUIRED TO PERMIT ALL COMPONENTS OF THE UPS MODULE TO BE SAFELY SERVICED WHILE MAINTAINING POWER TO THE LOAD

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS RBB - REMOTE BACKFEED BREAKER

___ FIELD SUPPLIED WIRING

 TITLE

ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS
SINGLE INPUT UPS
LIEBERT EXL S1


ES1-01-S001

DATE (LATEST REV.)

OWG. NO.

09/16/2019



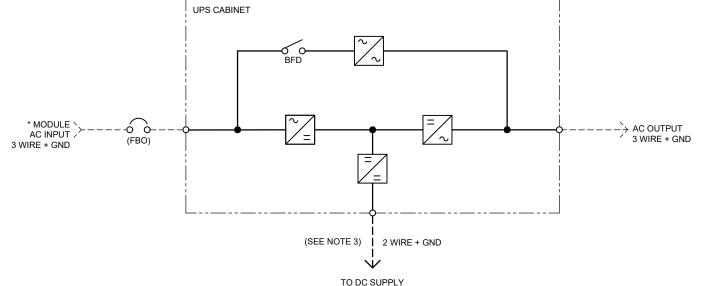

- INPUT OF THE UPS MUST BE FED FROM A SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG.
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FUNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- 4. UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- 5. CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 6. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

SYSTEM NOTE

A WRAP-AROUND MAINTENANCE BYPASS (FURNISHED BY VERTIV OR OTHERS) IS REQUIRED TO PERMIT ALL COMPONENTS OF THE UPS MODULE TO BE SAFELY SERVICED WHILE MAINTAINING POWER TO THE LOAD

BFD - BACKFEED DISCONNECT FBO - FURNISHED BY OTHERS

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

___ FIELD SUPPLIED WIRING

 TITLE


ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS
SINGLE INPUT UPS WITH BFD
LIEBERT EXL S1

DWG. NO.

ES1-01-S002

09/16/2019



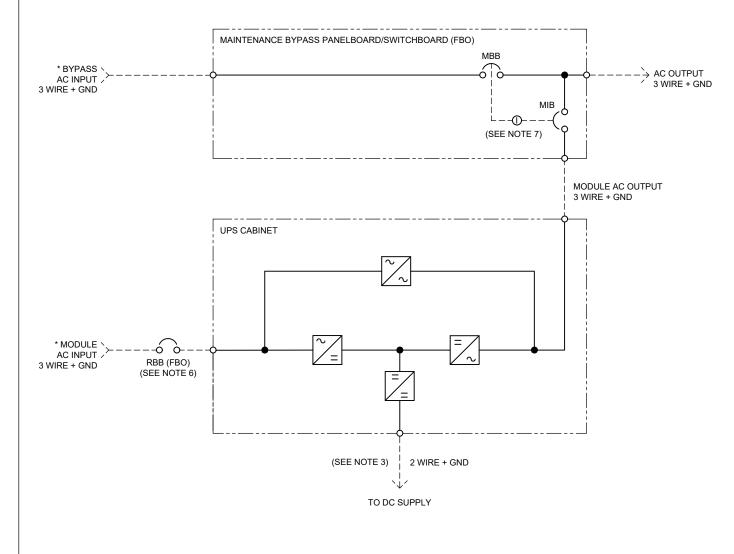

- INPUT OF THE UPS AND MAINTENANCE BYPASS MUST BE FED FROM A SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG.
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- 4. UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- 5. CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 6. RBB MUST BE FURNISHED WITH:
 - A. SHUNT TRIP WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A CURRENT. IF OUTSIDE OF THESE LIMITS AN EXTERNAL RELAY WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A COIL PULL-IN CURRENT MUST BE FURNISHED TO OPERATE THE SHUNT TRIP. SHUNT TRIP POWER PROVIDED BY VERTIV.
- B. 1A/1B AUXILIARY CONTACT.
- 7. OPTIONAL INTERLOCK SHOWN.
- 8. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS RBB - REMOTE BACKFEED BREAKER

MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

__ FIELD SUPPLIED WIRING

SHEET NO.	DRAWN BY:
1 OF 1	N.M.
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

TITLE

ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS
SINGLE INPUT UPS WITH 2 BREAKER EXTERNAL MAINTENANCE BYPASS
LIEBERT EXL S1


ES1-01-S003

DATE (LATEST REV.)

OWG. NO.

09/16/2019



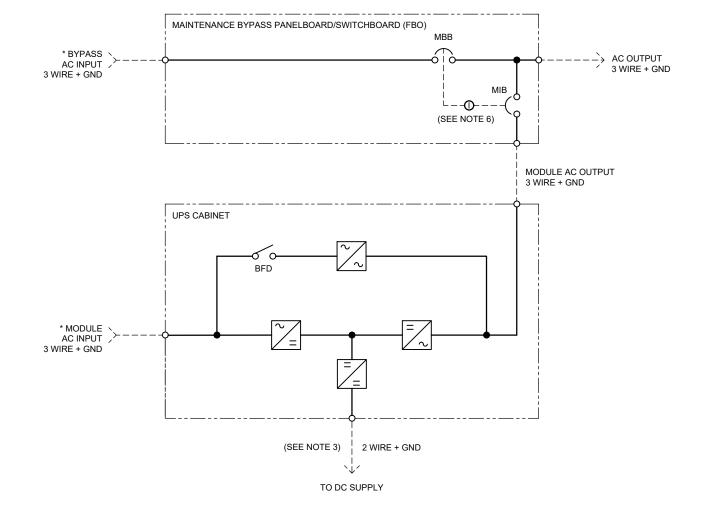

- THE INPUT OF THE UPS AND MAINTENANCE BYPASS
 MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE
 SOURCE OR GROUNDED THROUGH AN HRG.
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- 3. POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 6. OPTIONAL INTERLOCK SHOWN.
- 7. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

BFD - BACKFEED DISCONNECT MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

--- FIELD SUPPLIED WIRING

SHEET NO.	DRAWN BY:
1 OF 1	N.M.
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

TITLE

ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS, SINGLE INPUT UPS WITH
2 BREAKER EXTERNAL MAINTENANCE BYPASS AND BFD
LIEBERT EXL S1


DWG. NO.

ES1-01-S004

DATE (LATEST REV.)

l 09/16/2019



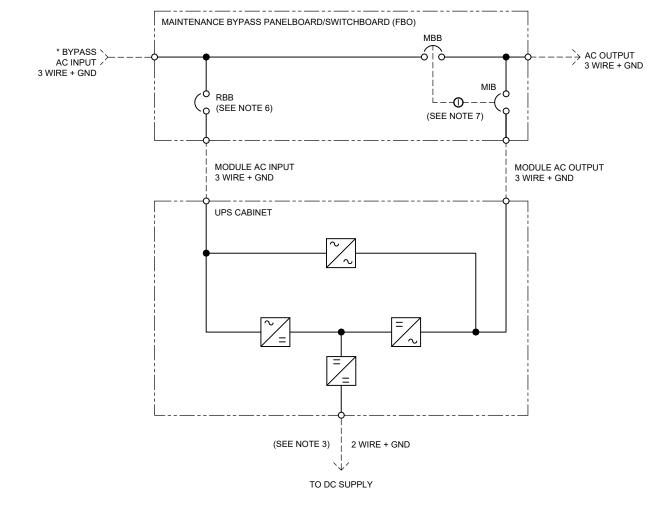

- INPUT OF THE UPS MUST BE FED FROM A SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG.
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 6. RBB MUST BE FURNISHED WITH:
 - A. SHUNT TRIP WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A CURRENT. IF OUTSIDE OF THESE LIMITS AN EXTERNAL RELAY WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A COIL PULL-IN CURRENT MUST BE FURNISHED TO OPERATE THE SHUNT TRIP. SHUNT TRIP POWER PROVIDED BY VERTIV.
- B. 1A/1B AUXILIARY CONTACT.
- 7. OPTIONAL INTERLOCK SHOWN.
- B. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS RBB - REMOTE BACKFEED BREAKER MBB - MAINTENANCE BYPASS BREAKER

MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

_____ FIELD SUPPLIED WIRING

 TITLE


ONE-LINE DIAGRAM
SINGLE MODULE WITH STATIC BYPASS
SINGLE INPUT UPS WITH 3 BREAKER EXTERNAL MAINTENANCE BYPASS
LIEBERT EXL S1

DWG. NO.

ES1-01-S005 DATE (LATEST REV.)

02/04/2020



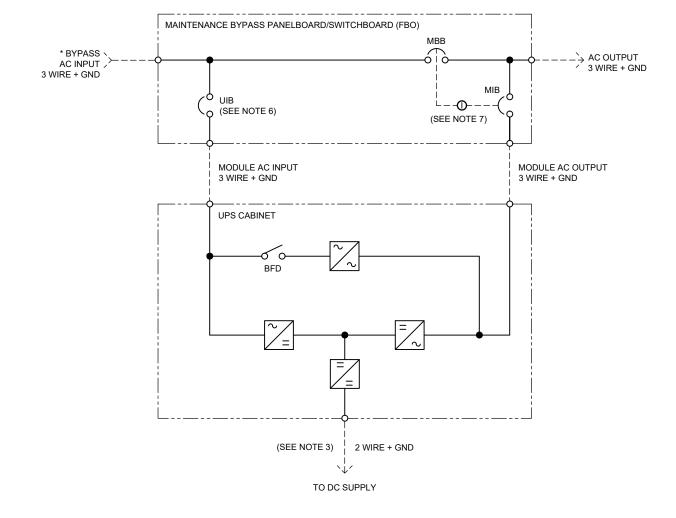

- 1. INPUT OF THE MAINTENANCE BYPASS MUST BE FED FROM A SOLIDLY GROUNDED WYE SOURCE OR THROUGH AN HRG.
- 2. GROUNDING CONDUCTORS ARE RECOMMENDED.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- UPS RECTIFIER INPUT. BYPASS INPUT. AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- UIB MUST BE FURNISHED WITH 1A/1B AUXILIARY CONTACTS.
- OPTIONAL INTERLOCK SHOWN.
- IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS

BFD - BACKFEED DISCONNECT

UIB - UPS INPUT BREAKER

MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

____ FIELD SUPPLIED WIRING

SHEET NO.	DRAWN BY:
1 OF 1	N. M.
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

TITLE

ONE-LINE DIAGRAM SINGLE MODULE WITH STATIC BYPASS, SINGLE INPUT UPS WITH 3 BREAKER EXTERNAL MAINTENANCE BYPASS AND BFD LIEBERT EXL S1

OWG. NO.


ES1-01-S006

DATE (LATEST REV.)

09/16/2019

1050 DEARBORN DR P.O. BOX 29186 COLUMBUS, OH 43229



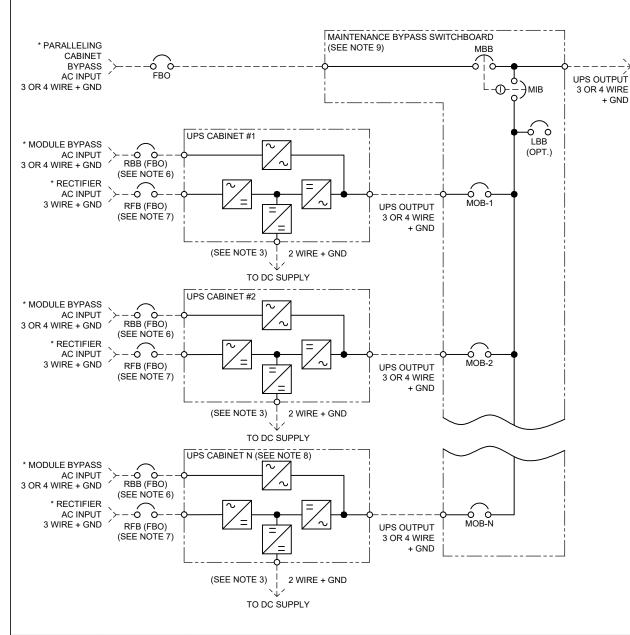

- 1. THE BYPASS INPUT OF THE UPS AND THE INPUT OF THE MAINTENANCE BYPASS. MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE. WHEN THE RECTIFIER AND BYPASS INPUT OF THE UPS ARE NOT FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE A COMMON MODE CHOKE MUST BE ORDERED WITH THE UPS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET).
- UPS RECTIFIER INPUT. BYPASS INPUT. AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS
- 3. POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- GROUNDING CONDUCTORS ARE RECOMMENDED.
- RBB MUST BE FURNISHED WITH:
 - SHUNT TRIP WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A CURRENT. IF OUTSIDE OF THESE LIMITS AN EXTERNAL RELAY WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A COIL PULL-IN CURRENT MUST BE FURNISHED TO OPERATE THE SHUNT TRIP. SHUNT TRIP POWER PROVIDED BY VERTIV.
 - B. 1A/1B AUXILIARY CONTACT.
- RFB MUST BE FURNISHED WITH 1A/1B AUXILIARY CONTACT.
- UP TO EIGHT (8) MODULES CAN BE PARALLELED IN A SYSTEM.
- CUSTOMIZED MAINTENANCE BYPASS SWITCHBOARD PER CUSTOMER SPECIFICATIONS: SKRU OPT., LBB OPT., ETC.
- 10. THE OUTPUT SWITCHBOARD MUST BE FITTED WITH MODULE OUTPUT BREAKERS (MOB) EQUIPPED WITH 1A/1B AUXILIARY CONTACTS TO COMMUNICATE BREAKER STATUS. THE MOB SHOULD BE SELECTED TO WORK WITH CURRENT LEVELS THAT MAY OCCUR WHEN SWITCHING A MODULE ONTO THE ACTIVE BUS. BREAKERS WITH ADJUSTABLE INSTANTANEOUS SETTINGS SHOULD BE ADEQUATE TO ACHIEVE THIS.
- 11. VERTIV RECOMMENDS CAREFULLY CONTROLLING POWER CABLE LENGTH DIFFERENCES SO THAT THE MAXIMUM DIFFERENCE DOES NOT EXCEED 5% OF TOTAL LENGTH, VERTIV OFFERS OPTIONAL SHARING INDUCTORS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET) THAT WILL REDUCE THE LOAD SHARING DIFFERENCE CAUSED BY AN IMPEDANCE MISMATCH IN PARALLEL MODULE BYPASS PATHS. VERTIV RECOMMENDS ORDERING BYPASS SHARING INDUCTORS WITH THE UPS IF THE TOTAL PLANNED SYSTEM LOAD EXCEEDS MORE THAN 85% PER MODULE.
- 12. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.

* EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS

RBB - REMOTE BACKFEED BREAKER

RFB - RECTIFIER FEED BREAKER

LBB - LOAD BANK BREAKER

MBB - MAINT. BYPASS BREAKER

MIB - MAINT, ISOLATION BREAKER

MOB - MODULE OUTPUT BREAKER

FIELD SUPPLIED WIRING

1 OF 1 J. SHIPMAN ECN NO ESIGNED BY S. MAJOR REE DWG PPROVED BY S. MAJOR

ONE-LINE DIAGRAM 1+N MULTI-MODULE WITH STATIC BYPASS DUAL INPUT UPS WITH 2 BREAKER PARALLELING CABINET LIEBERT EXL S1


ES1-02-S003

DATE (LATEST REV.)

10/30/2018

1050 DEARBORN DR COLUMBUS OH 4322



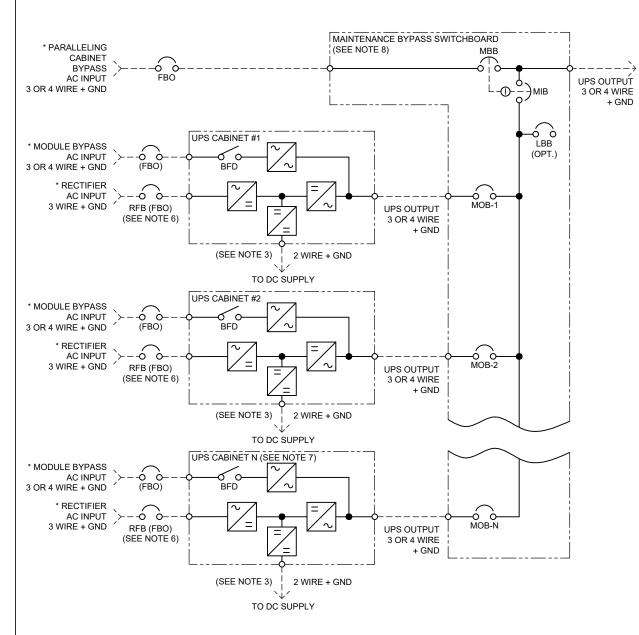

- 1. THE BYPASS INPUT OF THE UPS AND THE INPUT OF THE MAINTENANCE BYPASS, MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE. WHEN THE RECTIFIER AND BYPASS INPUT OF THE UPS ARE NOT FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE A COMMON MODE CHOKE MUST BE ORDERED WITH THE UPS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET).
- 2. UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- 3. POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- GROUNDING CONDUCTORS ARE RECOMMENDED.
- RFB MUST BE FURNISHED WITH 1A/1B AUXILIARY CONTACT.
- UP TO EIGHT (8) MODULES CAN BE PARALLELED IN A SYSTEM
- CUSTOMIZED MAINTENANCE BYPASS SWITCHBOARD PER CUSTOMER SPECIFICATIONS: SKRU OPT., LBB OPT., ETC.
- THE OUTPUT SWITCHBOARD MUST BE FITTED WITH MODULE OUTPUT BREAKERS (MOB) EQUIPPED WITH 1A/1B AUXILIARY CONTACTS TO COMMUNICATE BREAKER STATUS. THE MOB SHOULD BE SELECTED TO WORK WITH CURRENT LEVELS THAT MAY OCCUR WHEN SWITCHING A MODULE ONTO THE ACTIVE BUS. BREAKERS WITH ADJUSTABLE INSTANTANEOUS SETTINGS SHOULD BE ADEQUATE TO ACHIEVE THIS.
- 10. VERTIV RECOMMENDS CAREFULLY CONTROLLING POWER CABLE LENGTH DIFFERENCES SO THAT THE MAXIMUM DIFFERENCE DOES NOT EXCEED 5% OF TOTAL LENGTH. VERTIV OFFERS OPTIONAL SHARING INDUCTORS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET) THAT WILL REDUCE THE LOAD SHARING DIFFERENCE CAUSED BY AN IMPEDANCE MISMATCH IN PARALLEL MODULE BYPASS PATHS. VERTIV RECOMMENDS ORDERING BYPASS SHARING INDUCTORS WITH THE UPS IF THE TOTAL PLANNED SYSTEM LOAD EXCEEDS MORE THAN 85% PER MODULE.
- IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.
 - * EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS

BFD - BACKFEED DISCONNECT

RFB - RECTIFIER FEED BREAKER

LBB - LOAD BANK BREAKER

MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

MOB - MODULE OUTPUT BREAKER

FIELD SUPPLIED WIRING

1 OF 1 J. SHIPMAN ECN NO ESIGNED BY S. MAJOR REE DWG PPROVED BY S. MAJOR

ONE-LINE DIAGRAM 1+N MULTI-MODULE WITH STATIC BYPASS, DUAL INPUT UPS WITH 2 BREAKER PARALLELING CABINET AND BFD LIEBERT EXL S1


ES1-02-S004

DATE (LATEST REV.)

10/30/2018 1050 DEARBORN DR

COLUMBUS OH 4322



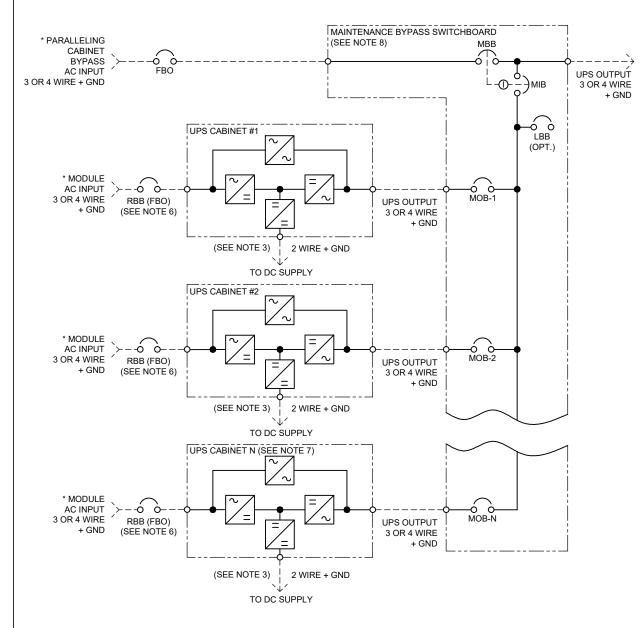

- INPUT OF THE UPS AND MAINTENANCE BYPASS MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE.
- 2. UPS RECTIFIER INPUT, BYPASS INPUT, AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- 5. GROUNDING CONDUCTORS ARE RECOMMENDED.
- 6. RBB MUST BE FURNISHED WITH:
 - A. SHUNT TRIP WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A CURRENT. IF OUTSIDE OF THESE LIMITS AN EXTERNAL RELAY WITH MAX 120VAC COIL OPERATING VOLTAGE AND MAX 5A COIL PULL-IN CURRENT MUST BE FURNISHED TO OPERATE THE SHUNT TRIP. SHUNT TRIP POWER PROVIDED BY VERTIV.
- B. 1A/1B AUXILIARY CONTACT.
- 7. UP TO EIGHT (8) MODULES CAN BE PARALLELED IN A SYSTEM.
- CUSTOMIZED MAINTENANCE BYPASS SWITCHBOARD PER CUSTOMER SPECIFICATIONS: SKRU OPT., LBB OPT., ETC.
- 9. THE OUTPUT SWITCHBOARD MUST BE FITTED WITH MODULE OUTPUT BREAKERS (MOB) EQUIPPED WITH 1A/1B AUXILIARY CONTACTS TO COMMUNICATE BREAKER STATUS. THE MOB SHOULD BE SELECTED TO WORK WITH CURRENT LEVELS THAT MAY OCCUR WHEN SWITCHING A MODULE ONTO THE ACTIVE BUS. BREAKERS WITH ADJUSTABLE INSTANTANEOUS SETTINGS SHOULD BE ADEQUATE TO ACHIEVE THIS.
- 10. VERTIV RECOMMENDS CAREFULLY CONTROLLING POWER CABLE LENGTH DIFFERENCES SO THAT THE MAXIMUM DIFFERENCE DOES NOT EXCEED 5% OF TOTAL LENGTH. VERTIV OFFERS OPTIONAL SHARING INDUCTORS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET) THAT WILL REDUCE THE LOAD SHARING DIFFERENCE CAUSED BY AN IMPEDANCE MISMATCH IN PARALLEL MODULE BYPASS PATHS. VERTIV RECOMMENDS ORDERING BYPASS SHARING INDUCTORS WITH THE UPS IF THE TOTAL PLANNED SYSTEM LOAD EXCEEDS MORE THAN 85% PER MODULE.
- 11. IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.
 - * EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS

RBB - REMOTE BACKFEED BREAKER

LBB - LOAD BANK BREAKER

MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

MOB - MODULE OUTPUT BREAKER

FIELD SUPPLIED WIRING

ONE-LINE DIAGRAM

1+N MULTI-MODULE WITH STATIC BYPASS


SINGLE INPUT UPS WITH 2 BREAKER PARALLELING CABINET

LIEBERT EXL S1

ES1-02-S001

DATE (LATEST REV.



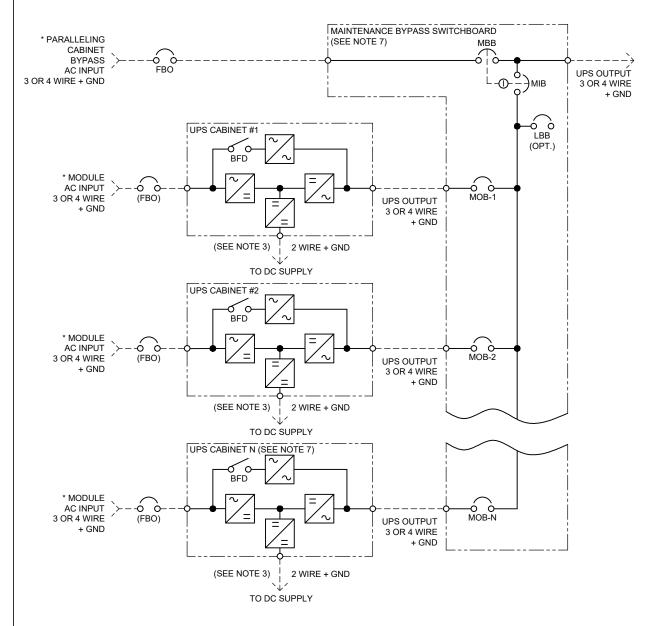

- INPUT OF THE UPS AND MAINTENANCE BYPASS MUST BE FED FROM THE SAME SOLIDLY GROUNDED WYE SOURCE.
- UPS RECTIFIER INPUT. BYPASS INPUT. AND OUTPUT CABLES MUST BE RUN IN SEPARATE CONDUITS.
- POWER CABLES FROM UPS DC LINK TO BATTERIES SHOULD BE SIZED FOR A TOTAL MAXIMUM 2 VOLT DROP AT MAXIMUM DISCHARGE CURRENT. DC POWER CABLES ARE FURNISHED BY VERTIV FOR MATCHING BATTERY CABINETS THAT ARE CONNECTED TO THE UPS MODULE (RIGHT HAND SIDE ONLY).
- CONTROL WIRING AND POWER WIRING MUST BE RUN IN SEPARATE CONDUITS.
- GROUNDING CONDUCTORS ARE RECOMMENDED.
- UP TO EIGHT (8) MODULES CAN BE PARALLELED IN A
- CUSTOMIZED MAINTENANCE BYPASS SWITCHBOARD PER CUSTOMER SPECIFICATIONS: SKRU OPT., LBB OPT., ETC.
- THE OUTPUT SWITCHBOARD MUST BE FITTED WITH MODULE OUTPUT BREAKERS (MOB) EQUIPPED WITH 1A/1B AUXILIARY CONTACTS TO COMMUNICATE BREAKER STATUS. THE MOB SHOULD BE SELECTED TO WORK WITH CURRENT LEVELS THAT MAY OCCUR WHEN SWITCHING A MODULE ONTO THE ACTIVE BUS. BREAKERS WITH ADJUSTABLE INSTANTANEOUS SETTINGS SHOULD BE ADEQUATE TO ACHIEVE THIS.
- VERTIV RECOMMENDS CAREFULLY CONTROLLING POWER CABLE LENGTH DIFFERENCES SO THAT THE MAXIMUM DIFFERENCE DOES NOT EXCEED 5% OF TOTAL LENGTH. VERTIV OFFERS OPTIONAL SHARING INDUCTORS (INSTALLED BY THE FACTORY IN THE UPS INPUT/OUTPUT CABINET) THAT WILL REDUCE THE LOAD SHARING DIFFERENCE CAUSED BY AN IMPEDANCE MISMATCH IN PARALLEL MODULE BYPASS PATHS, VERTIV RECOMMENDS ORDERING BYPASS SHARING INDUCTORS WITH THE UPS IF THE TOTAL PLANNED SYSTEM LOAD EXCEEDS MORE THAN 85% PER MODULE.
- IF THE UPS IS FED FROM AN AUTOMATIC TRANSFER SWITCH, THE UPS SHALL BE CAPABLE OF TRANSFERRING TO AND FROM AN ALTERNATE OUT-OF-PHASE SOURCE IN DOUBLE CONVERSION MODE WITHOUT APPLYING A BREAK-BEFORE-MAKE DELAY TO THE AUTOMATIC TRANSFER SWITCH OPERATION.
 - * EXTERNAL OVERCURRENT PROTECTION BY OTHERS

FBO - FURNISHED BY OTHERS

BFD - BACKFEED DISCONNECT

LBB - LOAD BANK BREAKER

MBB - MAINTENANCE BYPASS BREAKER

MIB - MAINTENANCE ISOLATION BREAKER

MOB - MODULE OUTPUT BREAKER

___ FIELD SUPPLIED WIRING

SHEET NO.	DRAWN BY:
1 OF 1	J. SHIPMAN
ECN NO.	DESIGNED BY:
	S. MAJOR
REF DWG.	APPROVED BY:
	S. MAJOR

TITLE


ONE-LINE DIAGRAM 1+N MULTI-MODULE WITH STATIC BYPASS, SINGLE INPUT UPS WITH 2 BREAKER PARALLELING CABINET AND BFD LIEBERT EXL S1

ES1-02-S002 DATE (LATEST REV.)

10/30/2018 1050 DEARBORN DR COLUMBUS OH 4322



- 1. ALL CABLE GROUPS SHOULD BE RUN SEPARATELY TO HELP PREVENT SIGNAL INTERFERENCE.
- 2. TB1 LOCATED IN I/O CABINET NEXT TO 120VAC

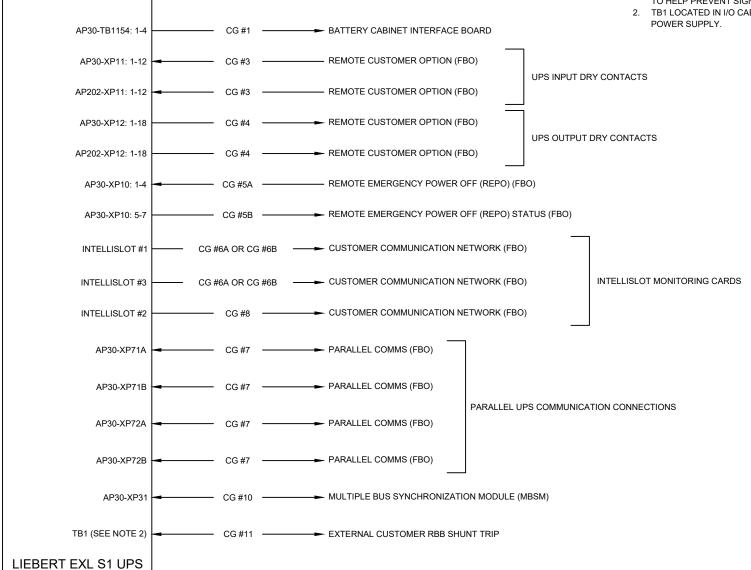


SHEET NO.	DRAWN BY:	TITLE
1 OF 1	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

CABLE LAYOUT COMMUNICATIONS AND GENERAL CONTACTS LIEBERT EXL S1

ES1-19-S002 DATE (LATEST REV.) 03/22/2018



- ALL CABLE GROUPS SHOULD BE RUN SEPARATELY
 TO HELP PREVENT SIGNAL INTERFERENCE.
- 2. IF MATCHING BATTERY CABINETS ARE A STANDALONE SYSTEM CG #1 MUST ONLY BE RUN TO MATCHING BATTERY CABINET #1.

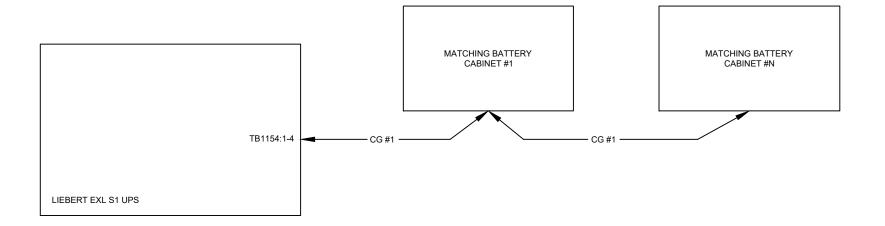

SHEET NO.	DRAWN BY:	TITLE
1 OF 1	J. SHIPMAN	
ECN NO.	DESIGNED BY:	
	J. HERRING	
REF DWG.	APPROVED BY:	
	J. HERRING	


CABLE LAYOUT
DC SOURCE
UPS WITH MATCHING BATTERY CABINETS
LIEBERT EXL S1

ES1-19-S003
DATE (LATEST REV.)

06/09/2017



- 1. THESE CABLE GROUPS MAY BE RUN IN THE SAME APPROPRIATELY SIZED CONDUIT.
- 2. ALL CABLE GROUPS SHOULD BE RUN SEPARATELY TO HELP PREVENT SIGNAL INTERFERENCE.

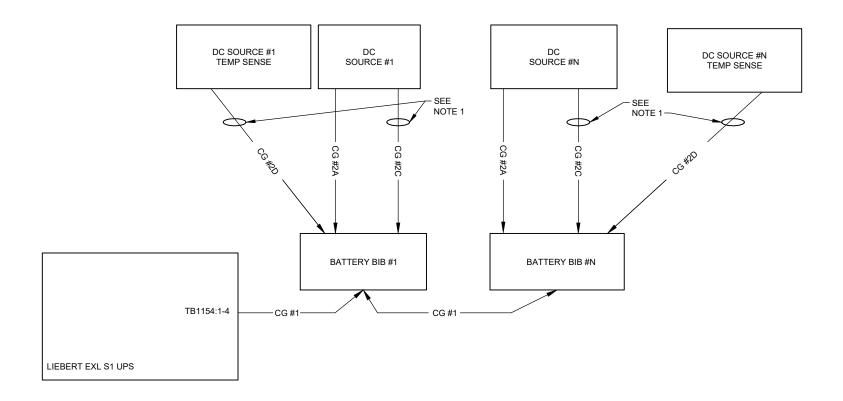


	1	
SHEET NO.	DRAWN BY:	TITLE
1 OF 1	K. STACY	
ECN NO.	DESIGNED BY:	1
	S. MAJOR	
REF DWG.	APPROVED BY:	
	S. MAJOR	

CABLE LAYOUT
DC SOURCE
UPS WITH BUY-OUT DC SOURCES
LIEBERT EXL S1

DWG. NO. ES1-19-S004 DATE (LATEST REV.) 06/09/2017



- THESE CABLE GROUPS MAY BE RUN IN THE SAME APPROPRIATELY SIZED CONDUIT.
- 2. ALL CABLE GROUPS SHOULD BE RUN SEPARATELY TO HELP PREVENT SIGNAL INTERFERENCE.

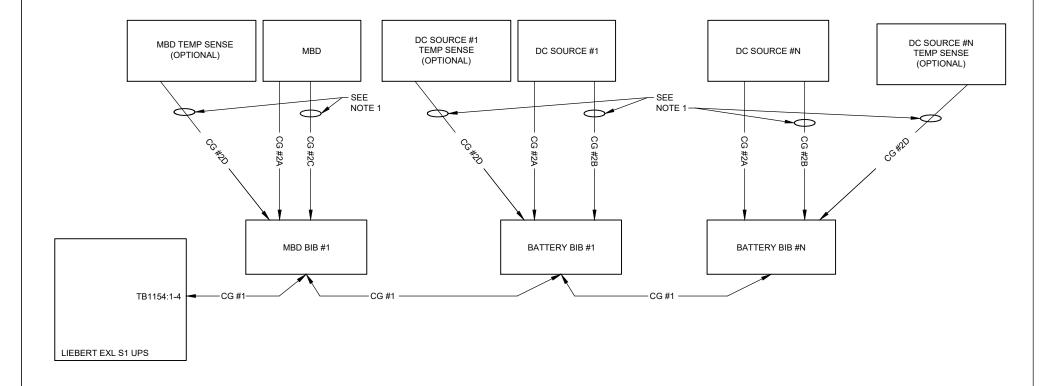

SHEET NO.	DRAWN BY:	TITLE
1 OF 1	K. STACY	
ECN NO.	DESIGNED BY:	
	J. HERRING	
REF DWG.	APPROVED BY:	
	J. HERRING	


CABLE LAYOUT
DC SOURCE
UPS WITH BUY-OUT MBD AND DC SOURCES
LIEBERT EXL S1

ES1-19-S005

06/09/2017



- ALL CABLE GROUPS SHOULD BE RUN IN SEPARATE CONDUIT TO HELP PREVENT SIGNAL INTERFERENCE.
- TB1 LOCATED IN I/O CABINET NEXT TO 120VAC POWER SUPPLY.

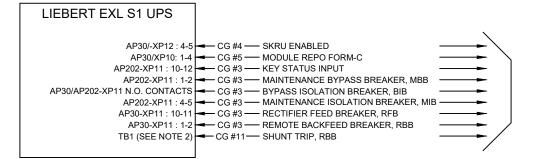


SHEET NO.	DRAWN BY:
1 OF 1	K. HIGH
ECN NO.	DESIGNED BY:
	B. COGAR
REF DWG.	APPROVED BY:
	B. COGAR


CONTROL CABLE LAYOUT
MAINTENANCE BYPASS CABINET
WITH SINGLE MODULE
LIEBERT EXL S1


ES1-19-S007
DATE (LATEST REV.)


07/16/2018




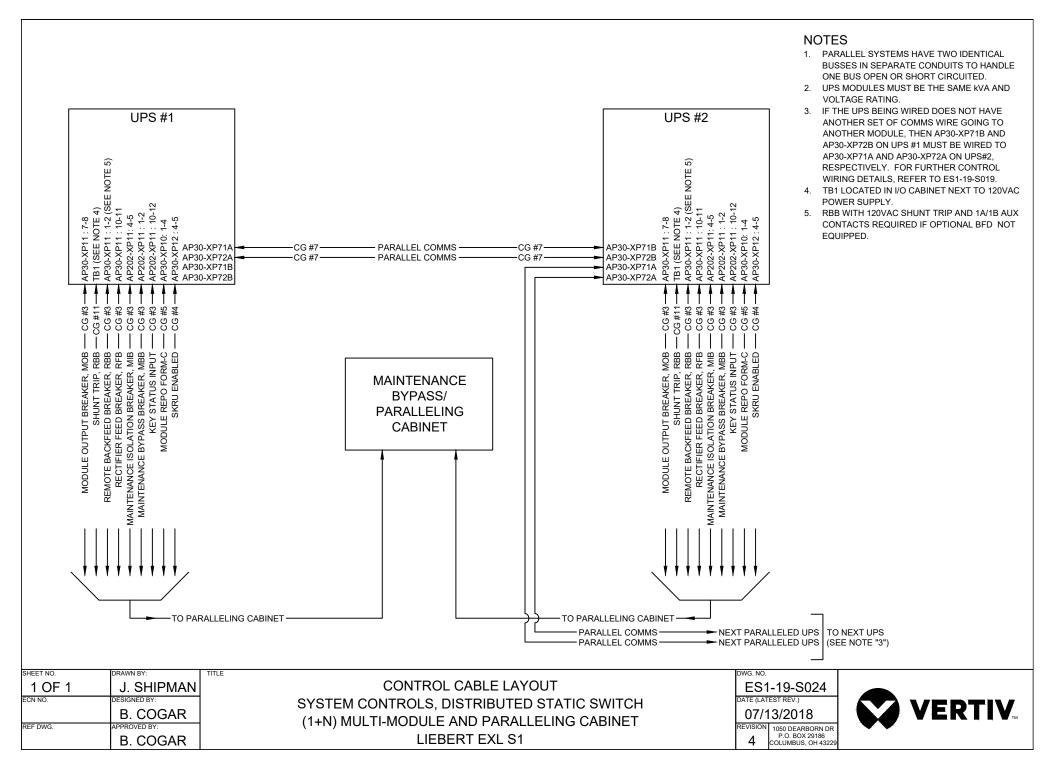


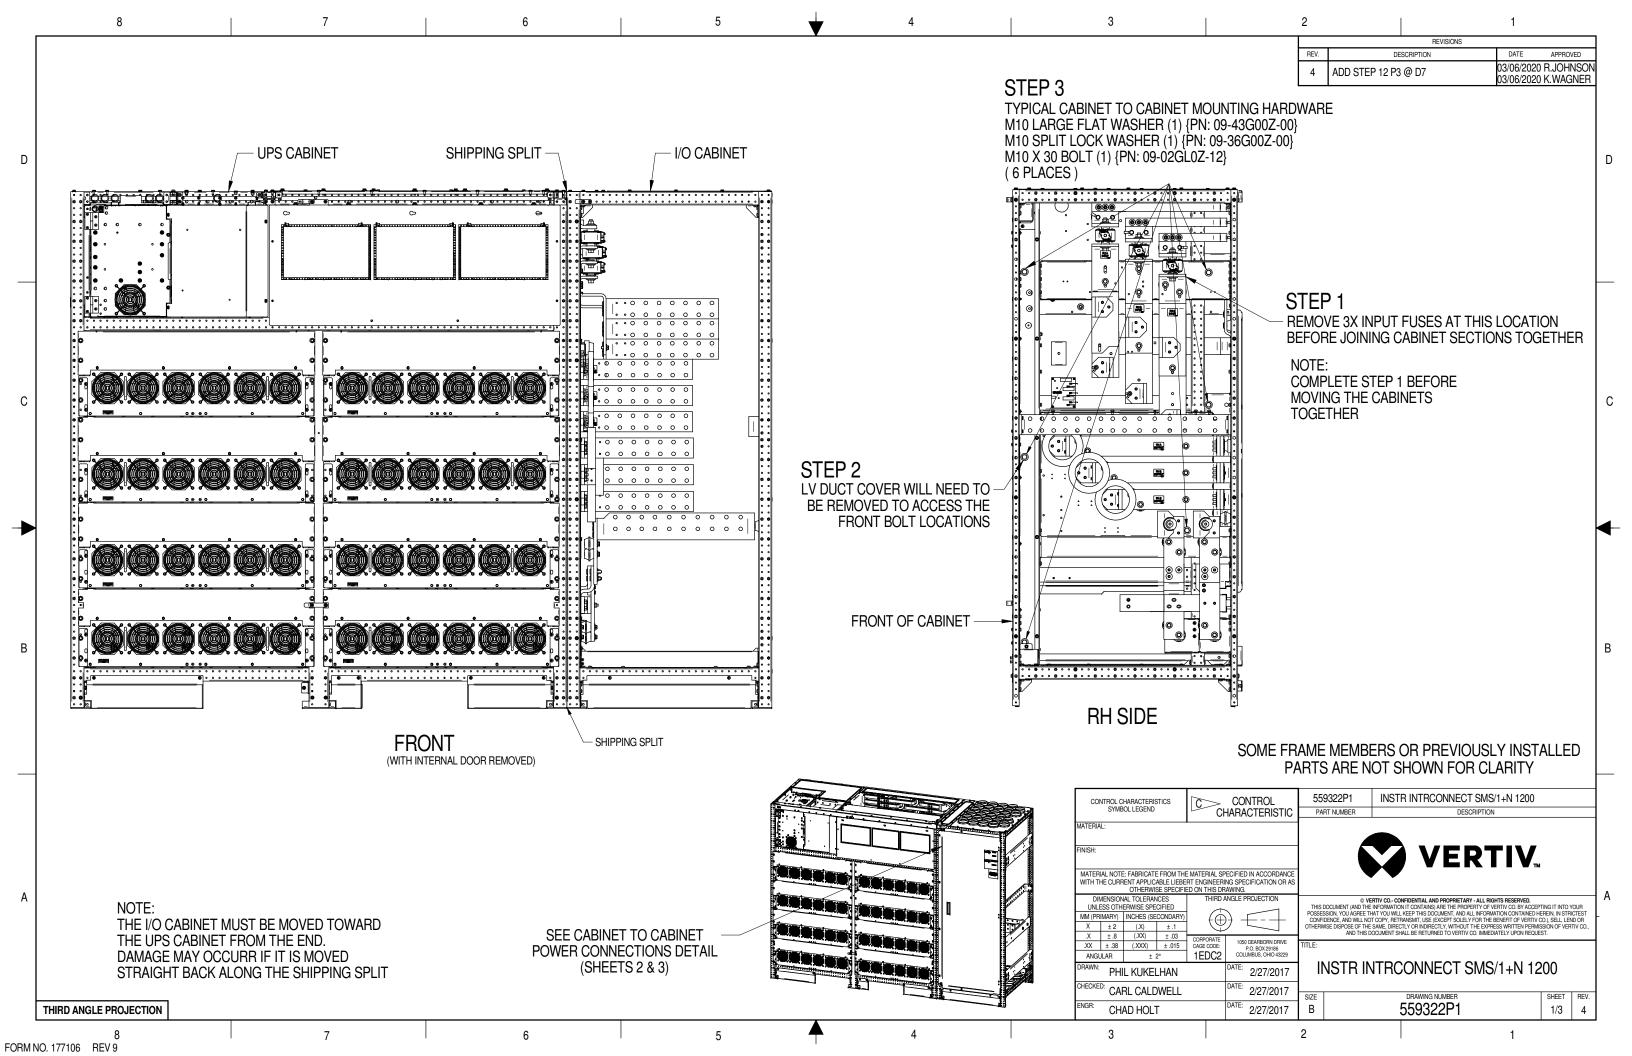


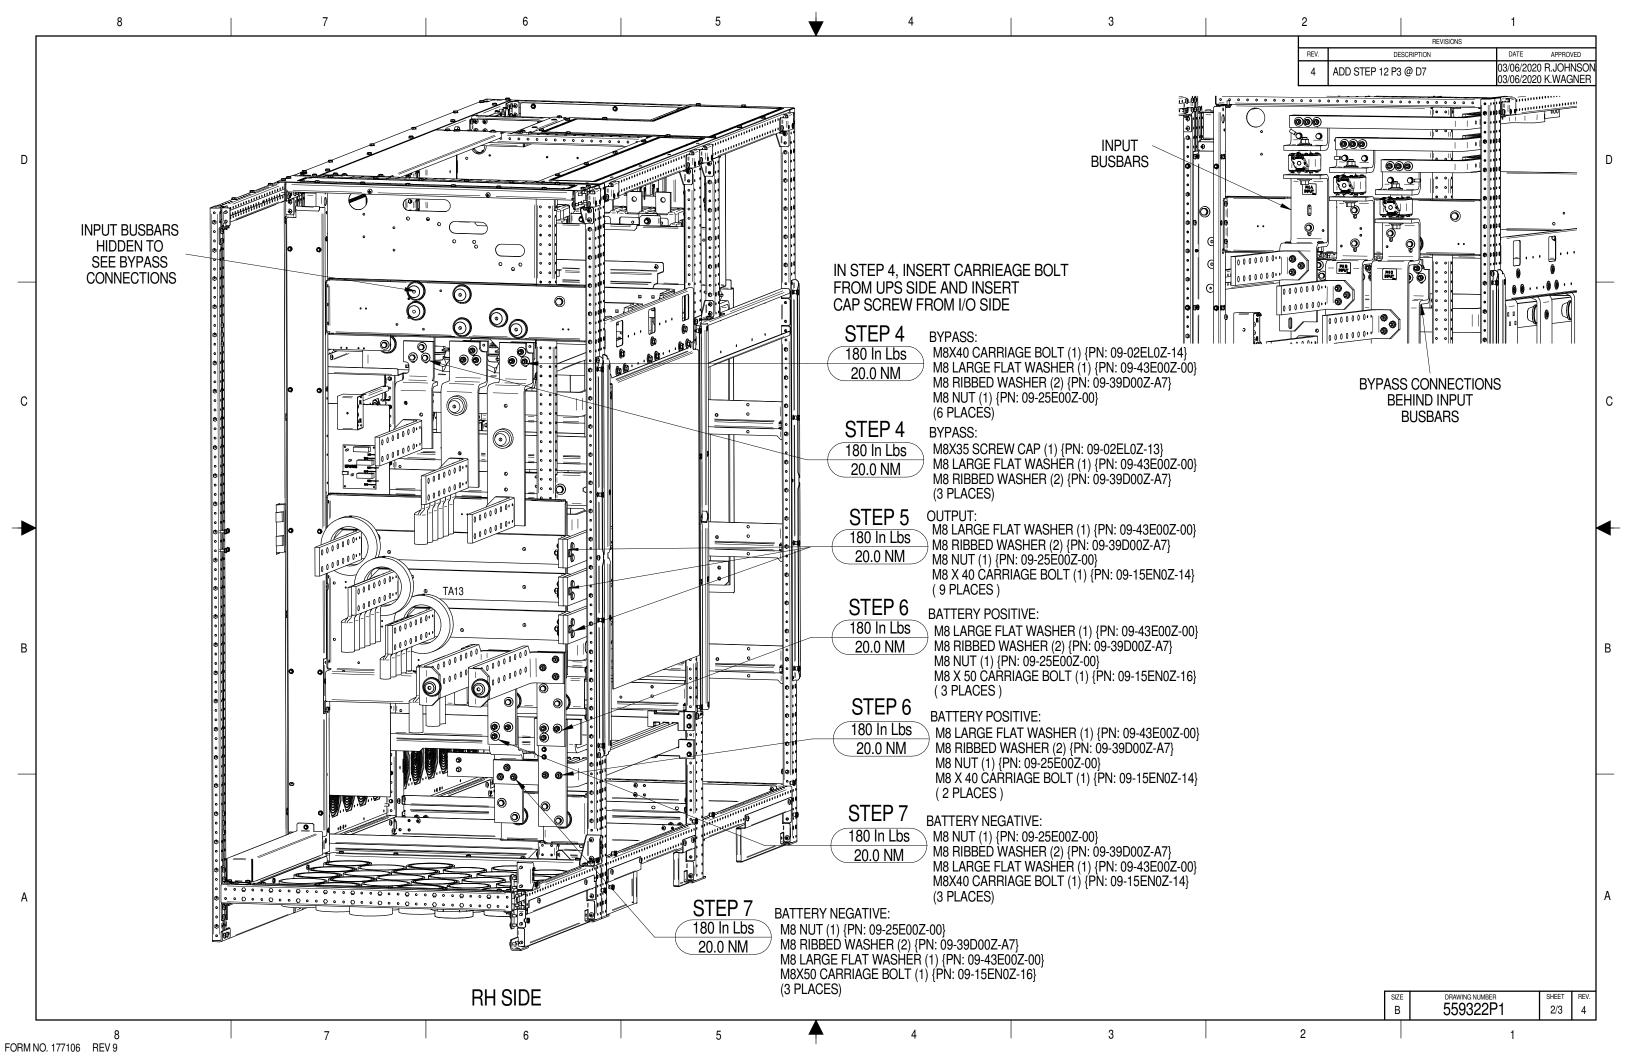


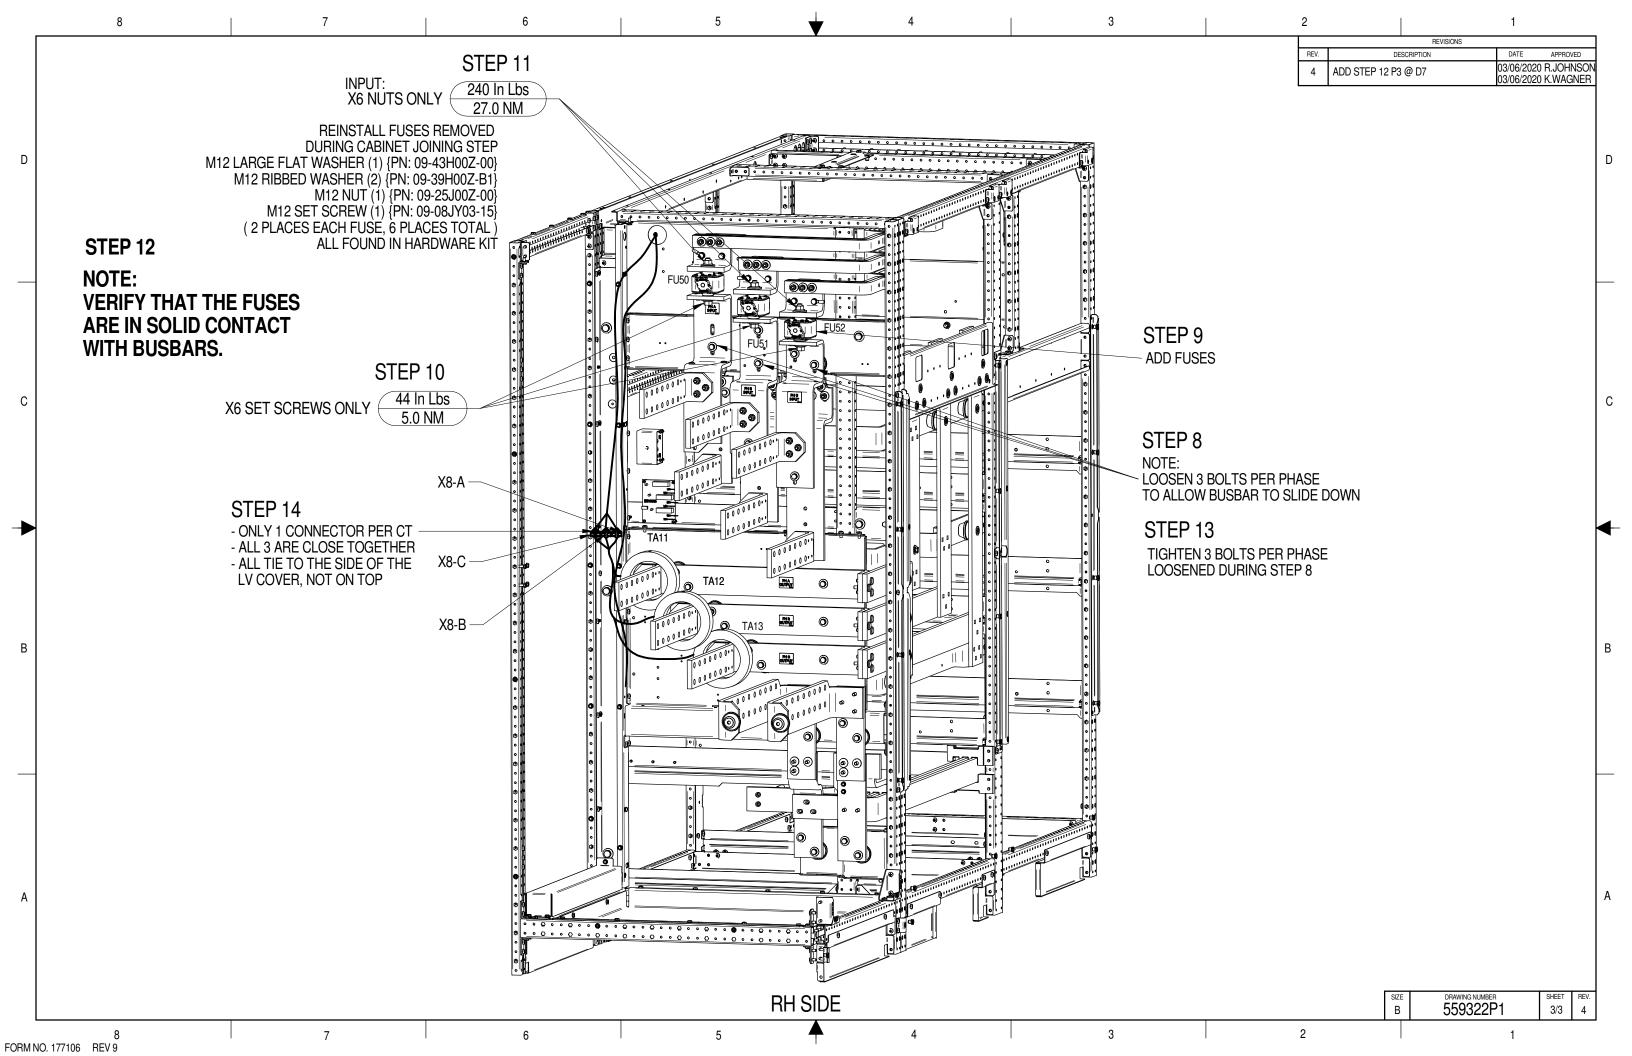


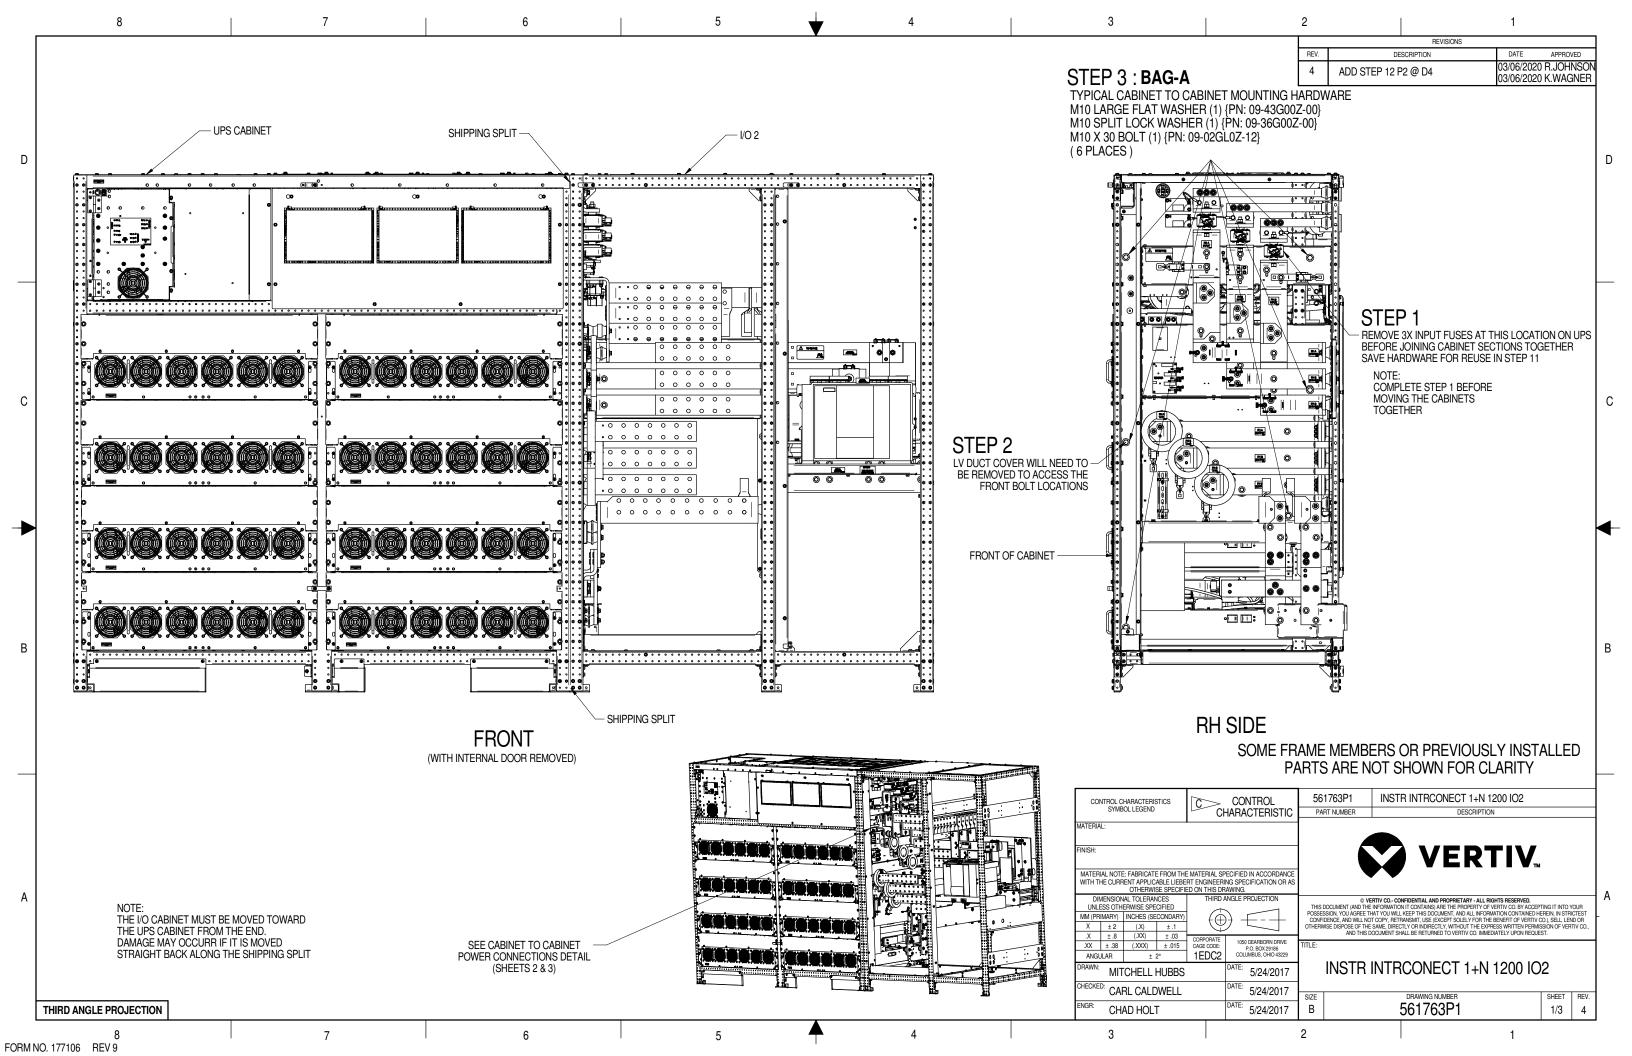


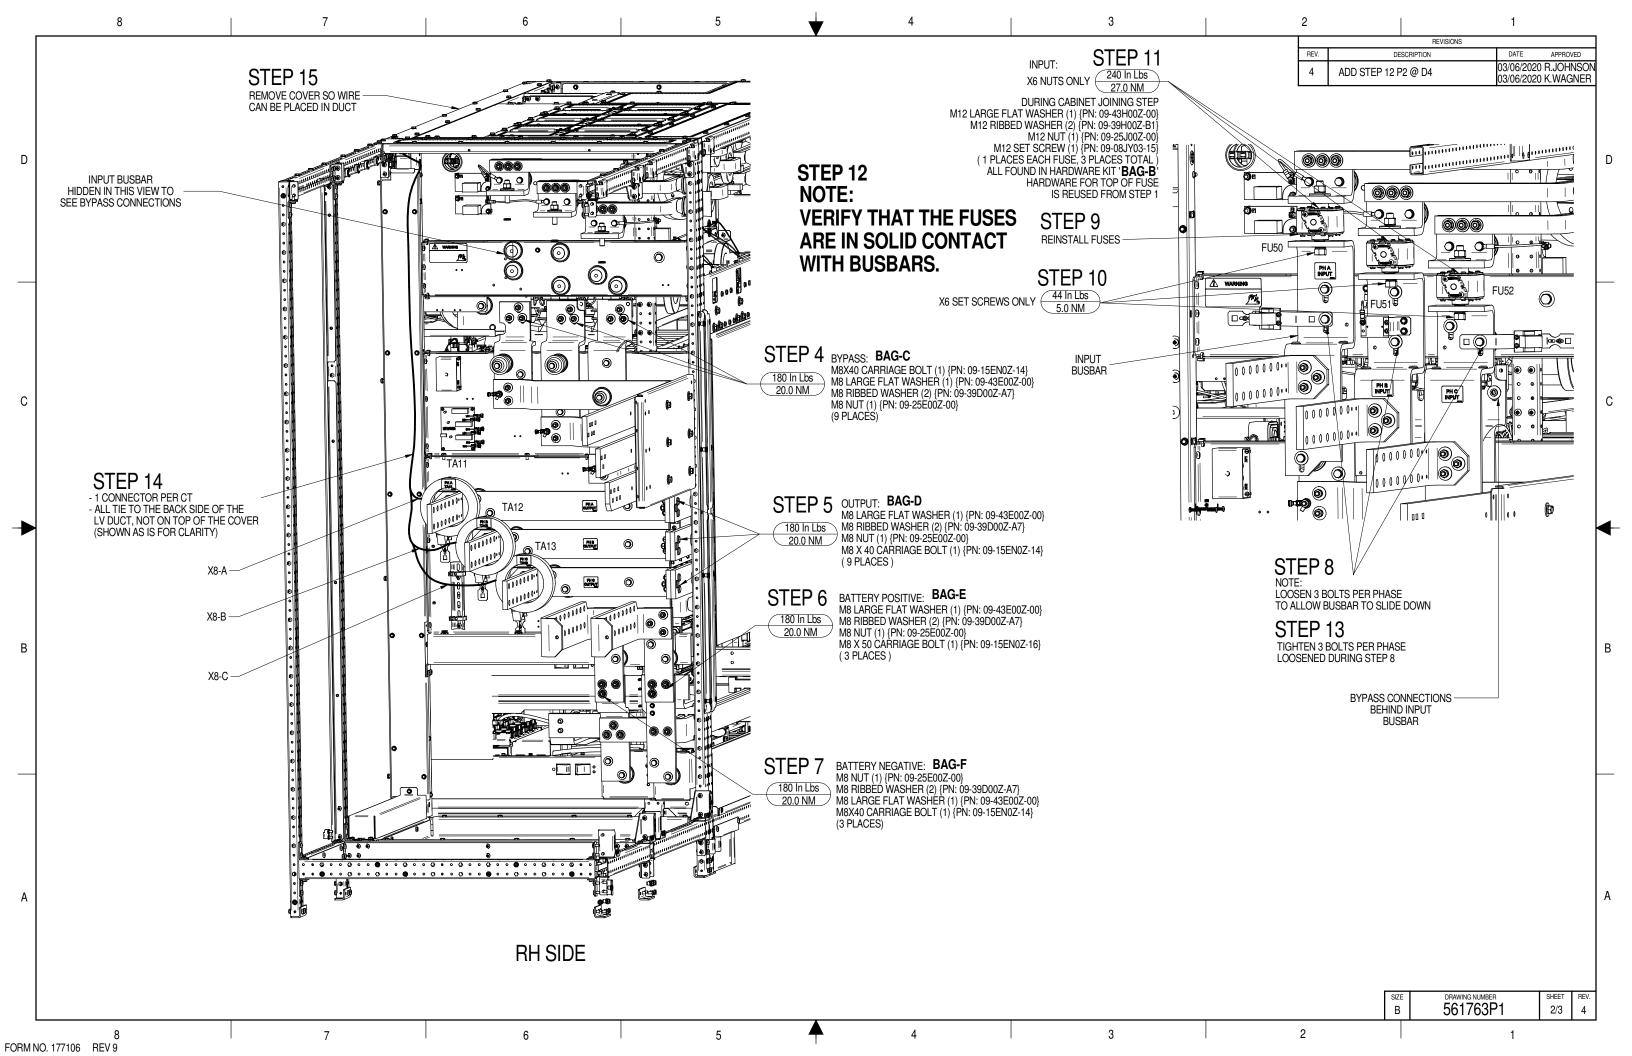


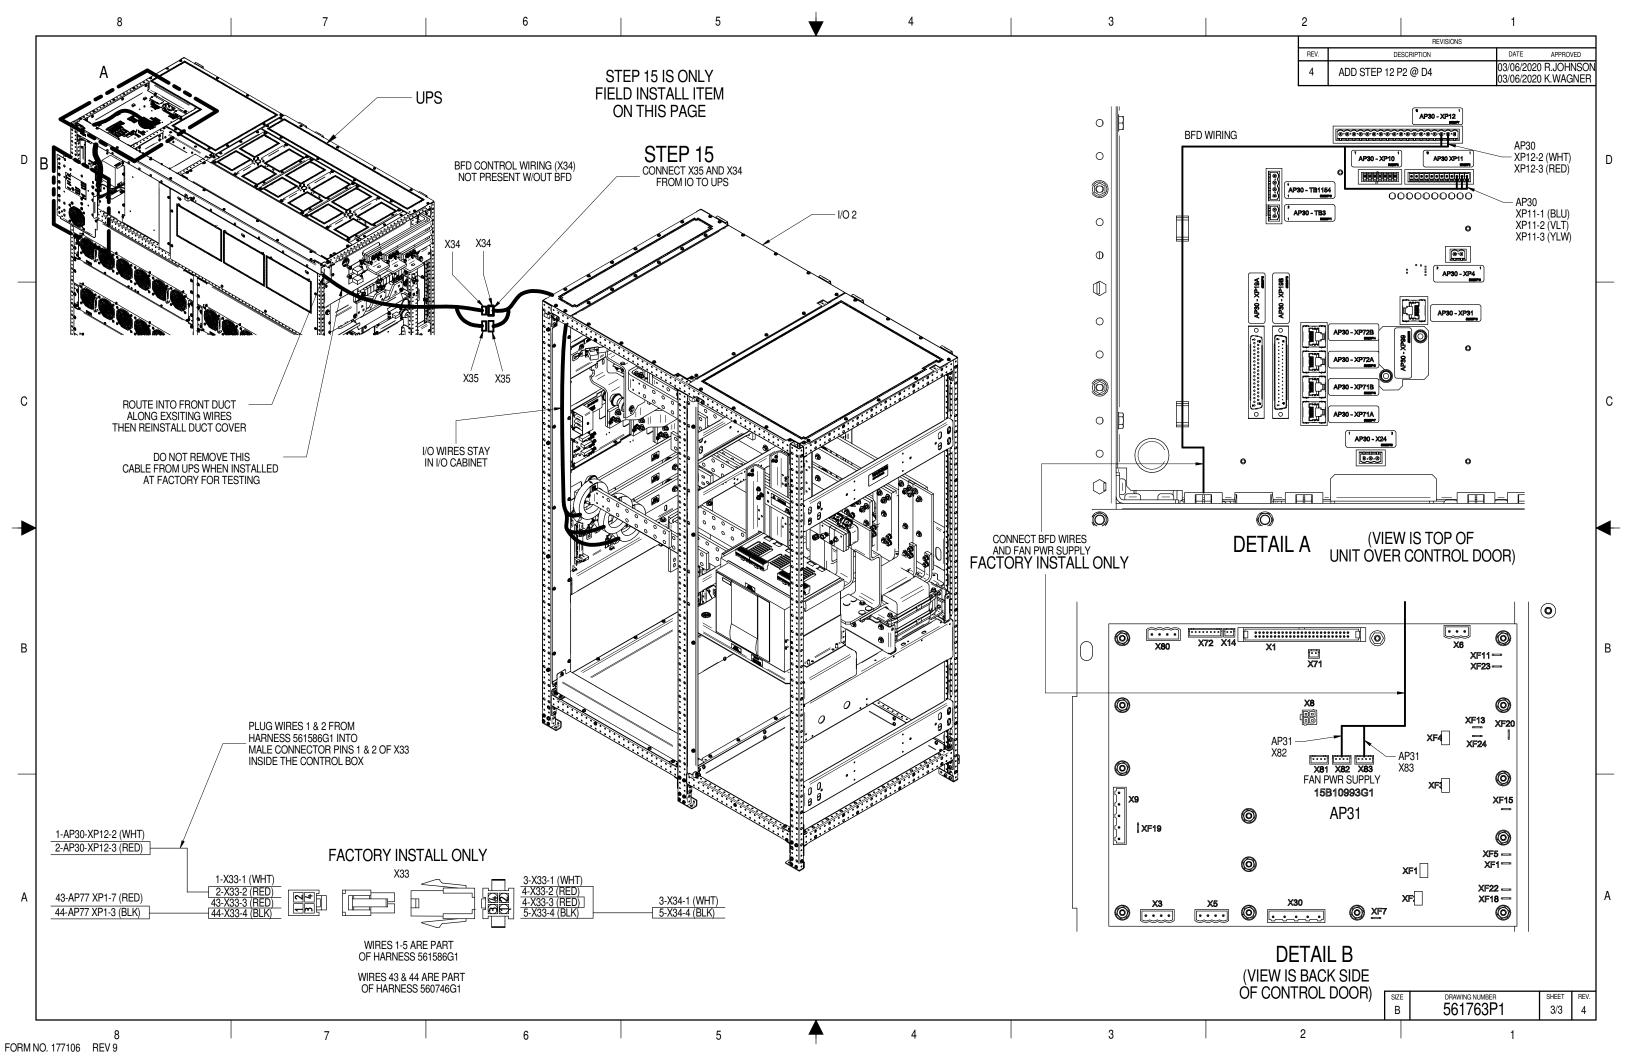

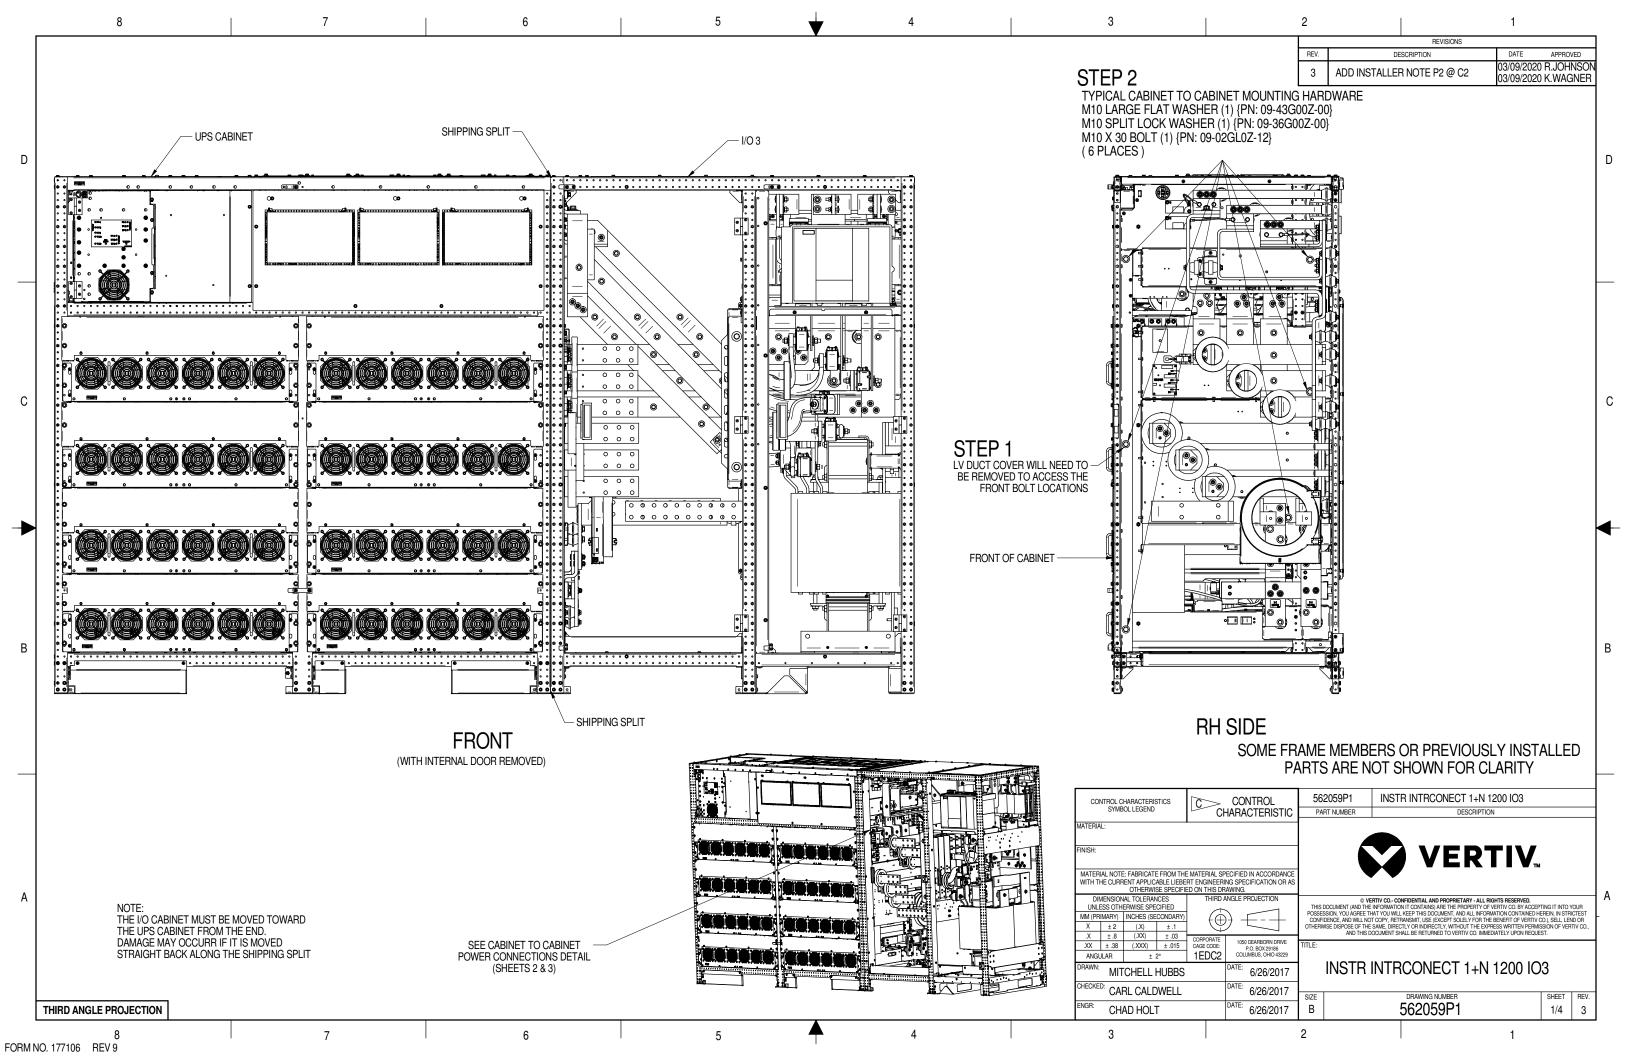

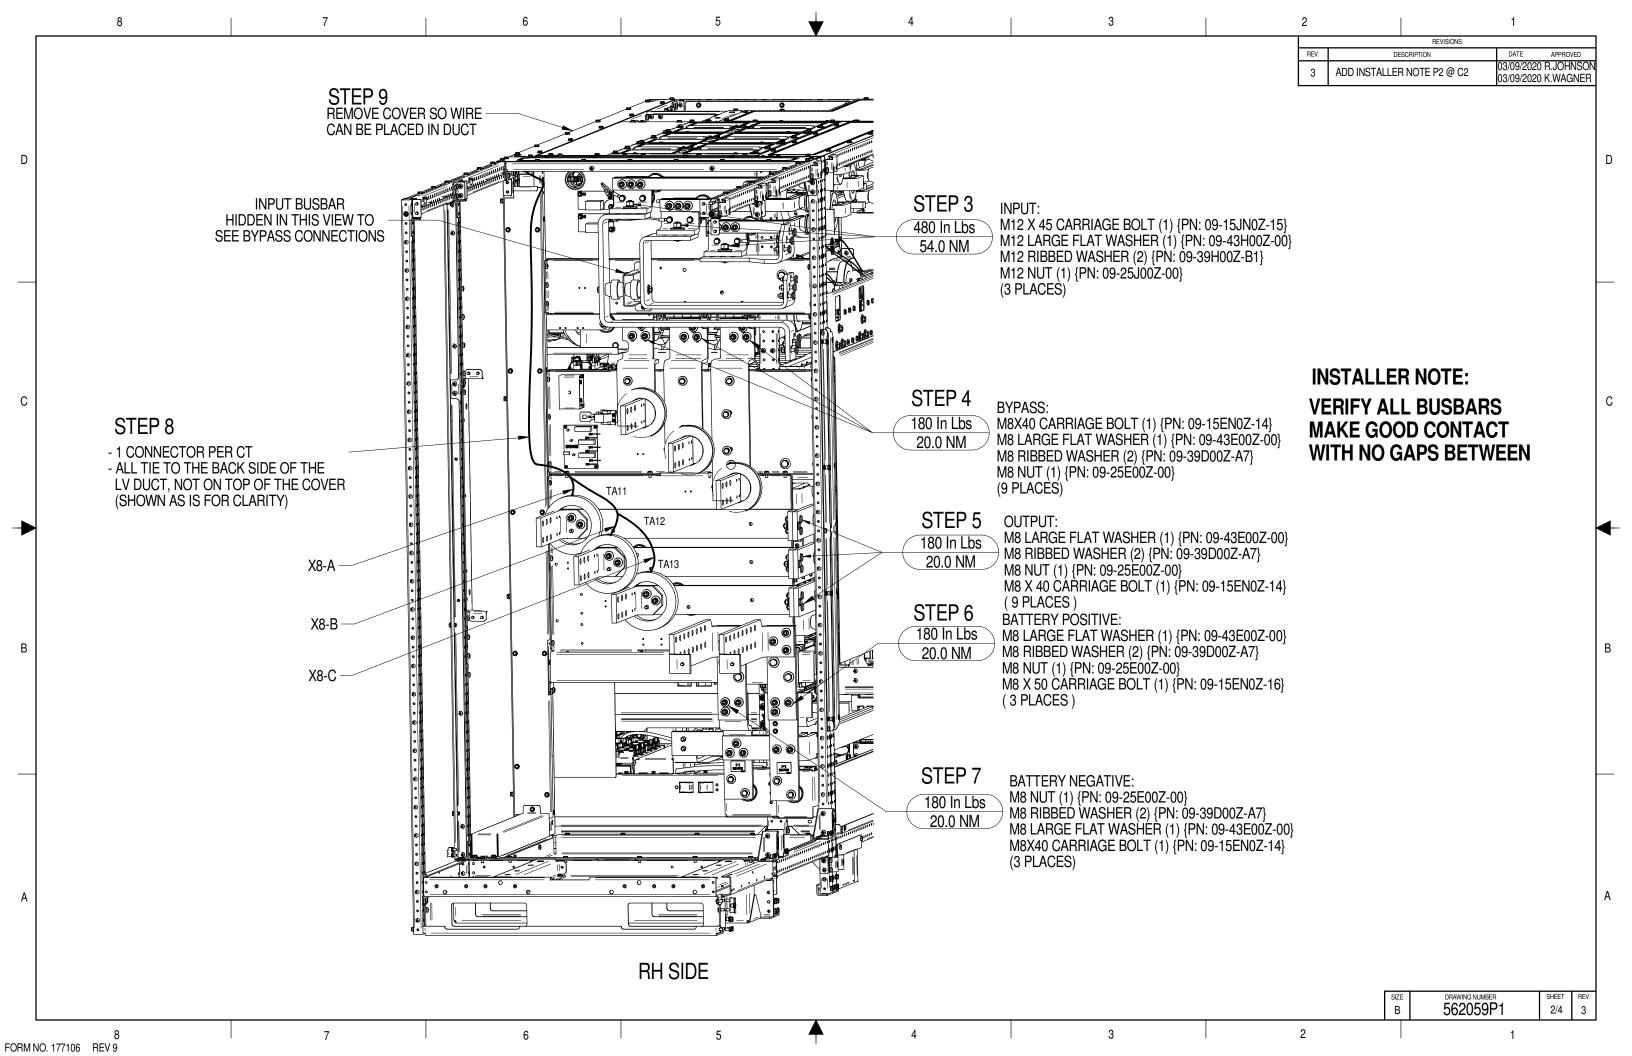

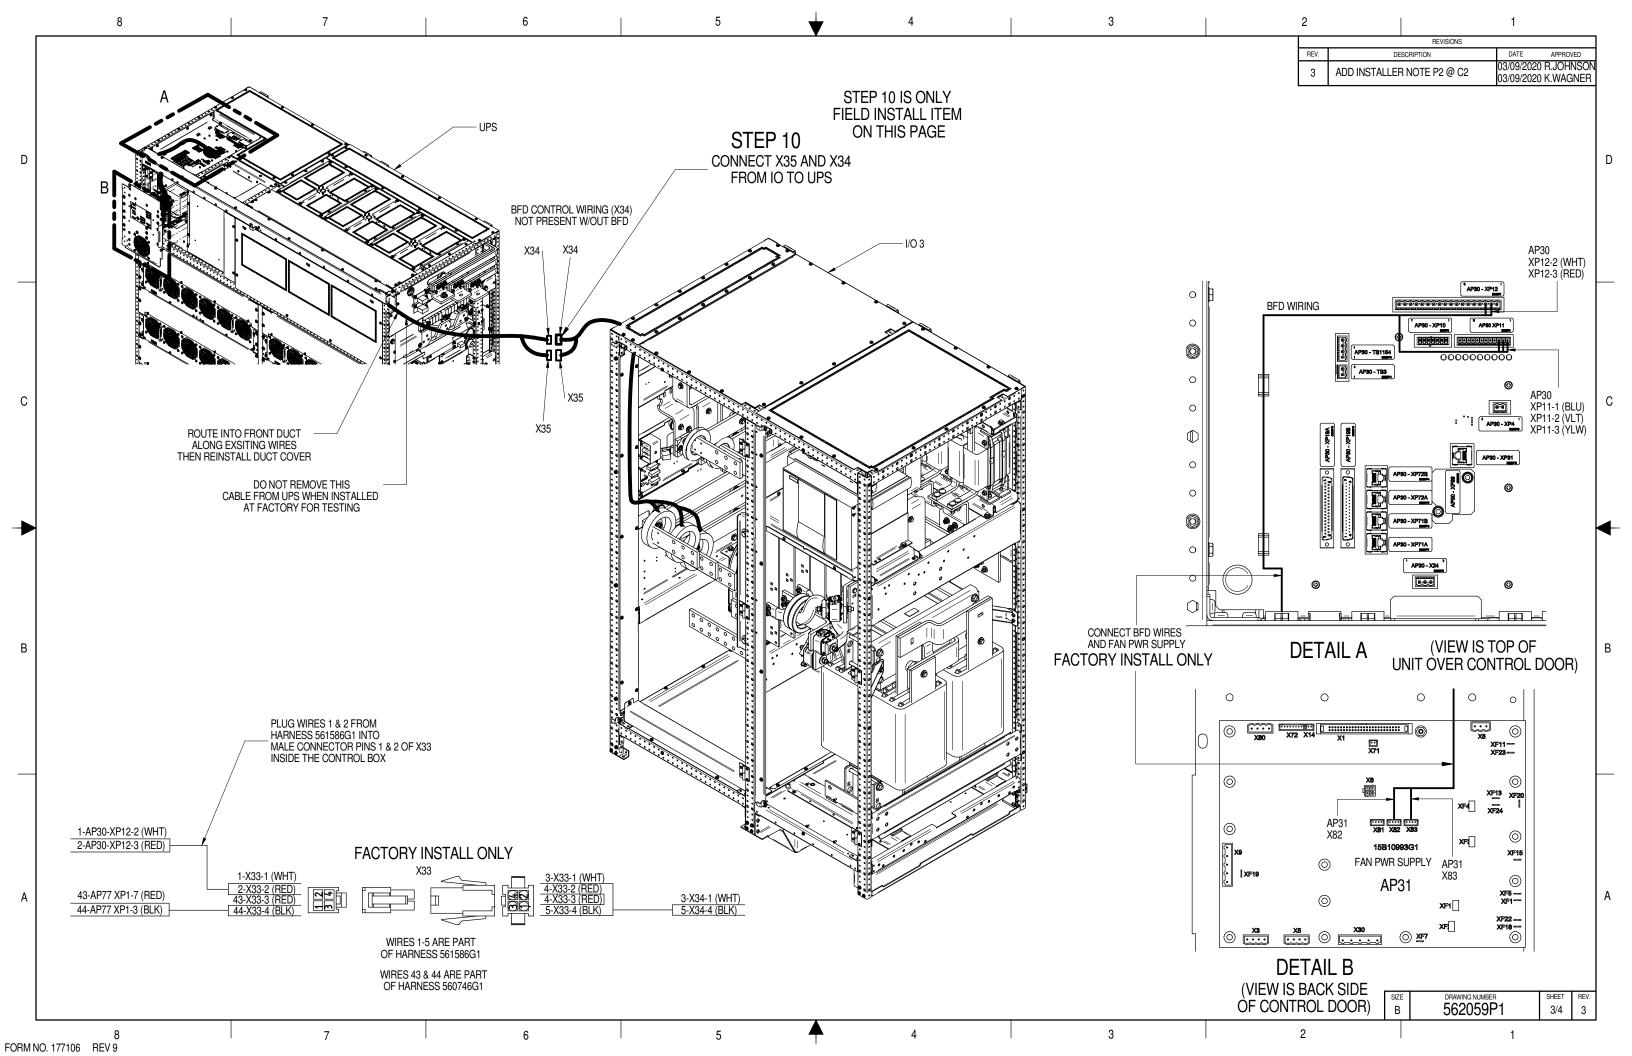

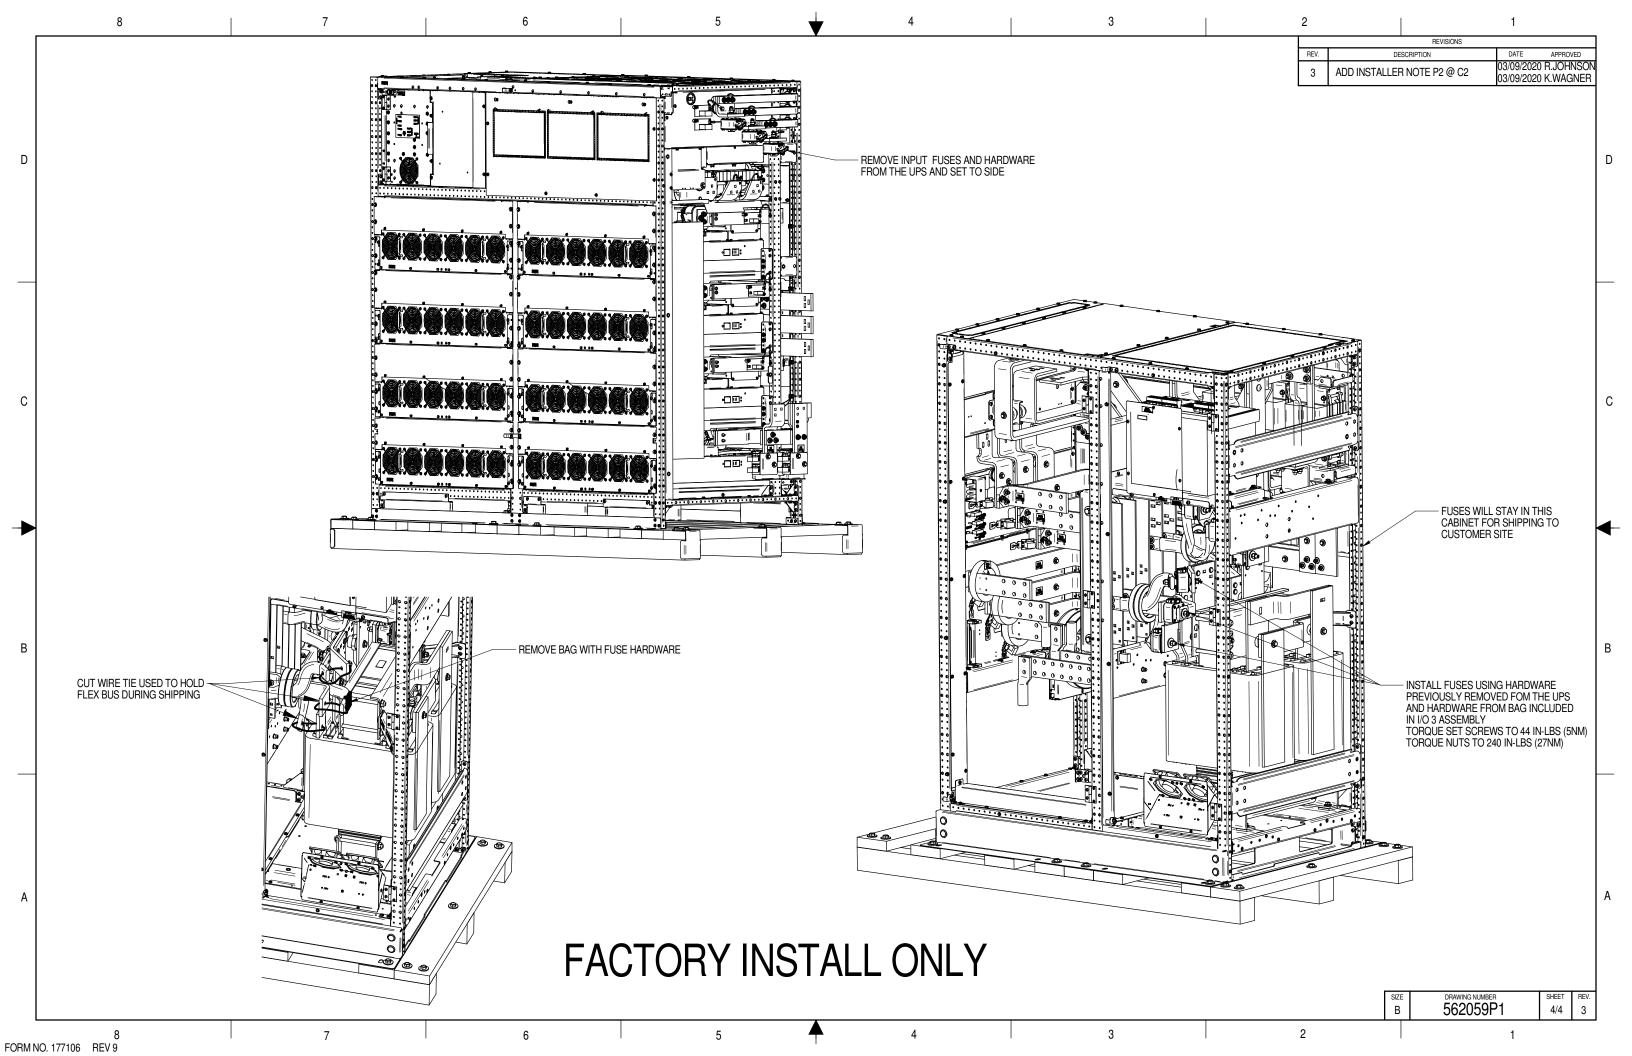







Vertiv.com | Vertiv Headquarters, 1050 Dearborn Drive, Columbus, OH, 43085, USA

© 2015-2020 Vertiv Group Corp. All rights reserved. Vertiv[™] and the Vertiv logo are trademarks or registered trademarks of Vertiv Group Corp. All other names and logos referred to are trade names, trademarks or registered trademarks of their respective owners. While every precaution has been taken to ensure accuracy and completeness herein, Vertiv Group Corp. assumes no responsibility, and disclaims all liability, for damages resulting from use of this information or for any errors or omissions. Specifications are subject to change without notice.