



Exporting Virtual Construction Link (VCL) Files

1. Select **File → Export**. The Export command is located in the display panel.
2. Click the **Construction** tab.
3. Select **VCL Project Link** exporter option in the **File Format** List.
4. In the **Data** box, click and select any objects that you want to include in the export and a graphic view. You can also click **Options** and choose selections in the list view.
5. Type a path and file name for the exported file in the **File Name** box, or click the **Browse** button to find a specific save location and specify file name there. By default, if you do not choose a file name, the exported file is given the name of your project.
6. If you want to export additional files, uncheck the **Close Command after Export** option box.
7. Click **Export**. The selected data is exported to the file you specified.