




Dimensions

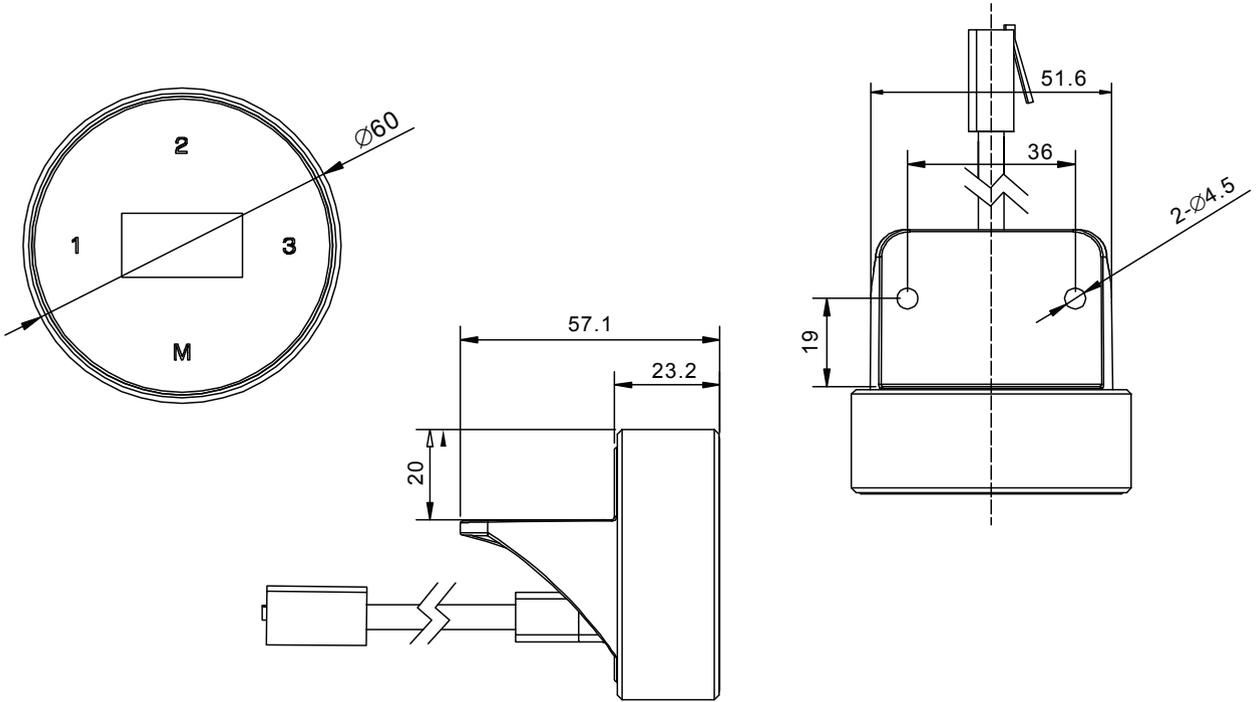

: YUhi fYg

FÉOLED @ã @Áisplay
 CÉV[~ &@ &^ ^) Áã d } • Á3] | ^ ^ o buttons, 1 memory button)
 HÉÚ[cã] aÁ] Áã áÁ[, } Á [ç^ ^) cã] d[|
 I ÉÚ^ á^) cã ^ Áã {
 Í ÉW] ^! Áã áÁ[, ^! Áã áÁã b • d ^) c
 Í ÉÚ^ { [c^ Á[& á *

7 cbf c`g

Basic Movement: Press and hold the 'M' button until the menu appears. Navigate to the 'Lock' icon and press 'M' to activate. Once active, the user must press '1', '2', '3' to unlock the remote.

Once in the desired position, press the 'M' button followed by a number.

Press and hold the 'M' button until the menu appears. Navigate to the 'Lock' icon and press 'M' to activate. Once active, the user must press '1', '2', '3' to unlock the remote.

Press and hold the 'M' button until the menu appears. Navigate to the 'Bell' icon and press 'M' to activate. The user can select between '30', '40', '50', or '60' minute time intervals for the alarm to vibrate.

Move to the desired maximum or minimum height. Press and hold the 'M' button until the menu appears. Navigate to the 'Up Down Arrow' icon and press 'M' to activate. Choose either the 'Max' or 'Min' to set the intended height limit. To remove the limits, select 'Off'.