

PA-28


Data Sheet





| Control Ability | Dual Channel Individual Control | |
|---------------------|---|--|
| Input Voltage | 12VDC | |
| Output Power | 12VDC | |
| Current | 30A (15A Per Channel) | |
| Kit Includes | 2 Hand Remotes, 1 Control Box, Remote Batteries | |
| Remote Functions | Up, Down, Pause (Momentary & Non-Momentary) | |
| Remote Battery Type | 12V Alkaline Battery | |
| Size (L x H x W) | 4.5" x 1.3" x 3.3" | |
| Weight | 1.05 lbs | |
| Warranty | 18 Months | |

Dimensions




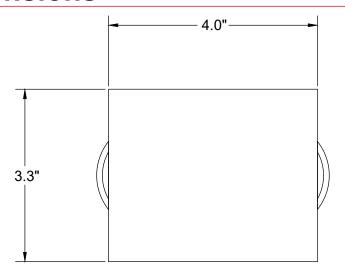


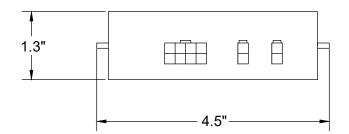

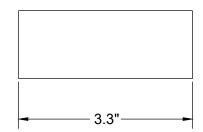

Wiring Diagram

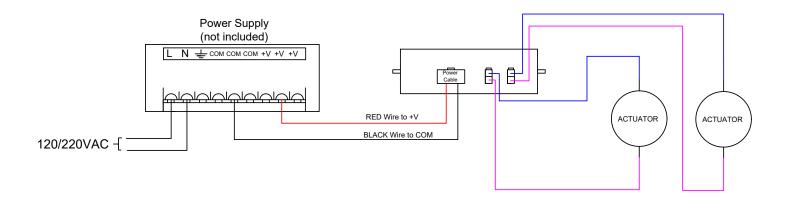

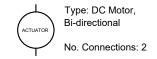

Momentary/Non-Momentary Mode



Momentary Mode

- •Ensure the Jumper S1 on the PCB is connected
- •Hold UP to extend the actuator, let go to stop the actuator
- •Hold DOWN to retract the actuator, let go to stop the actuator

Non-Momentary Mode

- Ensure the Jumpers S1 on the PCB is disconnected
- •Press UP to extend the actuator, Press UP again to stop the actuator
- Press DOWN to retract the actuator, Press DOWN again to stop the actuator
- If DOWN is pressed while the actuator is extending, it will reverse direction and begin to retract

Remote Synchronization Process



- •Open the control box and press the white button. the blue LED with turn on
- Press any button on the remote and the LED will turn off
- •The remote is now saved to the control box
- •A maximum of two remotes can be saved to one control box