

SMARTFLOOR

Mercedes Vito A2/A3 Se Installation Manual






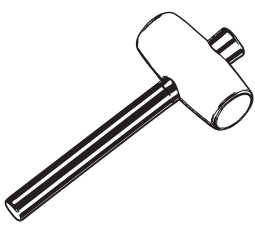

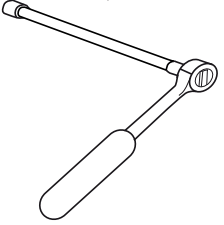



Revision Record

Rev nr	Date	Page	Picture	Update	New	Deleted steps


Recommended torque for screws:

4,2mm Selfdrilling: 3,6 NM
 6mm: 6 NM
 8mm: 10 NM
 10mm: 42 NM

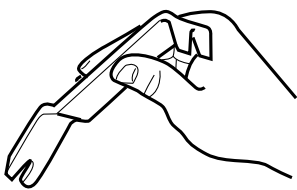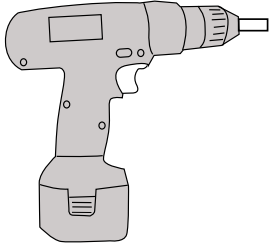Tools


			
10, 13 mm 	10, 13 mm 	Bits T 25 T 30 T 40 	Bits PH2  

15014589 Kit Complete Vito A2 Orig Sep Se 1SLD

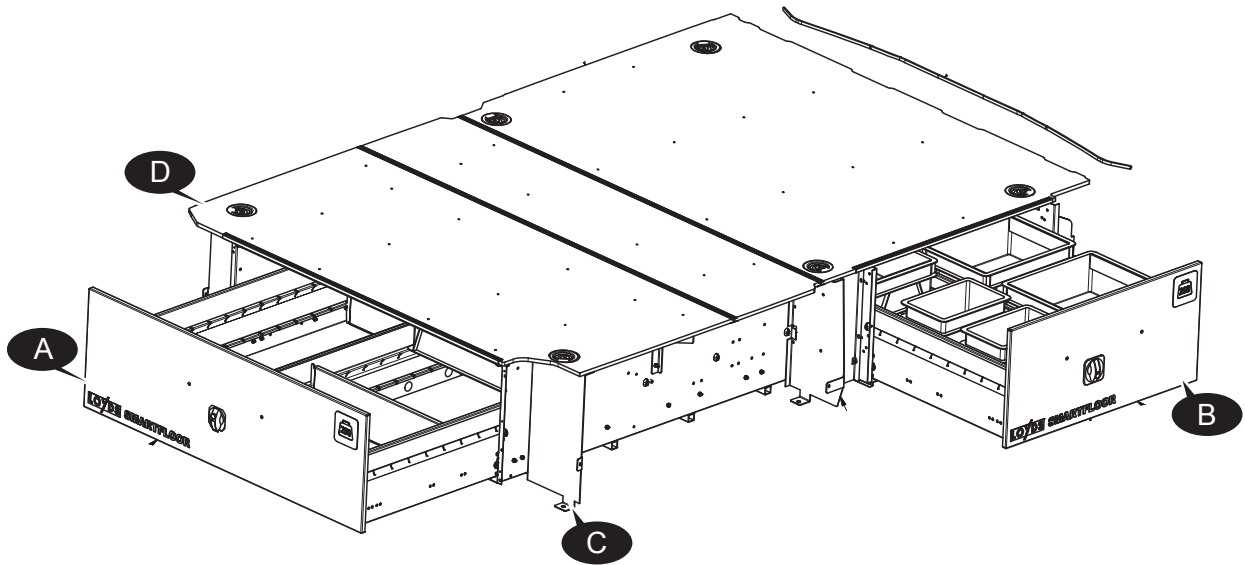


Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete ASSY
B	1	15009580	FD1 Front Drawer Complete Assy
C	1	15012321	Steel bracket set Vito A2
D	1	15014578	Floor Set Vito A2 Orig Sep Se 1SLD

15014590 Kit Complete Vito A2 Orig Sep Se 2SLD

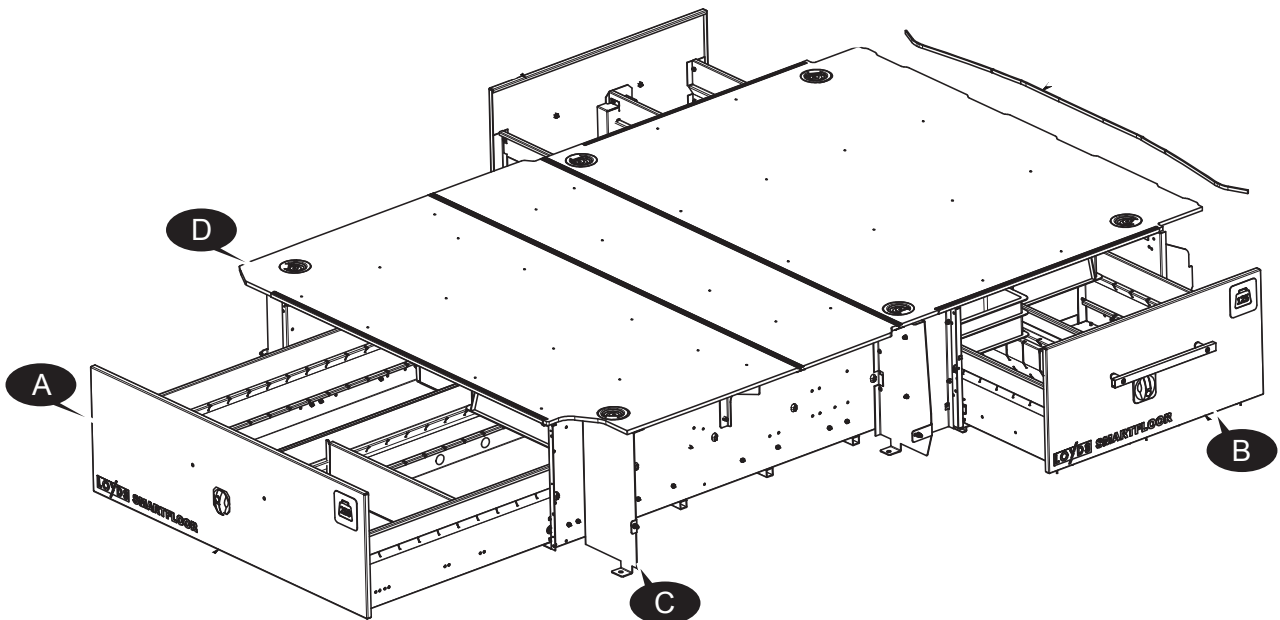


Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete ASSY
B	1	15009190	FD2 Drawer 700 600 Main Assy
C	1	15012321	Steel bracket set Vito A2
D	1	15014579	Floor Set Vito A2 Orig Sep Se 2SLD

15014591 Kit Complete Vito A3 Orig Sep Se 1SLD

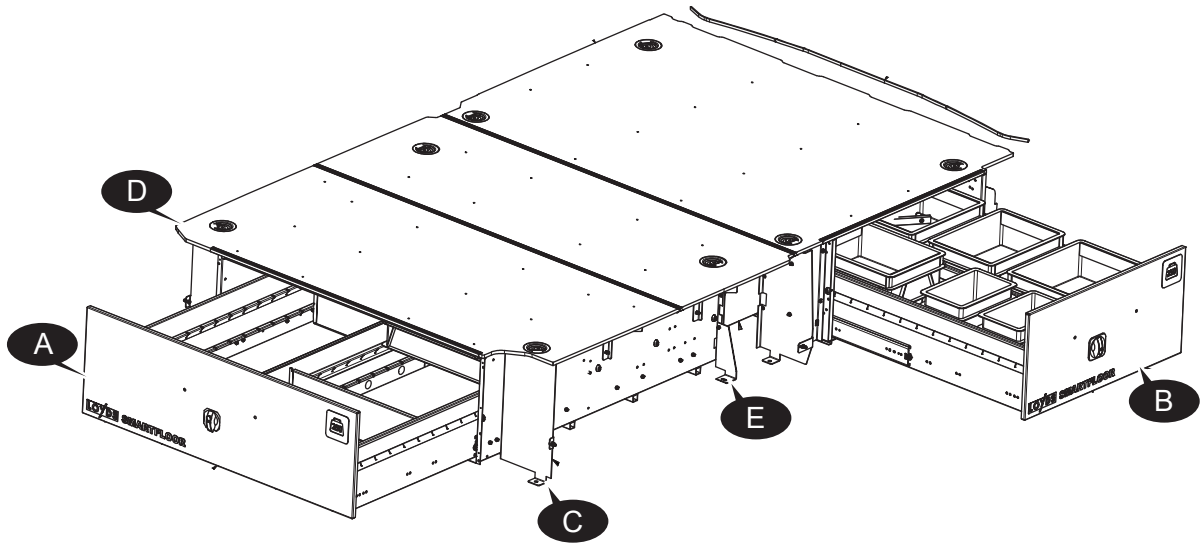


Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete ASSY
B	1	15009580	FD1 Front Drawer Complete Assy
C	1	15012321	Steel Bracket Set Vito A2
D	1	15014580	Floor Set Vito A3 Orig Sep Se 1SLD
E	1	15013453	Additional Steelbracket Set Vito A3

15014592 Kit Complete Vito A3 Orig Sep Se 2SLD

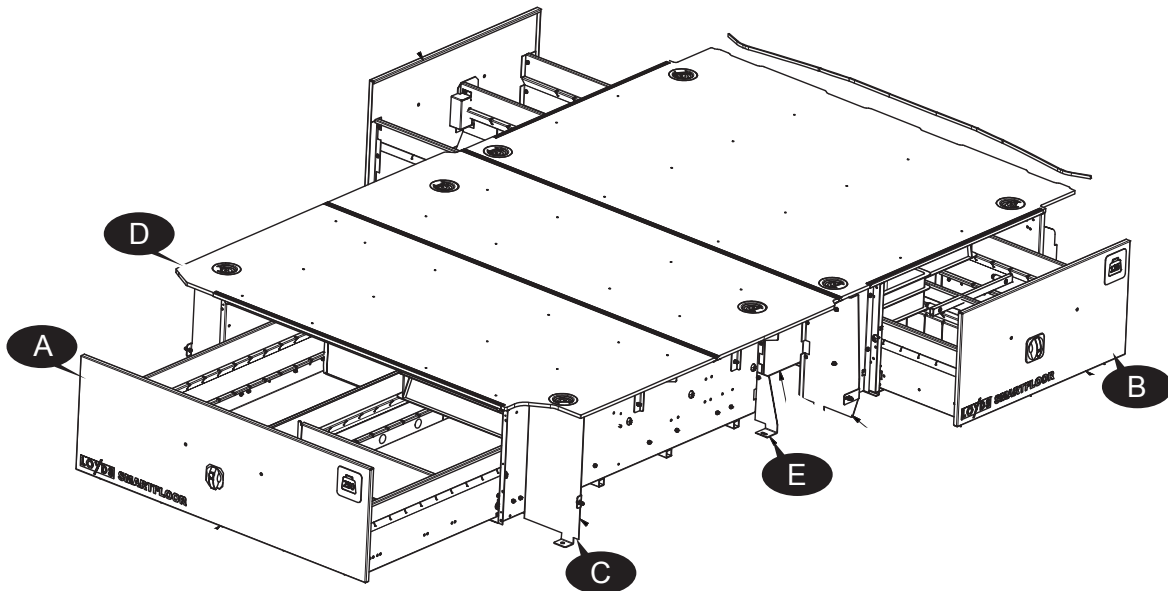


Item	Quantity	Part Number	Description
A	1	15009300	RD Rear Drawer Complete ASSY
B	1	15009190	FD2 Drawer 700 600 Main Assy
C	1	15012321	Steel bracket set Vito A2
D	1	15014581	Floor Set Vito A3 Orig Sep Se 2SLD
E	1	15013453	Additional Steelbracket Set Vito A3

15014578_B Floor Set Vito A2 Orig Sep Se 1SLD

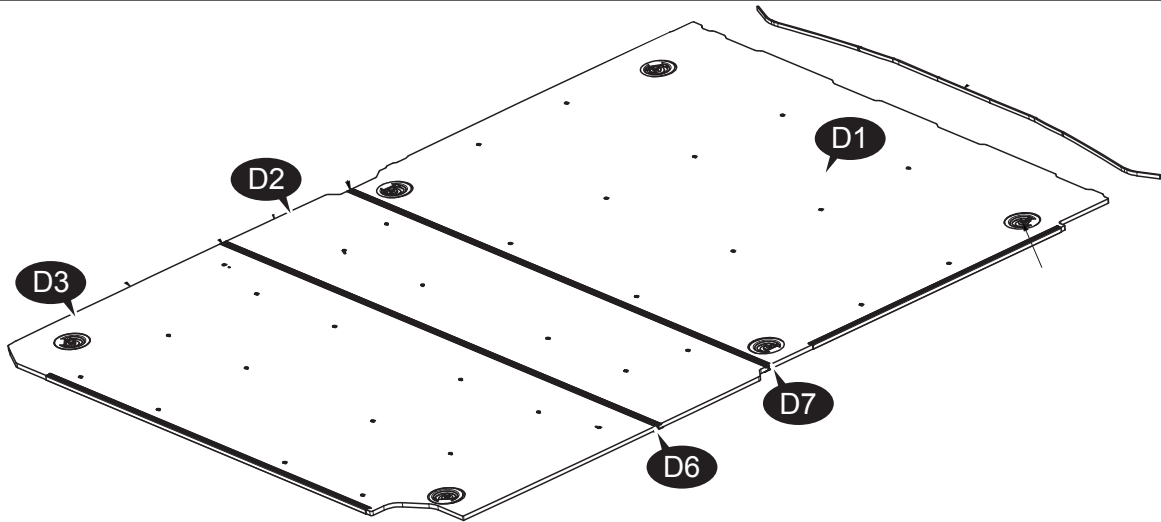


Item	Quantity	Part Number	Description
D1	1	15016322	Front Floor SF Vito Orig Sep Se 1SLD ASSY
D2	1	15012326	Middle Floor Vito A2
D3	1	15016321	Rear Floor SF Vito A2 ASSY
D6	1	15012329	H-profile 12mm L=1665
D7	1	15012328	H-profile 12mm L=1608
	1	15012324	Fitting Kit Floor Set Vito A2 2SLD

15014579_B Floor Set Vito A2 Orig Sep Se 2SLD

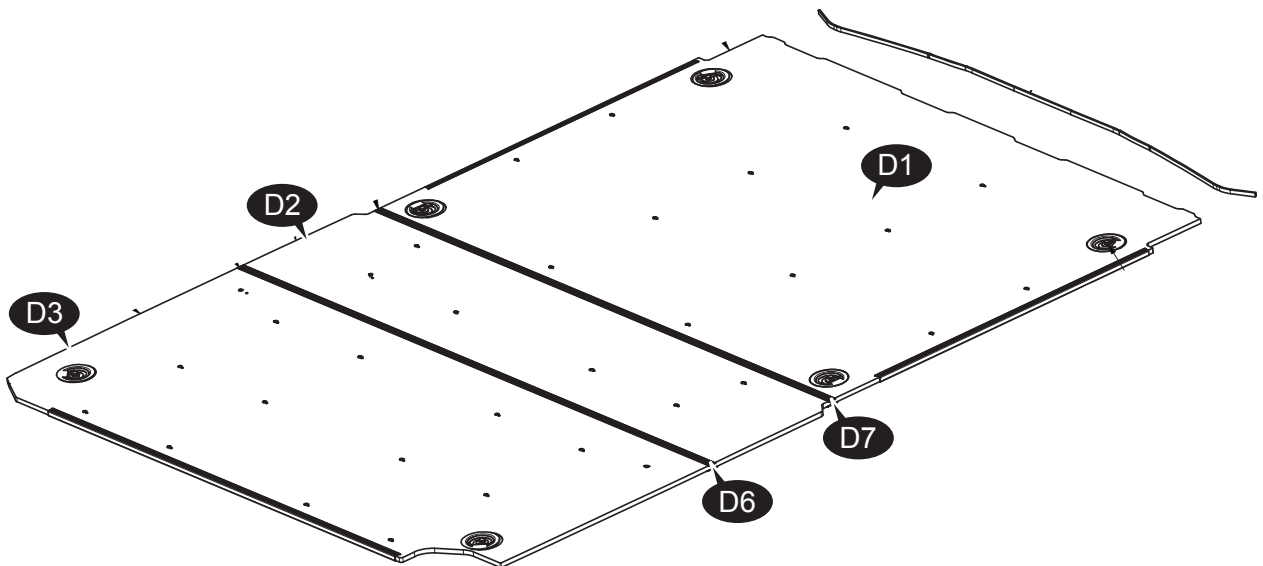


Item	Quantity	Part Number	Description
D1	1	15016320	Front Floor SF Vito Orig Sep Se 2SLD ASSY
D2	1	15012326	Middle Floor Vito A2
D3	1	15016321	Rear Floor SF Vito A2 ASSY
D6	1	15012329	H-profile 12mm L=1665
D7	1	15012328	H-profile 12mm L=1608
	1	15012324	Fitting Kit Floor Set Vito A2 2SLD

15014580_B Floor Set Vito A3 Orig Sep Se 1SLD

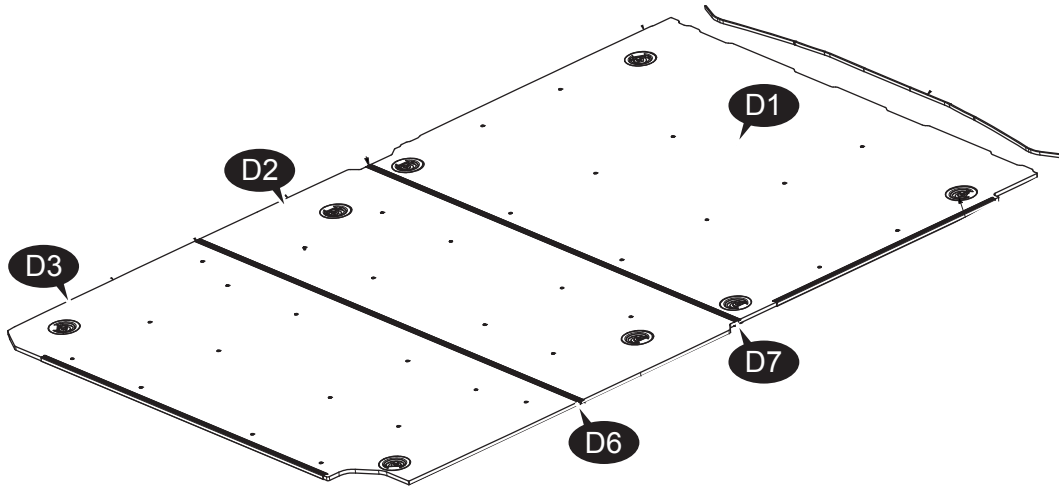


Item	Quantity	Part Number	Description
D1	1	15016322	Front Floor SF Vito Orig Sep Se 1SLD ASSY
D2	1	15013454	Middle Floor Vito A3
D3	1	15016322	Front Floor SF Vito Orig Sep Se 1SLD ASSY
D3	1	15016321	Rear Floor SF Vito A2 ASSY
D6	1	15012329	H-profile 12mm L=1665
D7	1	15012328	H-profile 12mm L=1608
	1	15013468	Fitting Kit Floor Set Vito A3 2SLD

15014581_B Floor Set Vito A3 Orig Sep Se 2SLD

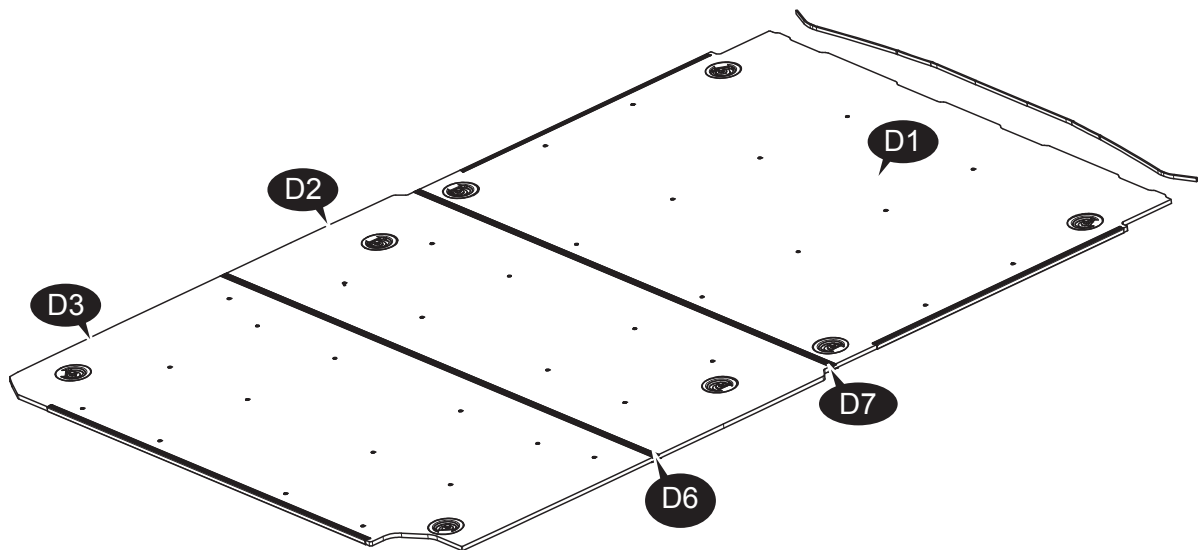


Item	Quantity	Part Number	Description
D1	1	15016320	Front Floor SF Vito Orig Sep Se 2SLD ASSY
D2	1	15013454	Middle Floor Vito A3
D3	1	15016320	Front Floor SF Vito Orig Sep Se 2SLD ASSY
D3	1	15016321	Rear Floor SF Vito A2 ASSY
D6	1	15012329	H-profile 12mm L=1665
D7	1	15012328	H-profile 12mm L=1608
	1	15013468	Fitting Kit Floor Set Vito A3 2SLD

15012321 Steel bracket set Vito A2

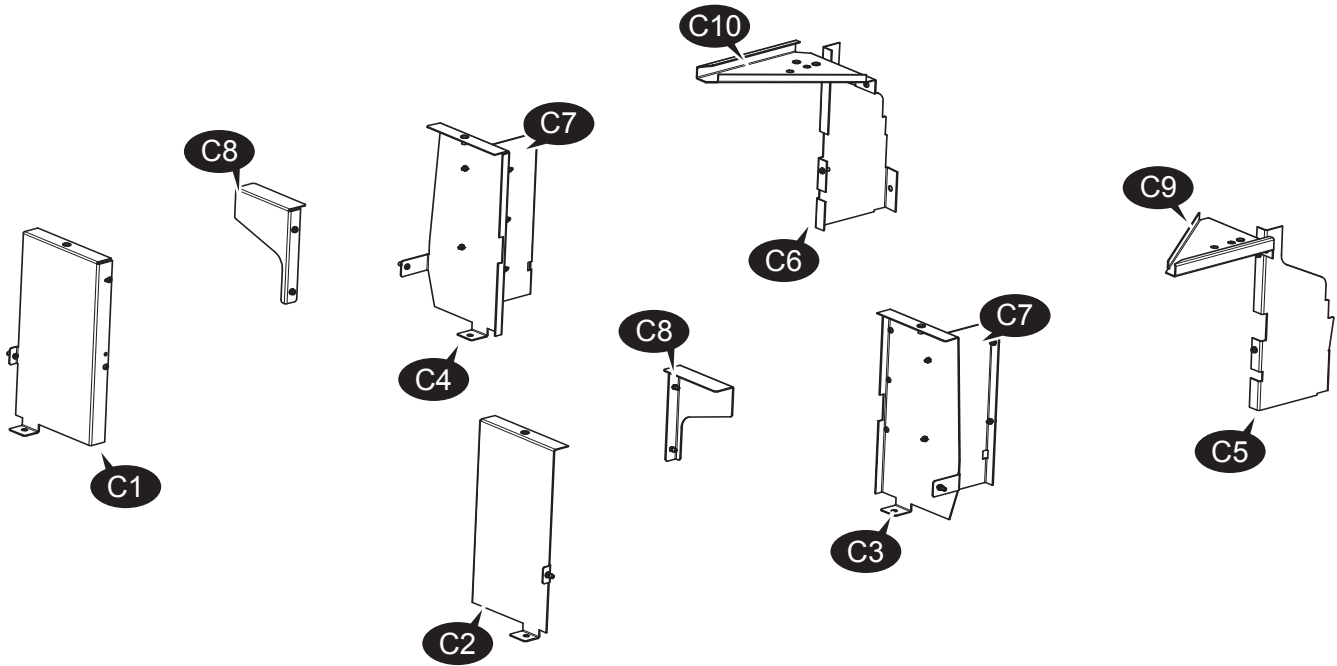


Item	Quantity	Part Number	Description
C1	1	15012332	Bracket Rear Left w Latch ASSY
C2	1	15012333	Bracket Rear Right w Latch ASSY
C3	1	15012331	Bracket Side Middle Right w Latch ASSY
C4	1	15012330	Bracket Side Middle Left w Latch ASSY
C5	1	15012334	Bracket Side Front Right ASSY
C6	1	15012335	Bracket Side Front Left ASSY
C7	2	15012319	Bracket Connect Front Rear Drawer
C8	2	15010225	Bracket Stiffener Middle Right T5 w heater ASSY
C9	1	15011031	Bracket Latchcup M8 Multi Right ASSY
C10	1	15011032	Bracket Latchcup M8 Multi Left ASSY
	1	15012322	Fitting Kit Steel Bracket Set A2

15013453 Additional Steelbracket Set Vito A3

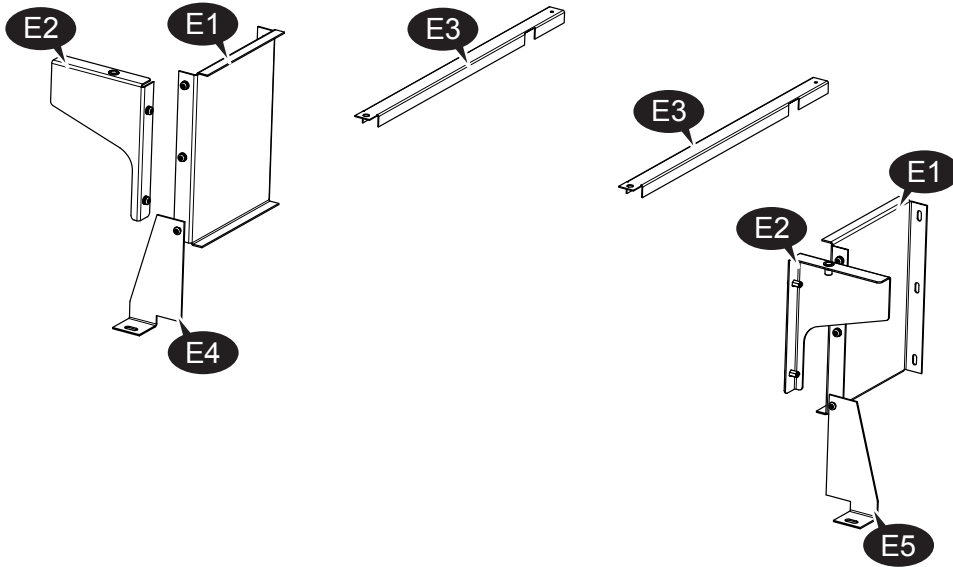

Item	Quantity	Part Number	Description
E1	2	15013462	Extend Bracket Vito A3 ASSY
E2	2	15013166	Bracket Middle w Latch Flexi ASSY
E3	2	15013465	Stiffener Rear Front Drawer Vito A3
E4	1	15013466	Bracket Floor Middle Left A3
E5	1	15013467	Bracket Floor Middle Right A3
	1	15013469	Fitting Kit Addit Steelbracket Vito A3


15010236 Handle Assy

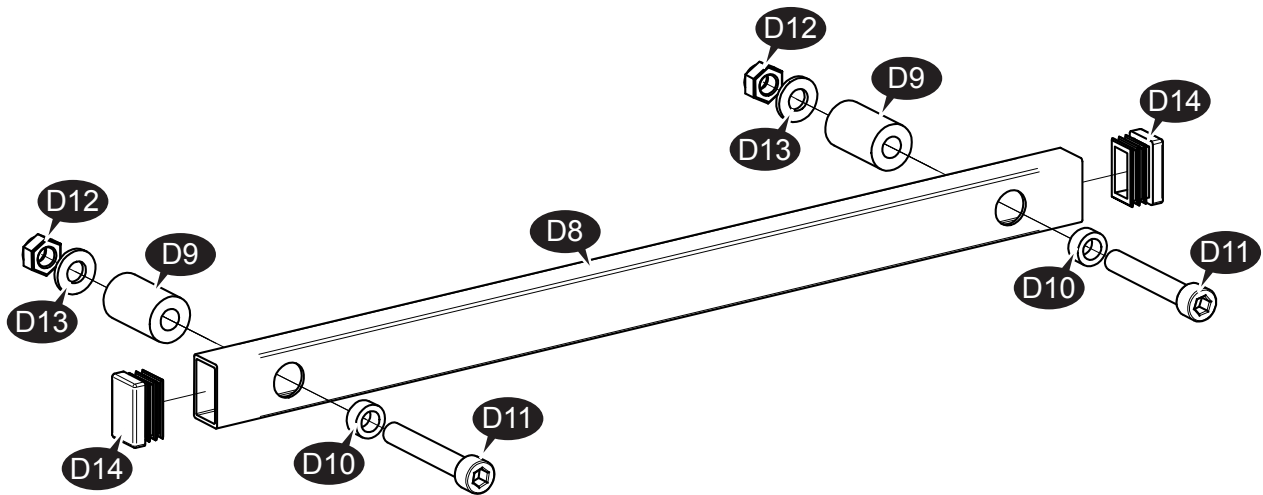


15010236 Handle Assy

Item	Quantity	Part Number	Description
D8	1	15009441	Handle Tube 25x15x286
D9	2	15009442	Spacer Ø8,3x18x30 Nylon Black
D10	2	15009443	Spacer Ø8,1x13x6mm Galv
D11	2	15009444	Screw M8x50 Cylinderh Hex
D12	2	8 NMU	Mutter M8 Nyloc DIN985
D13	2	8,4x17x2	M8 Washer, DIN 125
D14	2	15009438	End Plug Tube 25x15 Inside


15012322_B Fitting Kit Steel Bracket Set A2

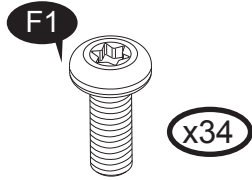

15003551
M6x16 TX30 pan (DIN 7985)

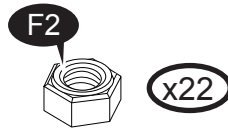


6 NMU
M6 Self Locking nut, DIN 985-8

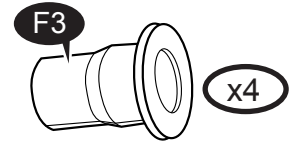


15003550
M6 Popnut short

15013469_A Fitting Kit Addit Steelbracket Vito A3

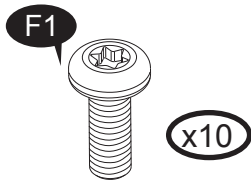


15003551
M6x16 TX30 pan (DIN 7985)


15012324_B Fitting Kit Floor Set Vito A2 2SLD

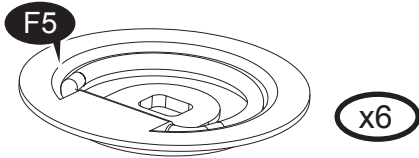


15005497
Latch Cup Black Ø90 Ø12x15 1000Kp

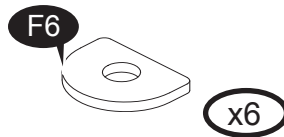


15005884
Washer Latchcup for Ø8

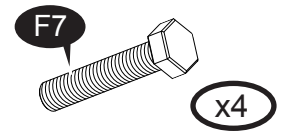


8x40 6KS
M8x40mm Bolt, DIN 933, sort

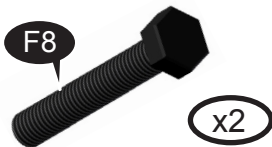


15004713
M8x50mm Bolt, 6K DIN 933 Black

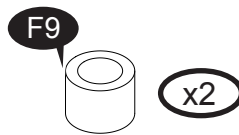

15001584
Distansehylse D20 d13 h15



11,3x18x12
Distansehylse B-223 Plast

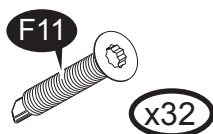


15009568
Screw 4,8x32 Selfdrill Counters Torx
Elz




36.721004
Window rubber profile
L: 1600mm


15013468_A Fitting Kit Floor Set Vito A3 2SLD

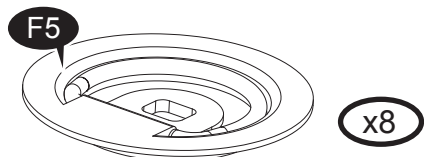


15005497
Latch Cup Black Ø90 Ø12x15 1000Kp

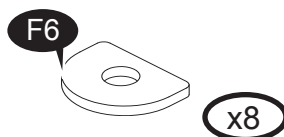

15005884
Washer Latchcup for Ø8

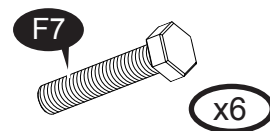

8x40 6KS
M8x40mm Bolt, DIN 933, sort

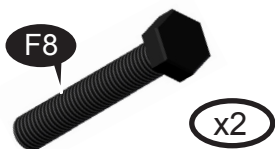


15004713
M8x50mm Bolt, 6K DIN 933 Black



15001584
Distansehylse D20 d13 h15



11,3x18x12
Distansehylse B-223 Plast

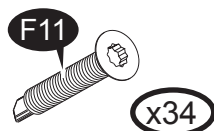


15009568
Screw 4,8x32 Selfdrill Counters Torx
Elz



36.721004
Window rubber profile
L: 1600mm

1.

L&R

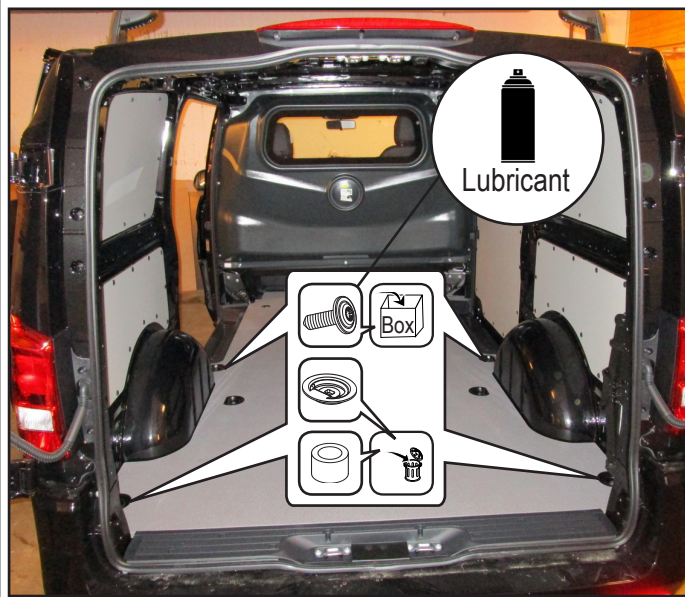


2.

RH




3.

LH

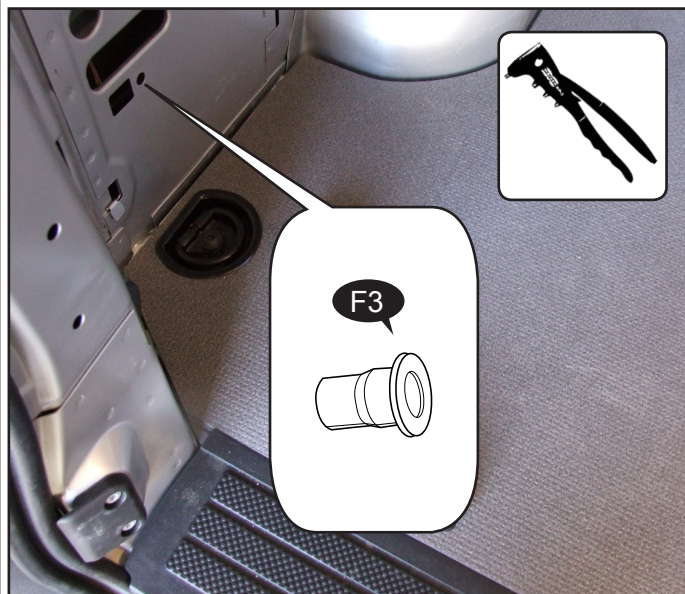


4.

RH

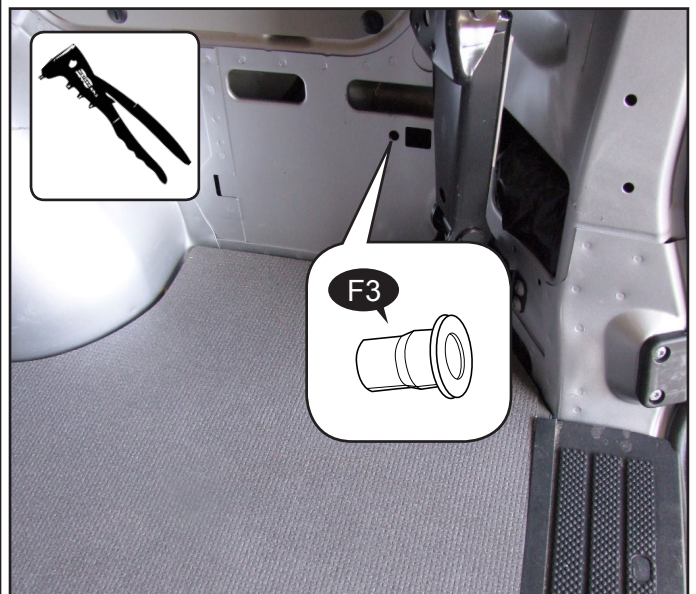

5.

LH

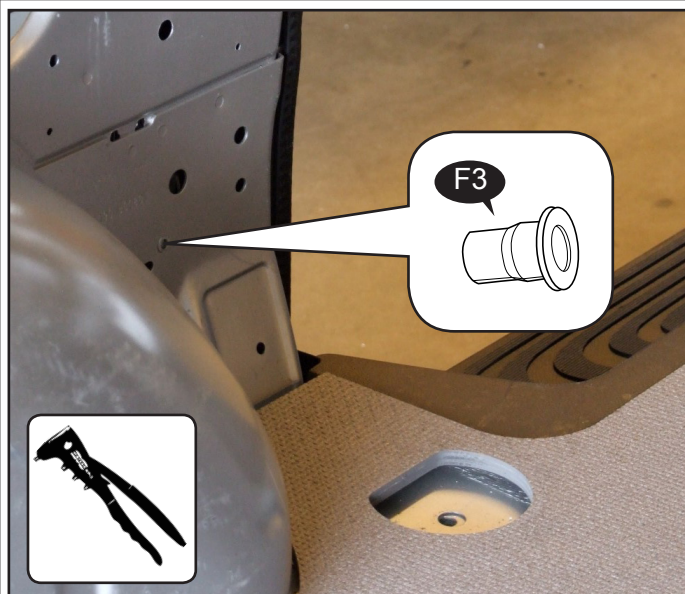


6.

RH




7.


L&R

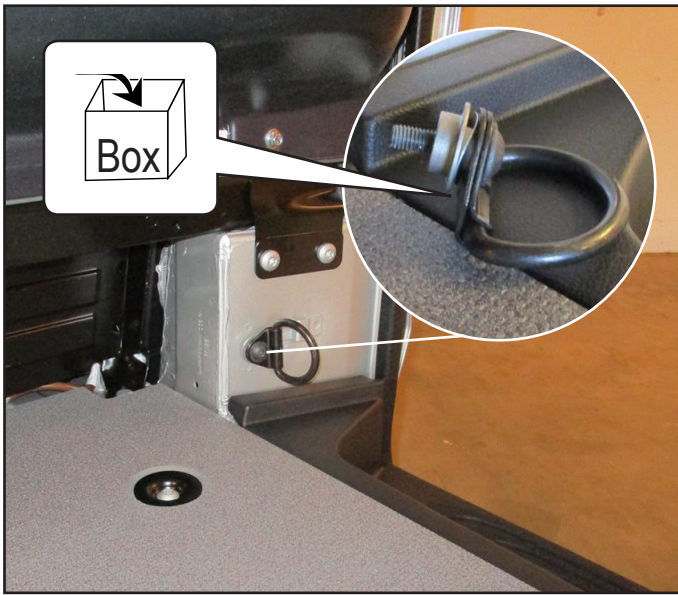


8.

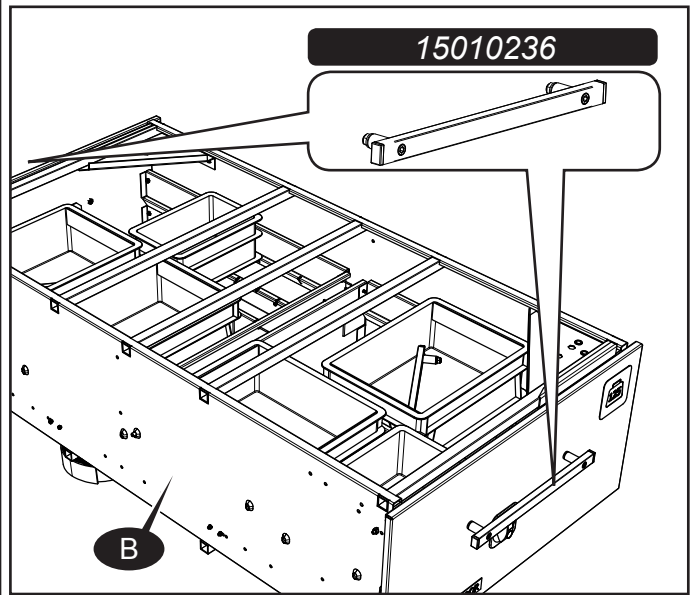


9.

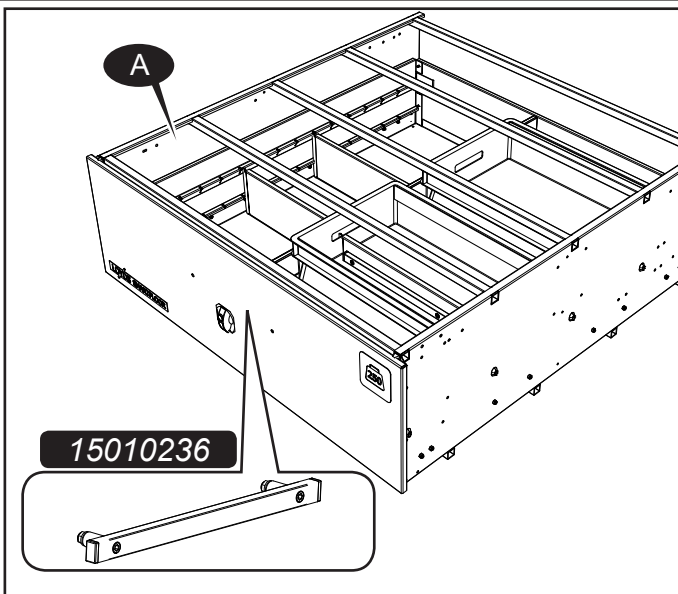

10.

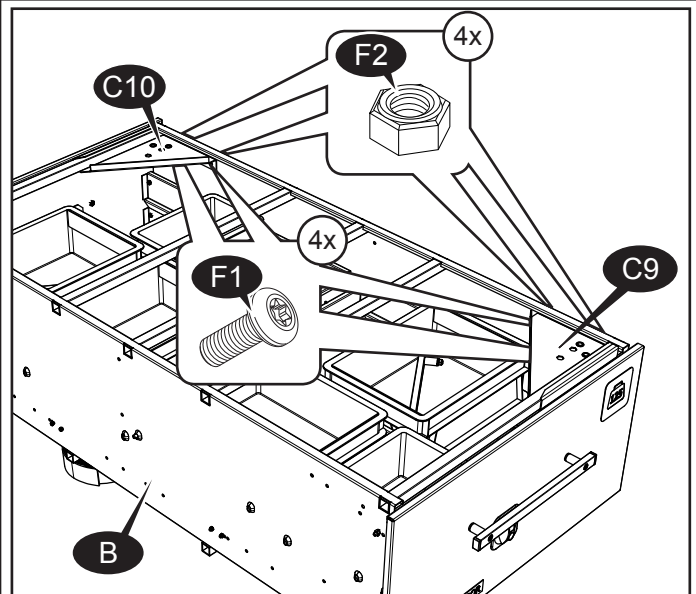


11.

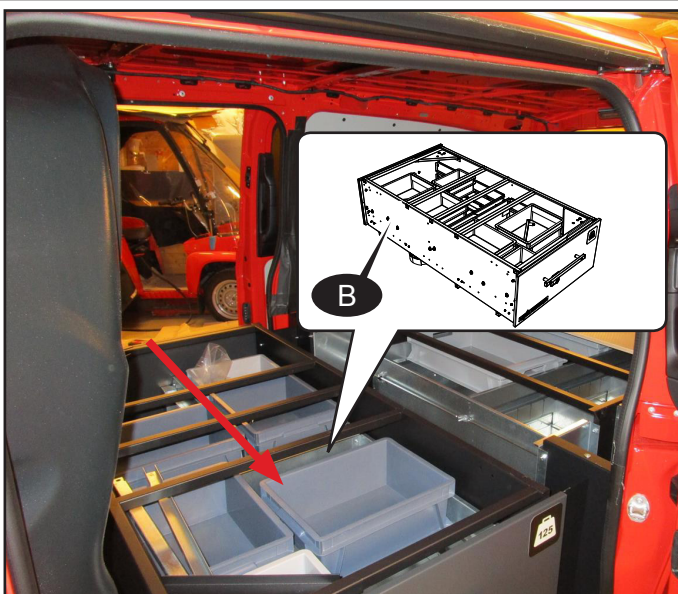


12.

L&R

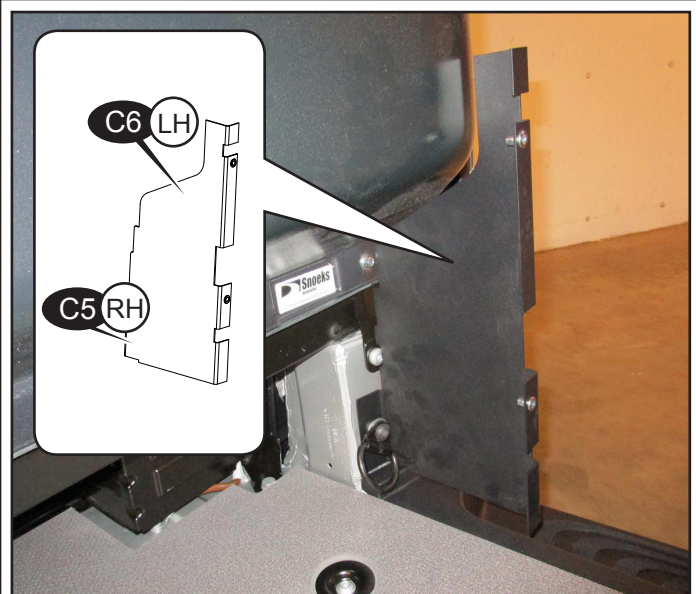


13.

L&R

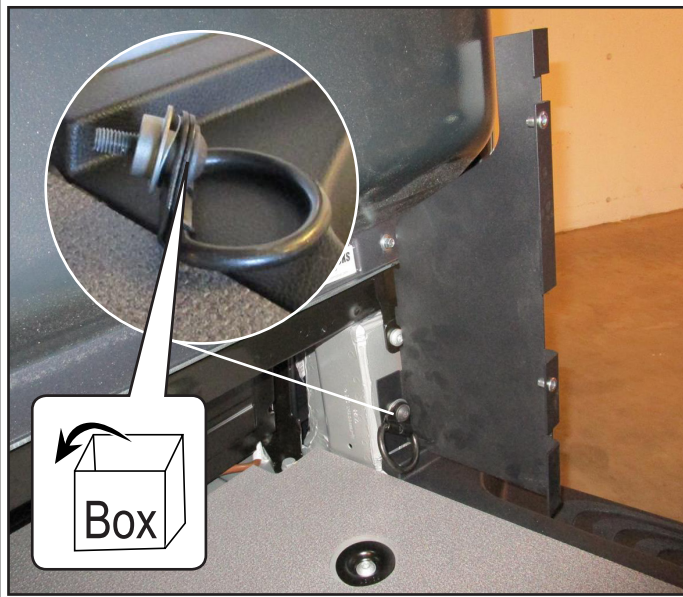

14.


L&R

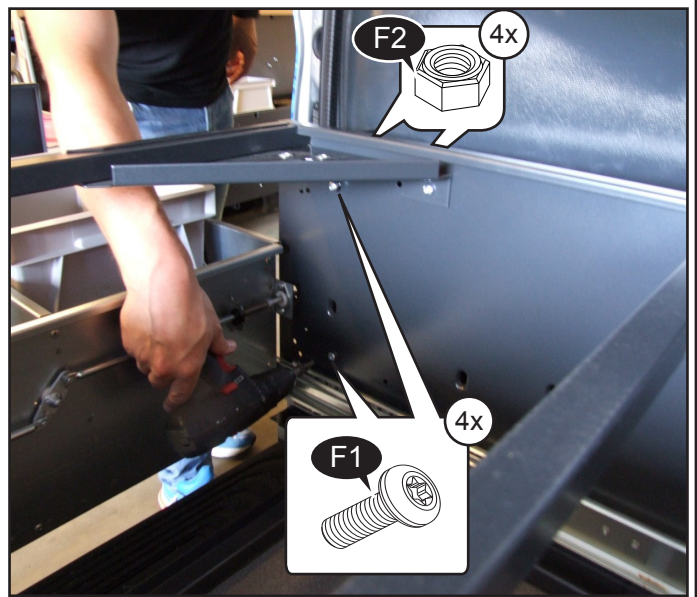

15.

16.

L&R


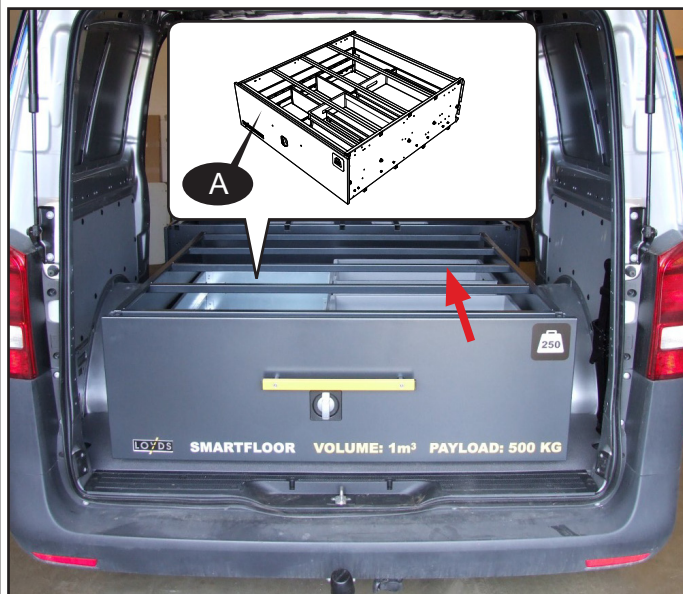


17.

A2 L&R


17.A

A2 L&R

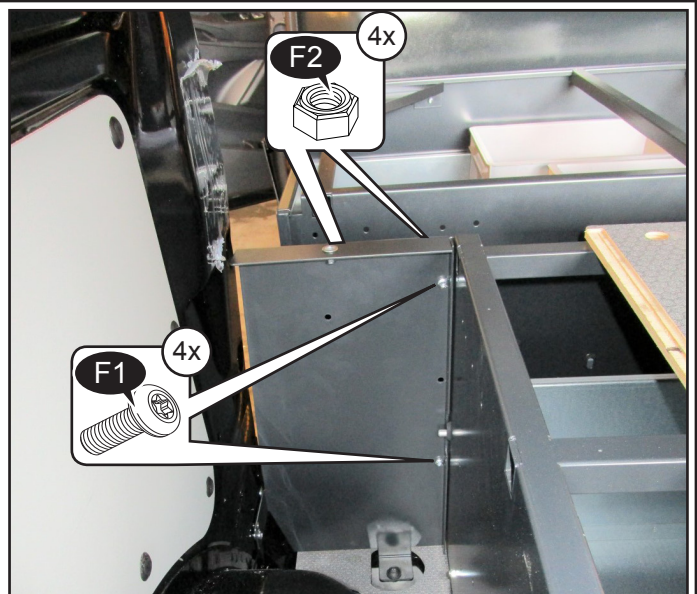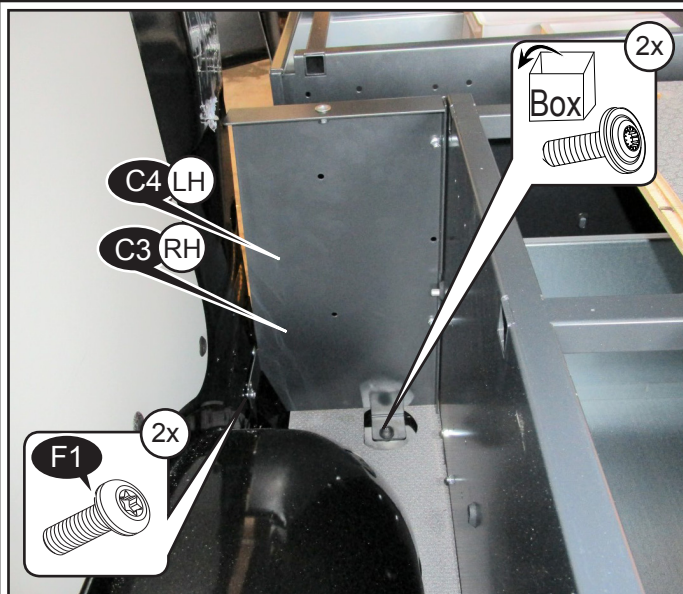


17.B

A2 L&R

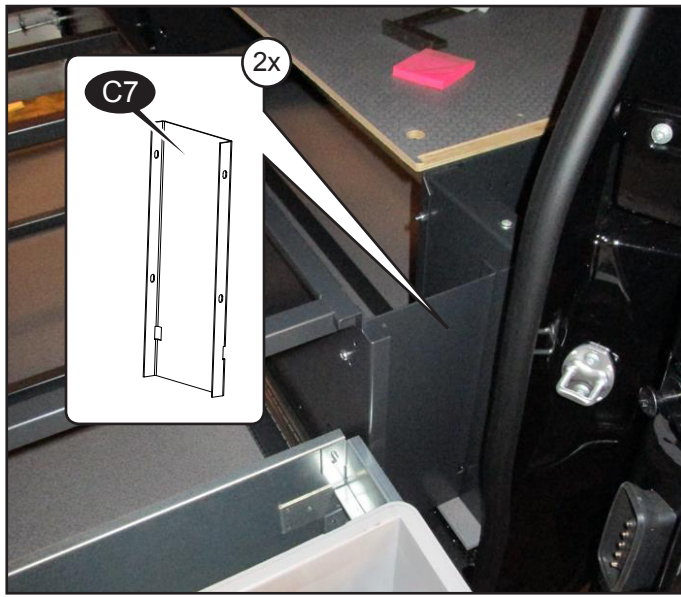


17.C

A2 L&R

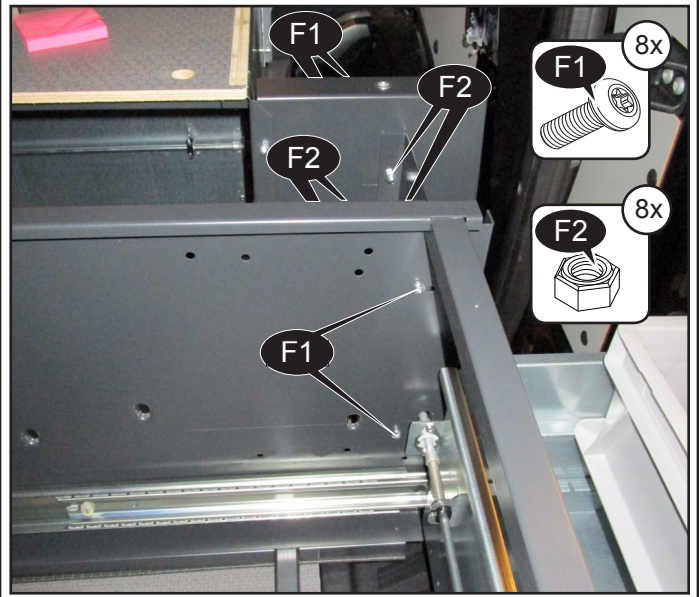


18.

A3 L&R

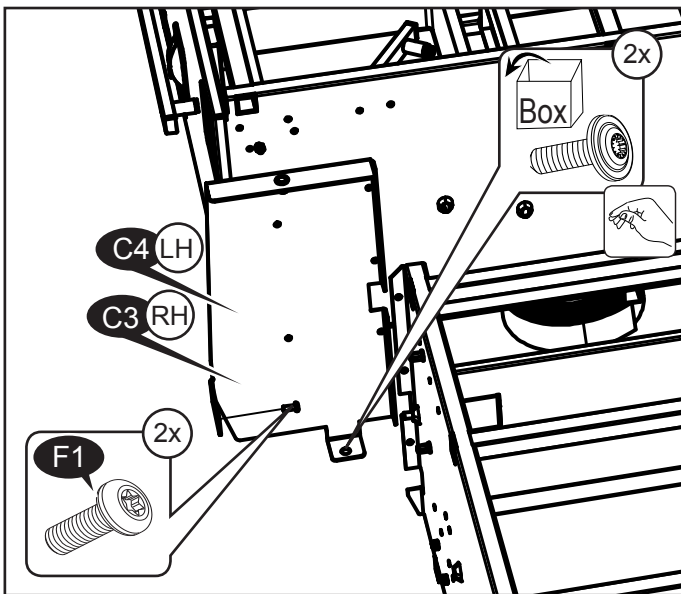


18.A

A3 L&R

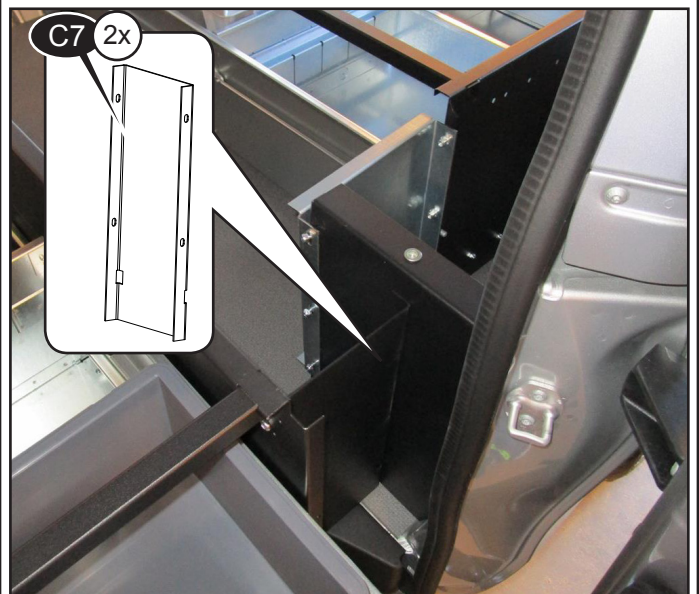


18.B







A3 L&R

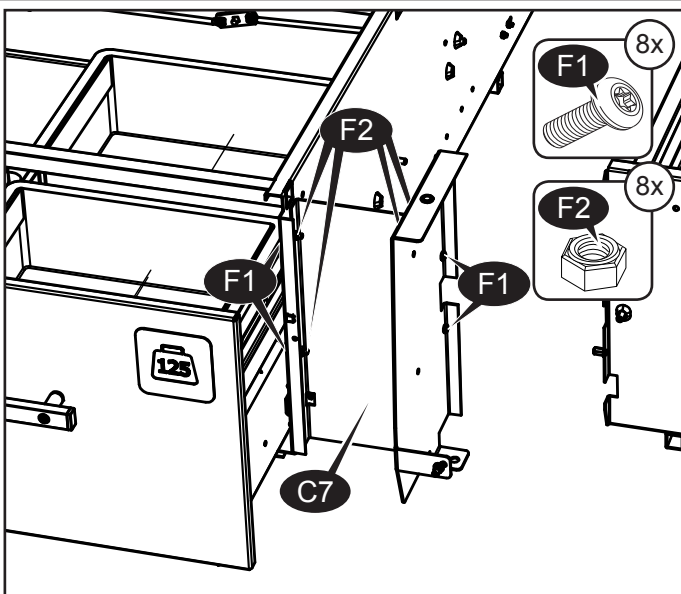

18.C

A3 L&R

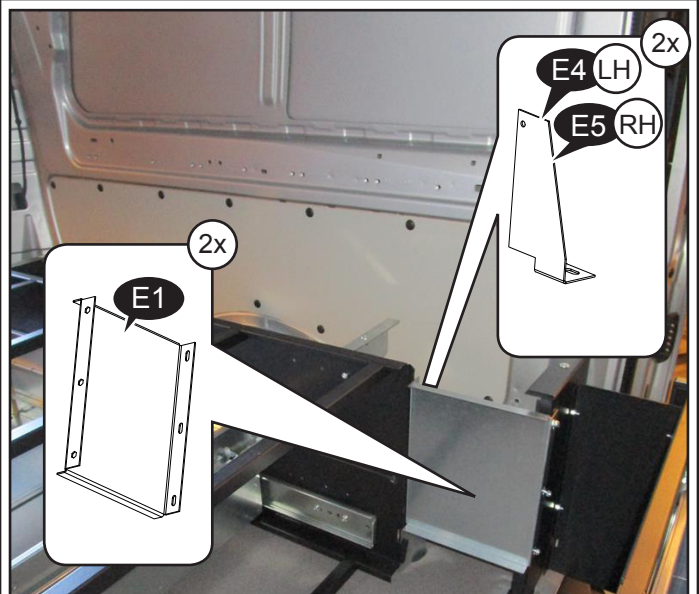

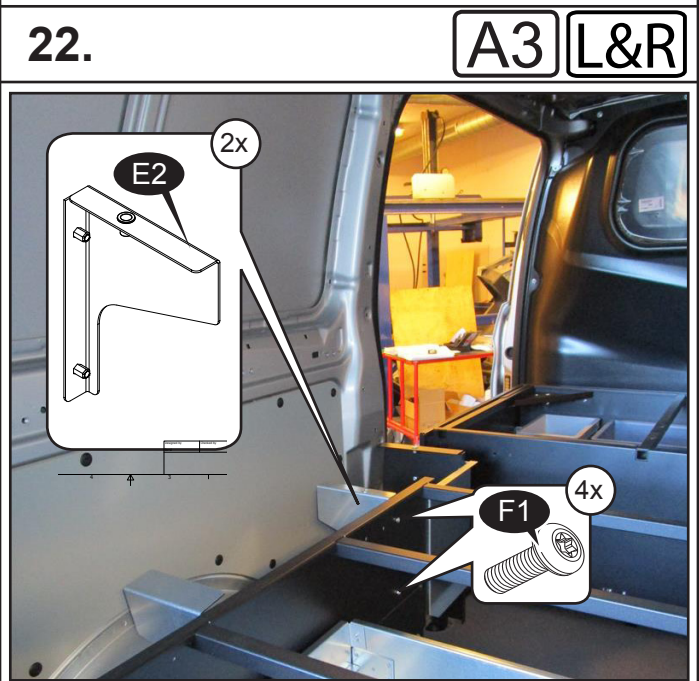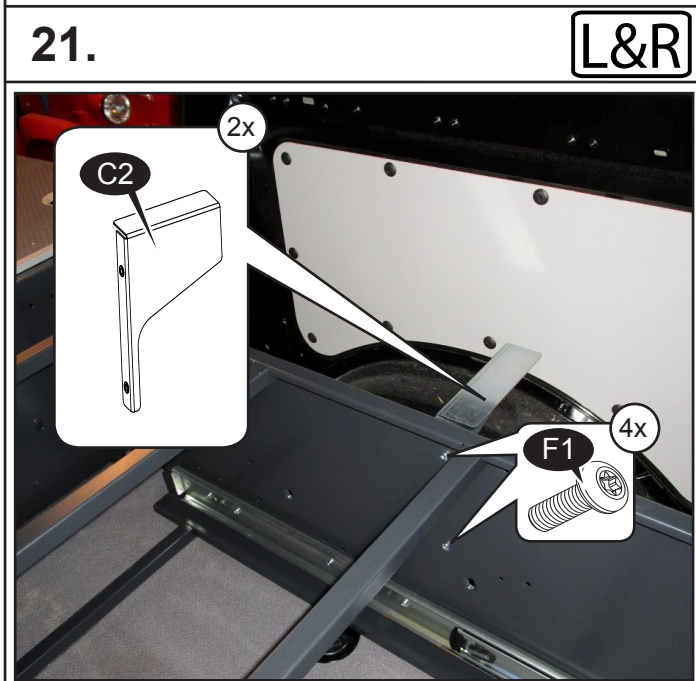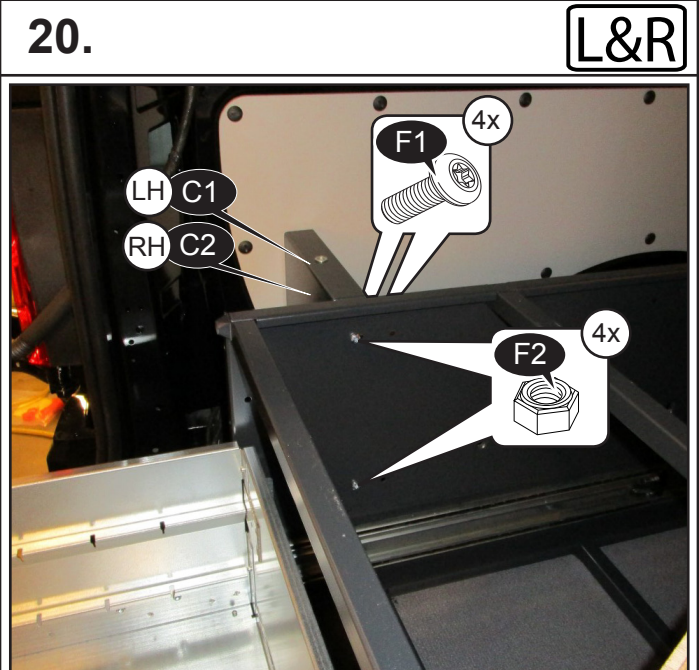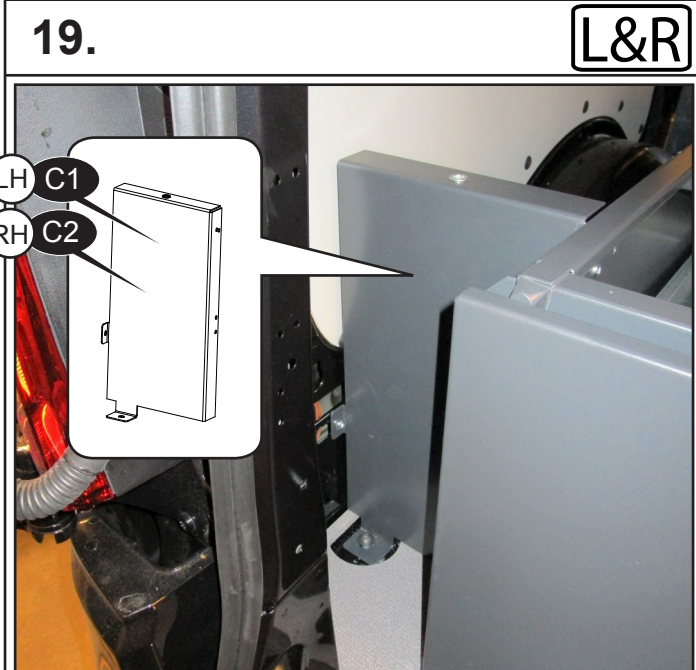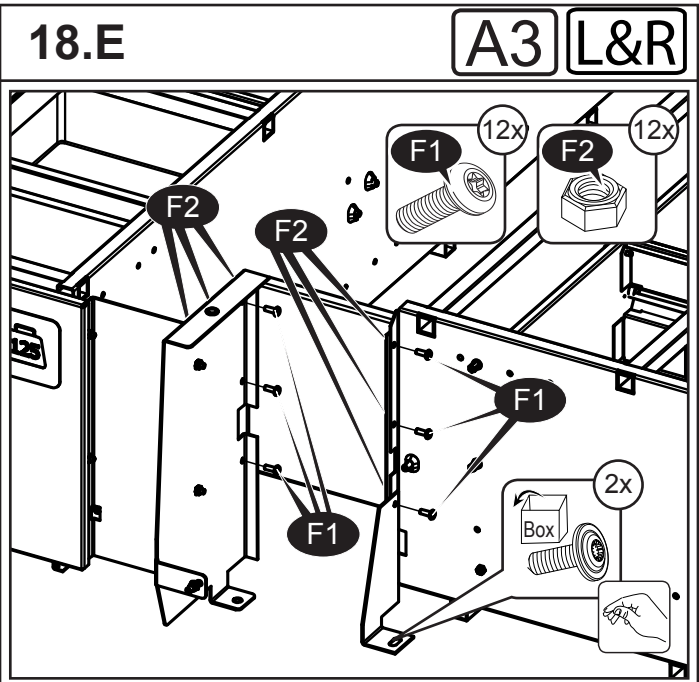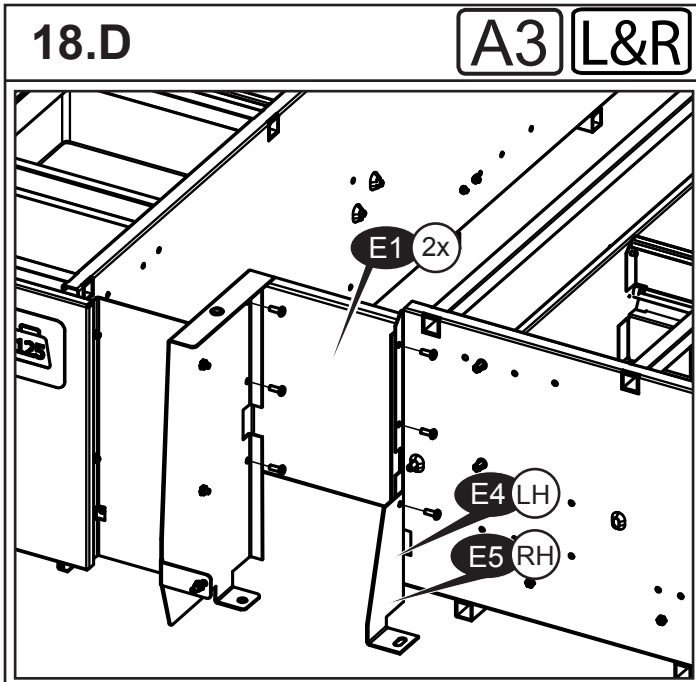


23.




24.

A2

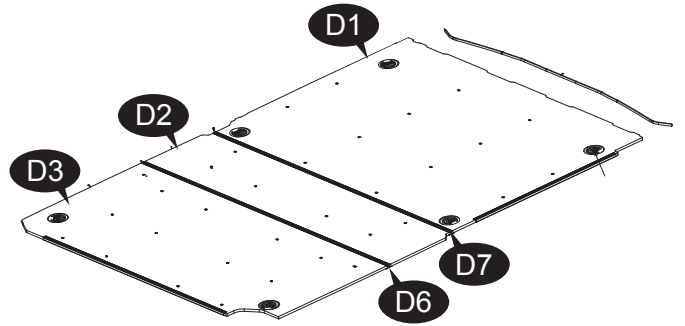


24.A

A2

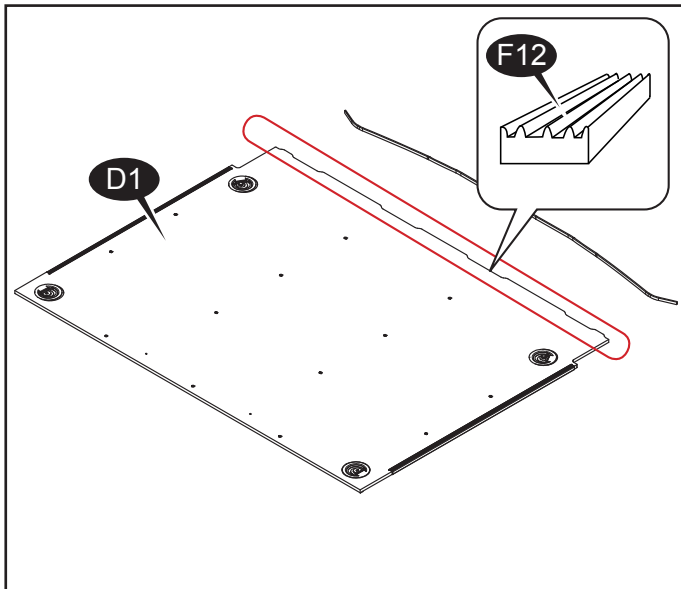


24.B

A2

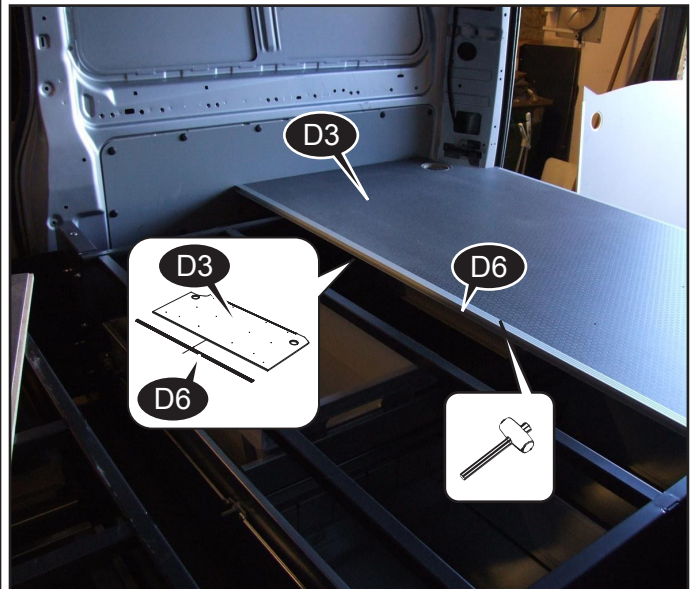


24.C

A2

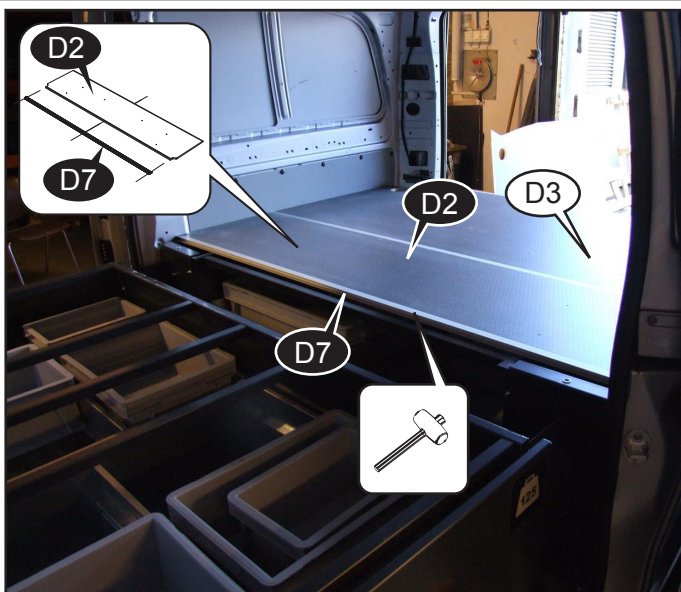


24.D

A2

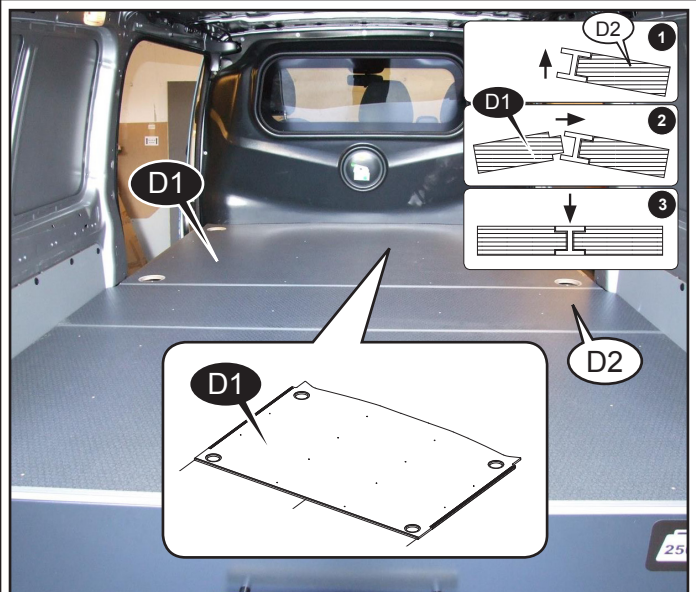


25.

A3

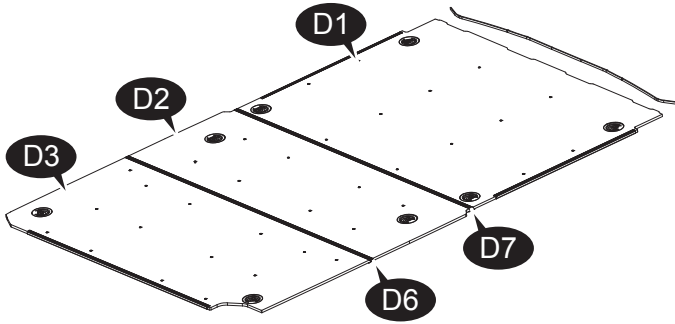


25.A

A3

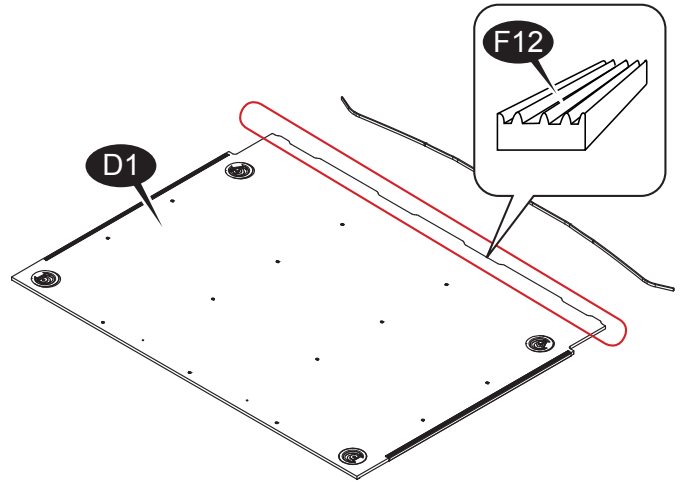


25.B

A3

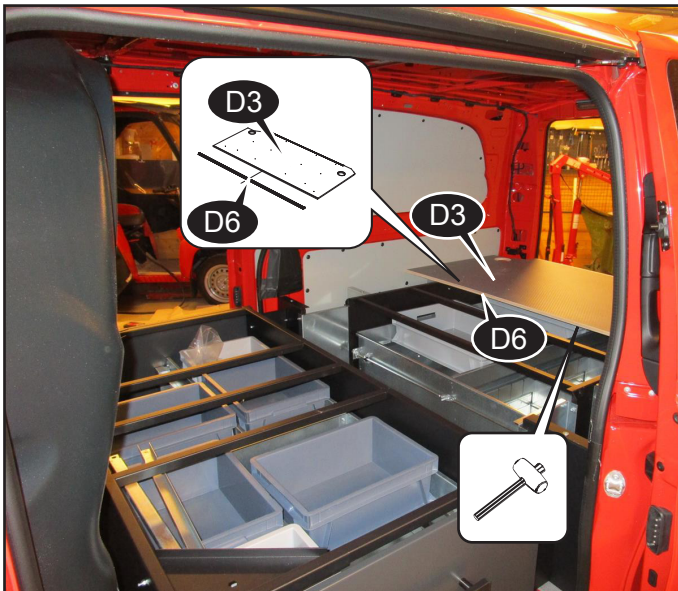


25.C

A3

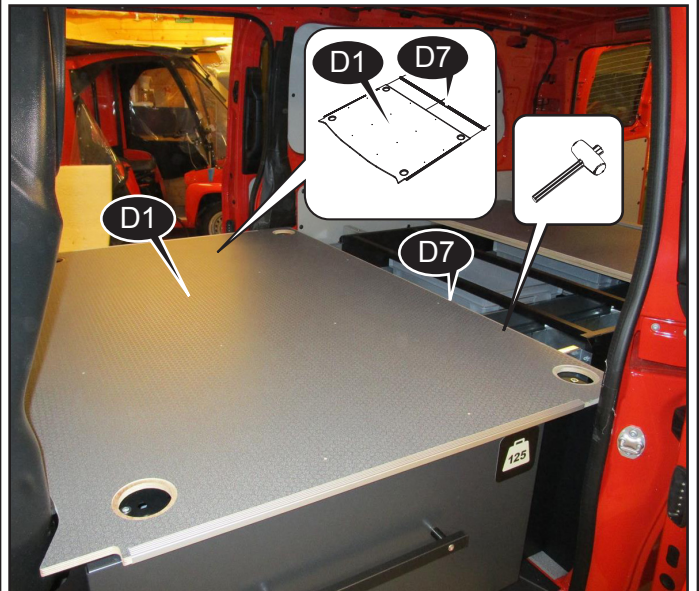


25.D

A3

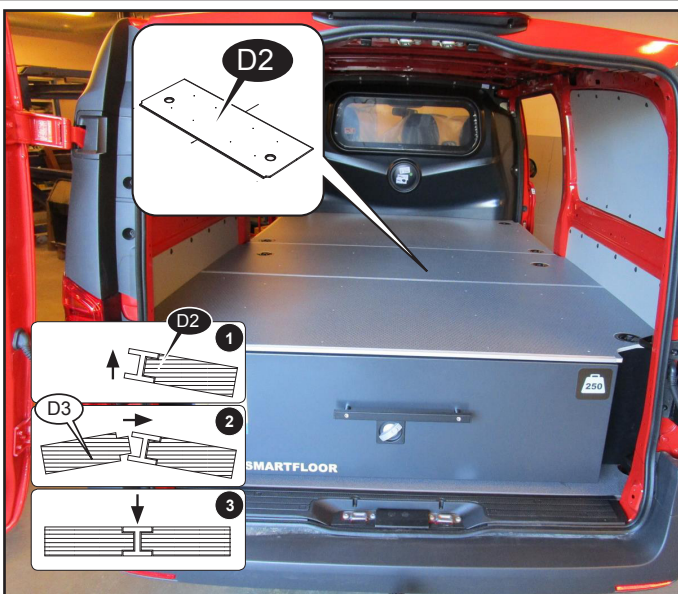


26.

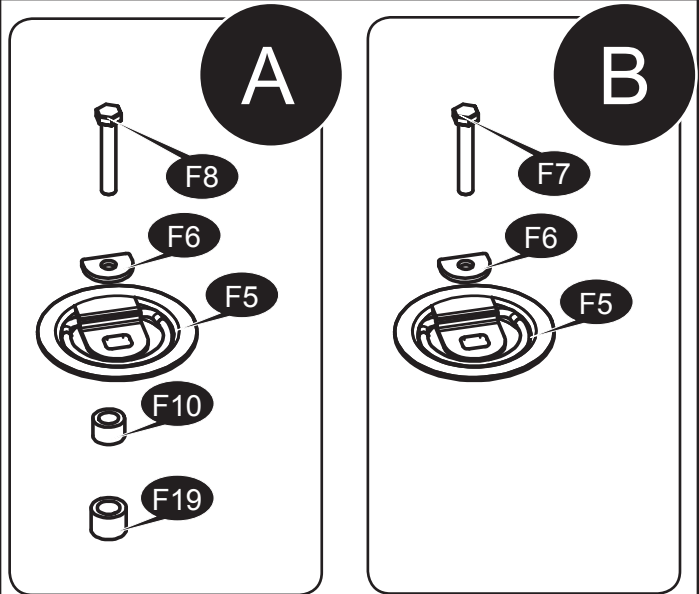


27.

A2

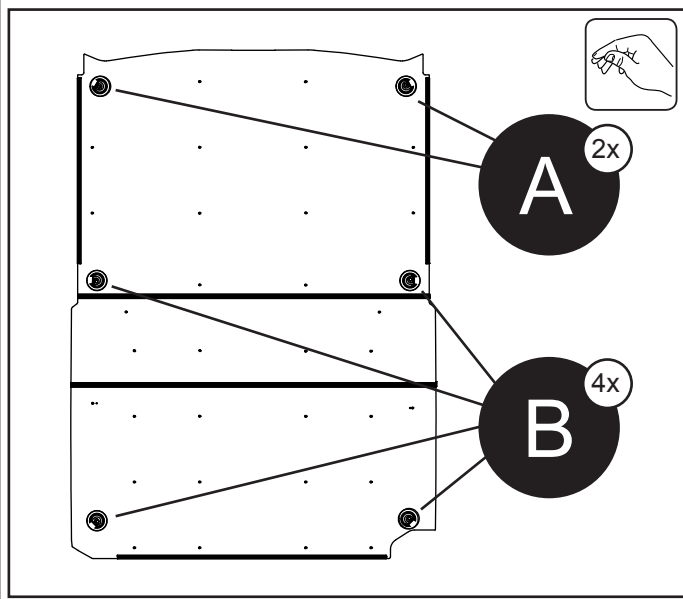


28.

A3

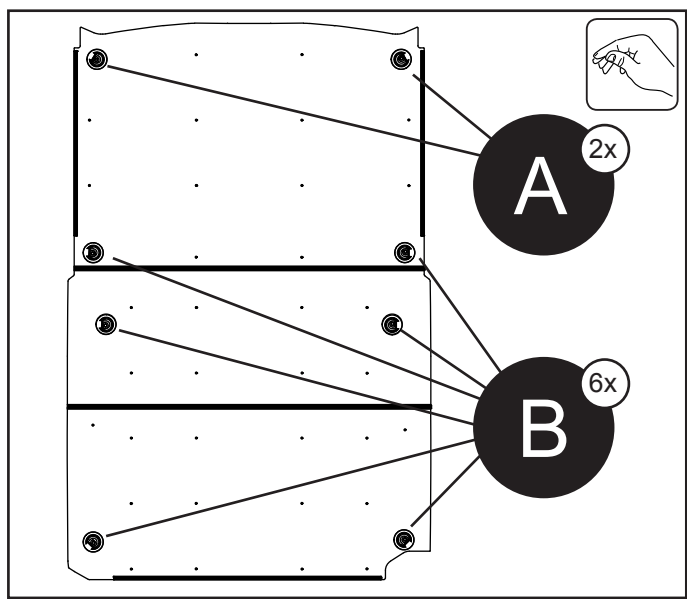


29.

A2

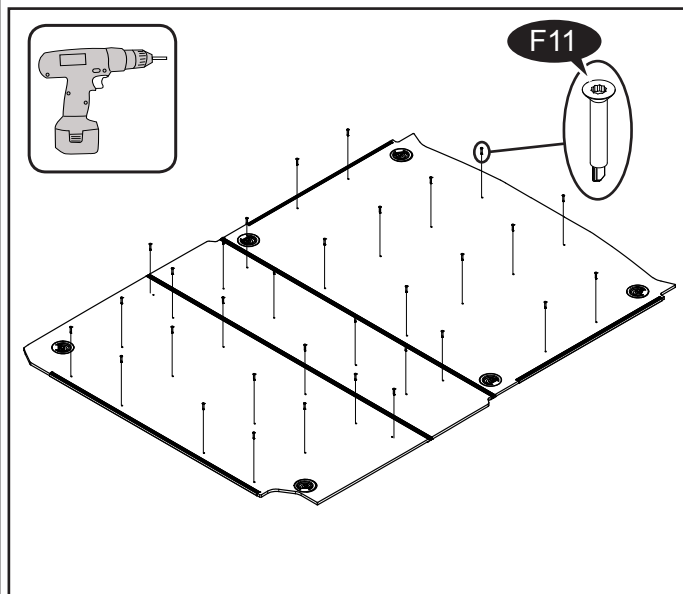


30.

A3

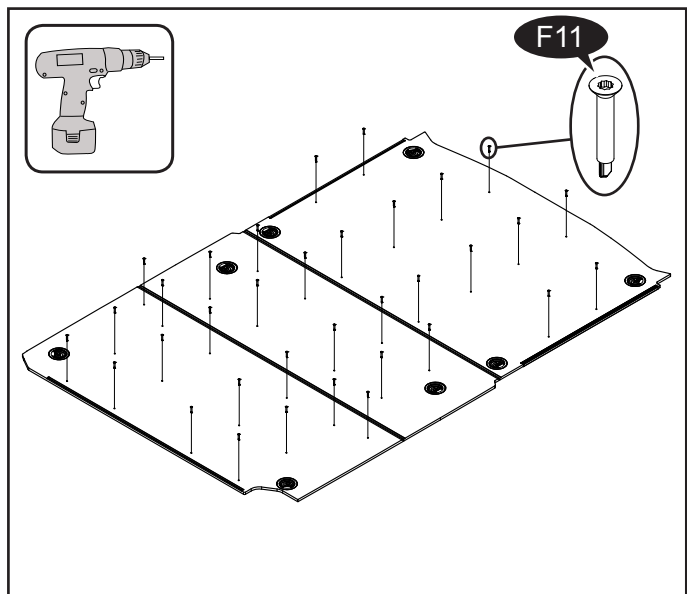

31.

L&R

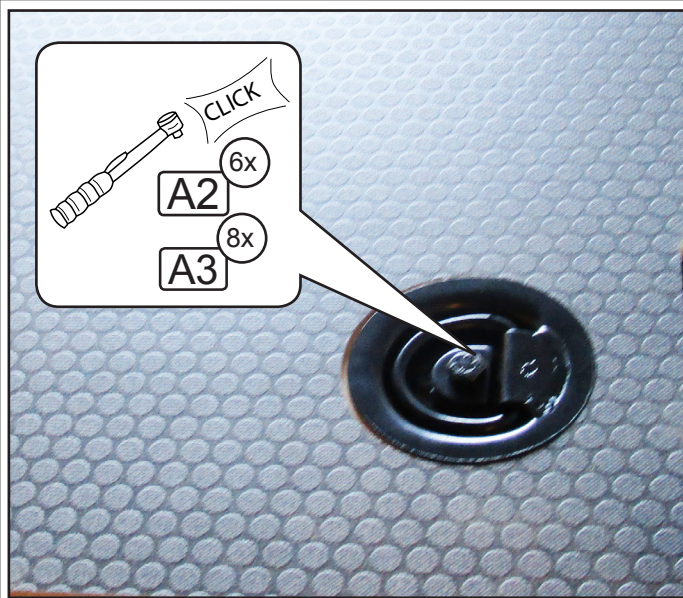

32.

