


PA-TW-7-M

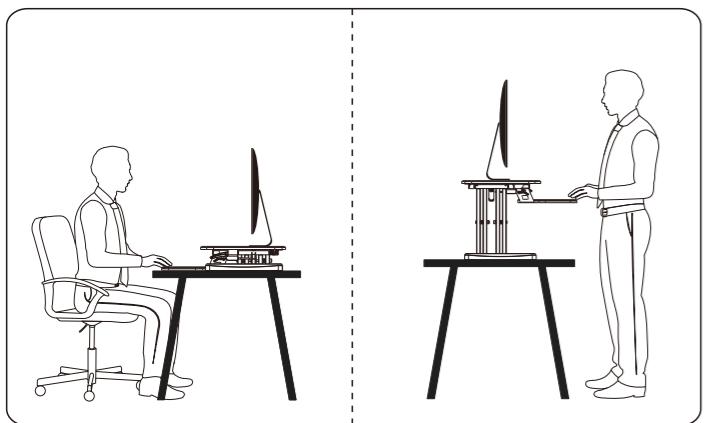


Have any queries?
Our expert engineers are here to help!

Progressivedesk.com




1-800-828-9414

sales@progressivedesk.com

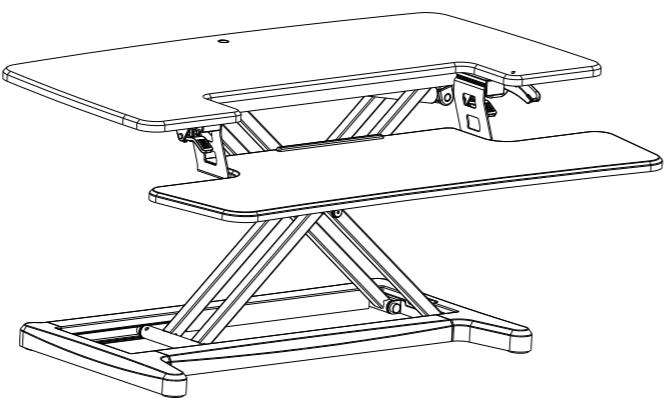


STEP 1

Only use the sit stand desk on top of flat and stable surface, strong enough to support the product and any equipment placed on top of it.

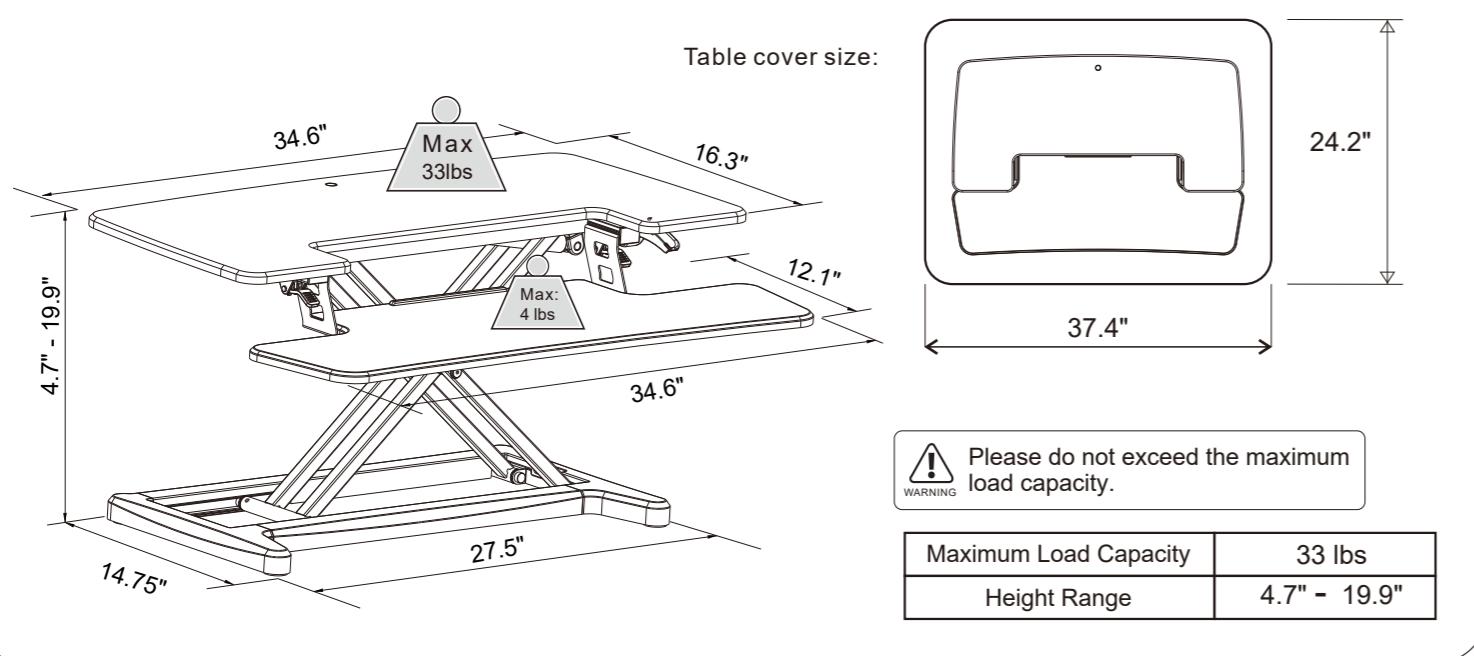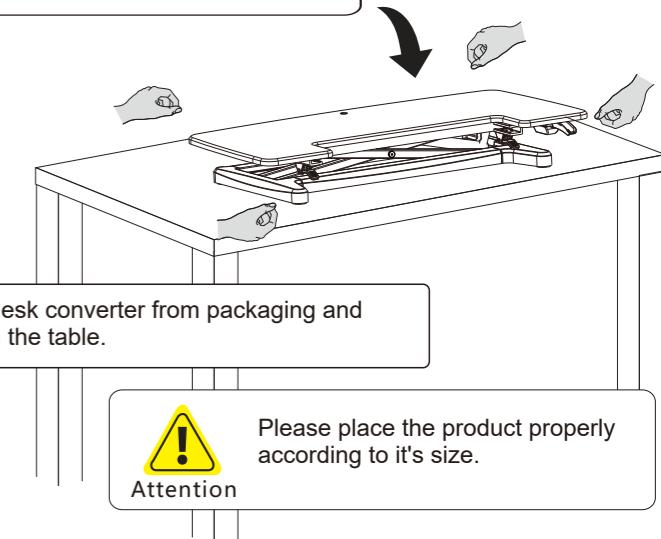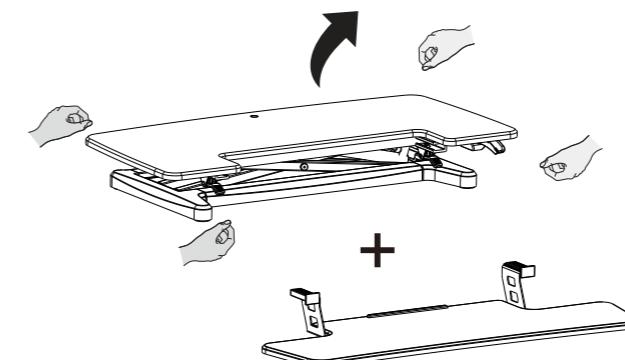

STEP 2

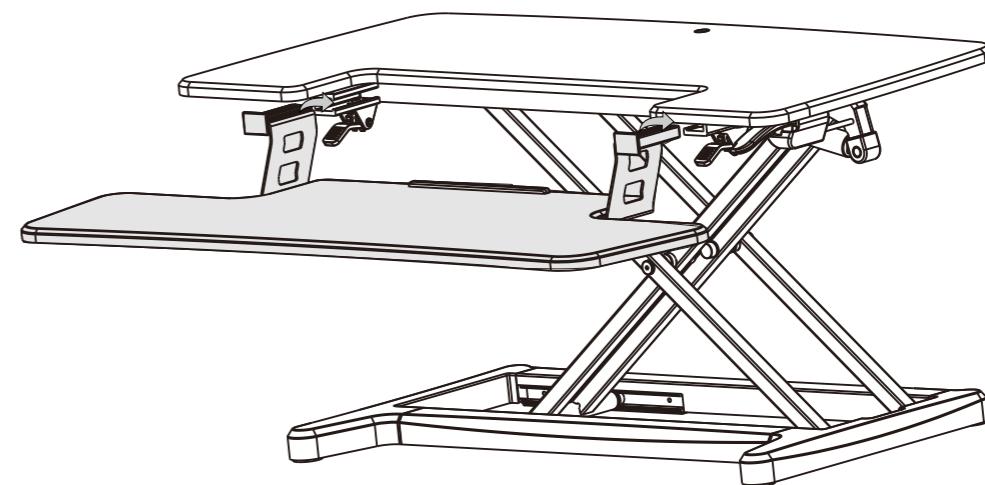


No.	Desk converter Frame	No.	Keyboard Tray
A		B	
	x1		x1
No.	Cable Management	No.	Adhesive Buckle
D		C	
	x1		x4


TOOLS




Hang the keyboard tray (a) on the desk converter mounts (b) indicated below and then tighten both levers (c).

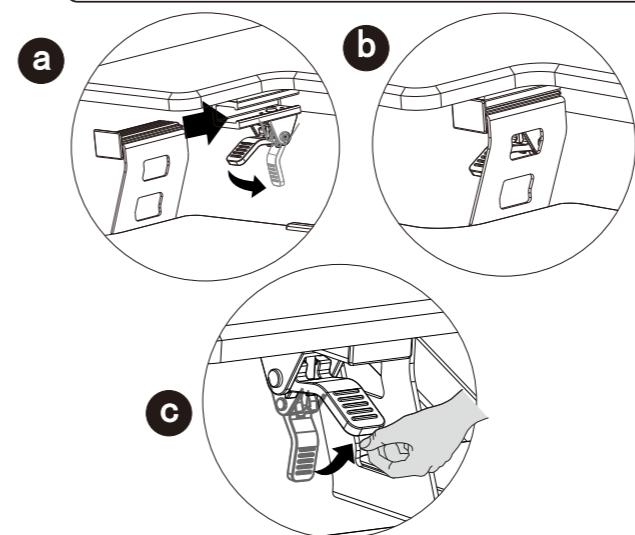

When removing the keyboard tray, release the levers completely before removing the keyboard tray.

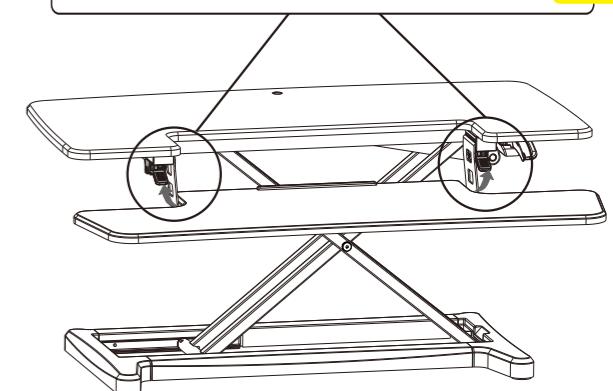

STEP 3

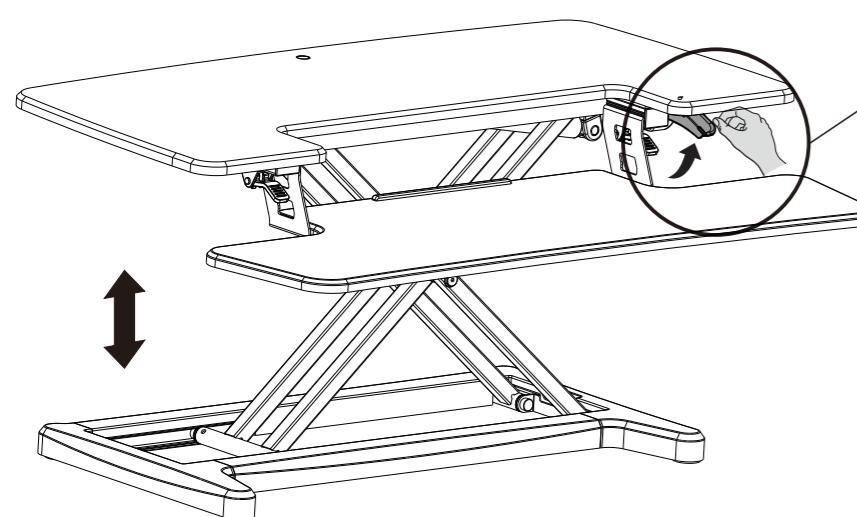


To set your preferred height, press the lever on the right side, and adjust the desk converter to the proper height.

CAUTION

DO NOT place hands on or near support bars. Pinch points are created during lifting and lowering the desk converter. Failure to follow these instructions may result in serious injury or damage.

STEP 4

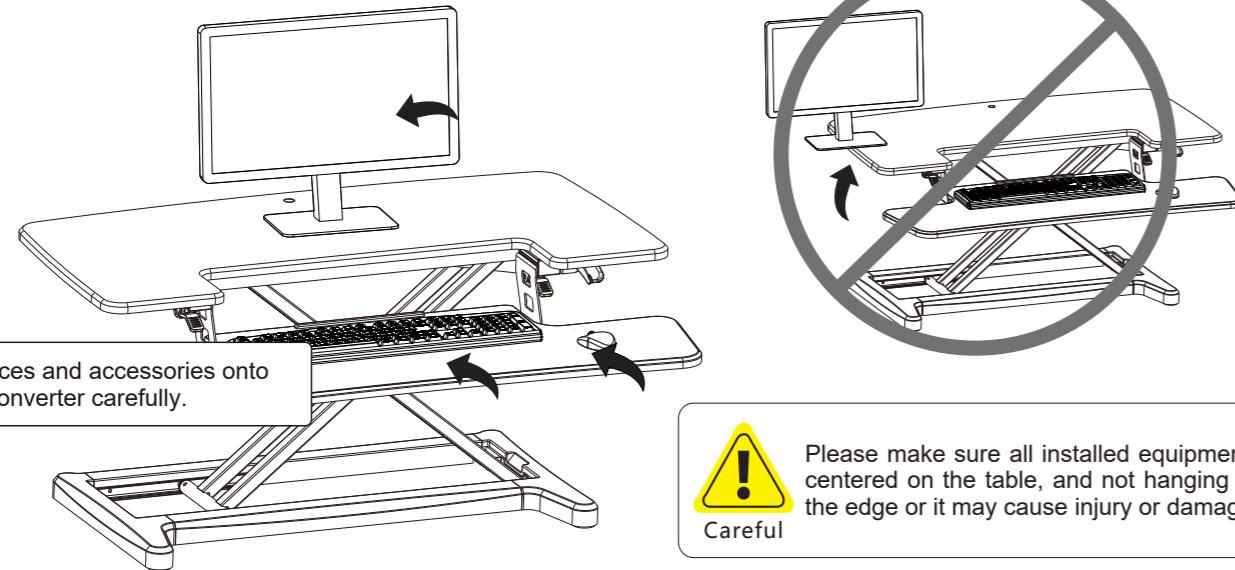

Place devices and accessories onto the desk converter carefully.



Please make sure all installed equipment are centered on the table, and not hanging off of the edge or it may cause injury or damage.

Careful

⚠️ WARNING



Please do not put hands near the supporting bars, as they change during adjustments and may cause injury.




Warning





Please leave enough length of cable for height adjustment.

Attention

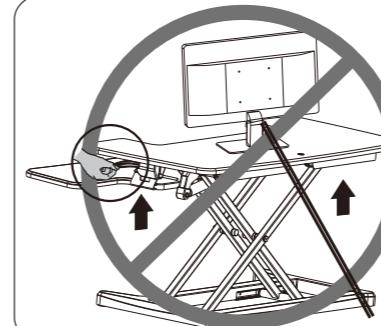


STEP 5

1 Use the cable management to guide and bundle the cables

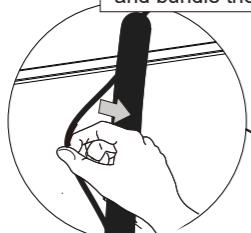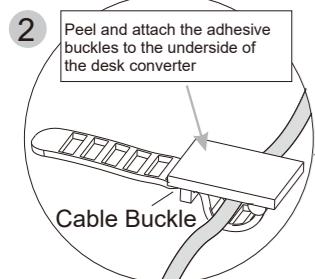

Cable

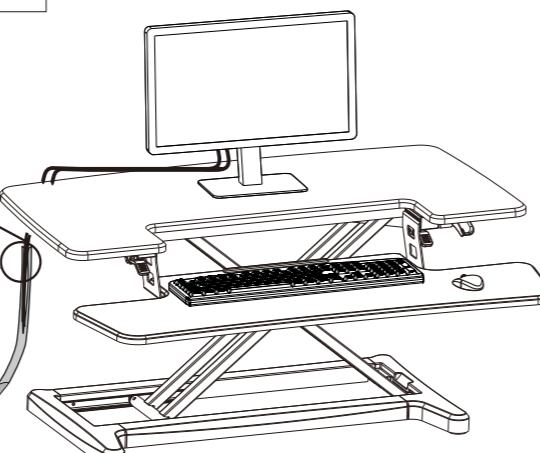

Adhesive buckle helps to make the cables clean and organized. Please leave enough length of all cables for height adjustments, otherwise it may cause unexpected damage or injury.

Careful