



ST 5079

SPRINT

APPLICATION INSTRUCTIONS

SIZE


approx. 3 feet 2 inches wide,
length varies

PAINTERS & TIME


1-2 painters for less than 1 hr



INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces)

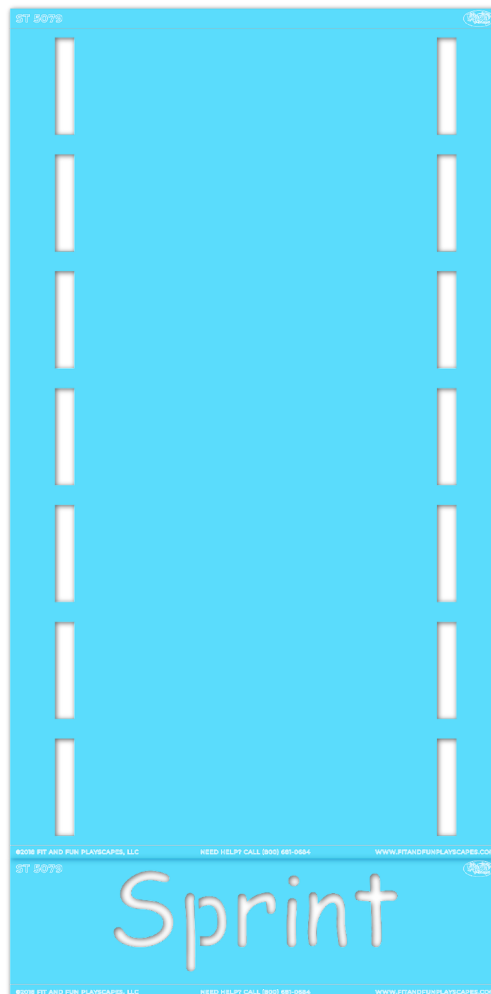


BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.

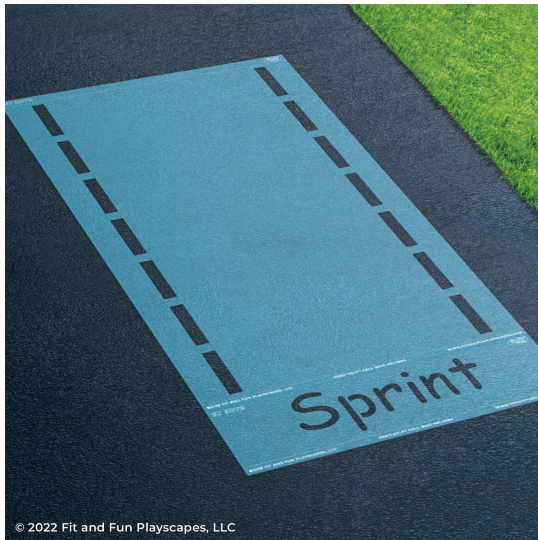

STEP 1:

Layout your **STENCIL** in your desired location.

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)

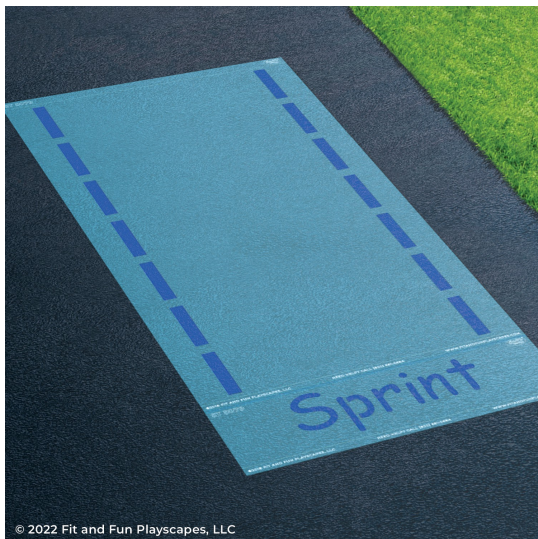

STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.



TO MAKE LONGER:

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like.

Allow the paint to dry for a minimum of 24 hours before use.

CONGRATULATIONS!!!

**YOU FINISHED PAINTING SPRINT
YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!**

Your finished Sprint should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684!

VISIT OUR WEBSITE AT **WWW.FITANDFUNPLAYSCAPES.COM**