



# ST 5086 AIRPLANE HOPSCOTCH

**APPLICATION INSTRUCTIONS** 


#### **SIZE**


approx. 8 feet wide x 9 feet 4 inches long


#### **PAINTERS & TIME**


1-2 painters for 2-3 hrs

#### **INCLUDED IN THE BOX: 4 Stencil Sheets (with pop out number inserts)**

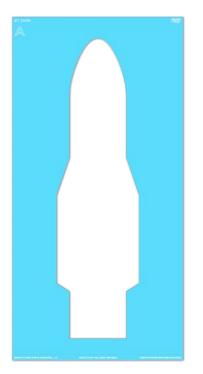

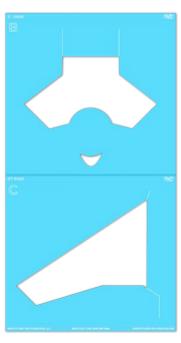

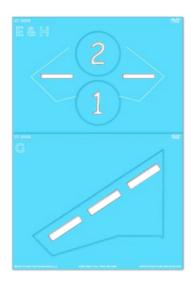

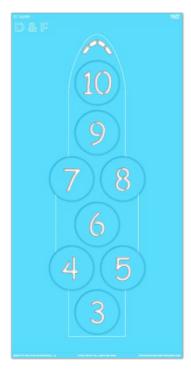

## BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



#### STEP 1:

Layout **STENCIL A** in your desired location.



#### STEP 2:

Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**.



#### **STEP 3:**

Align **STENCIL B** to the painted pavement using the etch marks.

Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**. Fill in the gaps so your **STENCIL** is complete.



#### STEP 4:

Align **STENCIL C** to the painted pavement using the etch marks.

Paint **STENCIL C**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL C**. Fill in the gaps so your **STENCIL** is complete.



#### **STEP 5:**

After the pavement and **STENCIL C** are fully dry, flip and align **STENCIL C** to the painted pavement using the etch marks.

Paint **STENCIL C**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL C**. Fill in the gaps so your **STENCIL** is complete.



#### STEP 6:

Pop out the number stencil inserts on **STENCIL D/F**.

Align **STENCIL D/F** over the painted pavement using the etch marks and paint the top detail and circles. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL D/F**.



#### **STEP 7:**

Pop out the number stencil inserts on **STENCIL E/H**.

Align **STENCIL E/H** over the painted pavement using the etch marks and paint the two line details and circles. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL E/H**.



#### **STEP 8:**

Pop out the wing stencil insert on **STENCIL G**.


Place **STENCIL G** over the painted pavement and paint the wing details. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL G**.



#### STEP 9:

After the pavement and **STENCIL G** are fully dry, flip and place **STENCIL G** over the painted pavement.

Paint **STENCIL G**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL G**.

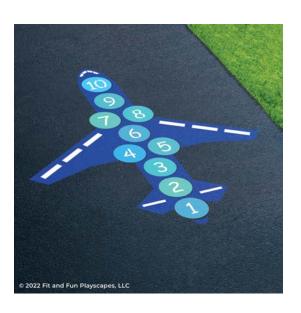

#### **STEP 10:**


Place your numbered stencil inserts over the painted pavement and paint the numbers. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your numbered stencil inserts. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

### **CONGRATULATIONS!!!**

## YOU FINISHED PAINTING AIRPLANE HOPSCOTCH YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Airplane Hopscotch should look like the image below.

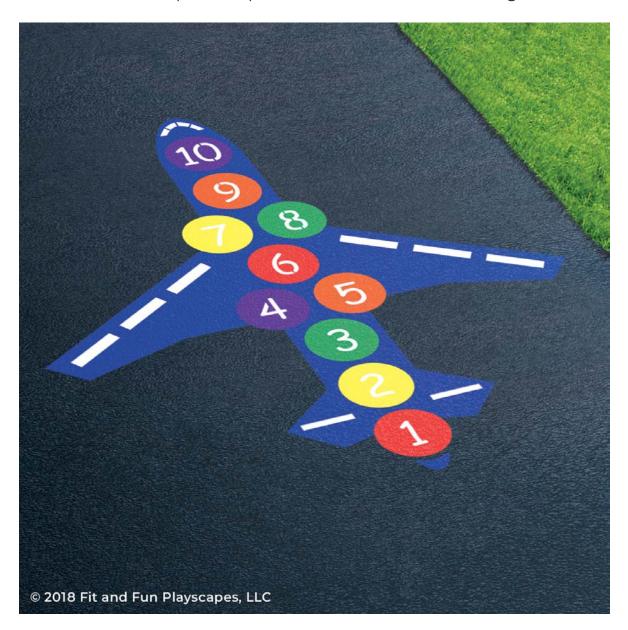

Have any questions? We're here to help – call us at (800) 681-0684!

VISIT OUR WEBSITE AT WWW.FITANDFUNPLAYSCAPES.COM

THIS INFORMATION IS COPYRIGHT MATERIAL. ALL RIGHTS ARE RESERVED. © 2022 FIT AND FUN PLAYSCAPES, LLC.