



ST 5102

TIPTOE SNAKE

APPLICATION INSTRUCTIONS

SIZE


approx. 5 feet wide x 10 feet long

PAINTERS & TIME

2 painters for 1-2 hrs



INCLUDED IN THE BOX: 1 Stencil Sheet (4 pieces & multiple inserts)

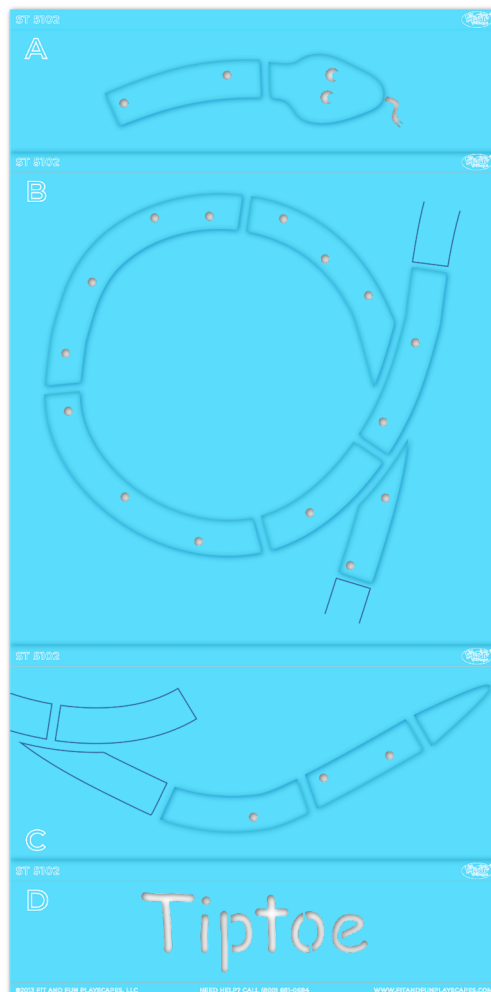

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Separate **STENCILS A-D** along the perforation.

Remove the head and body inserts from **STENCIL A**, body inserts from **STENCIL B** and tail inserts from **STENCIL C**. Then put stencil pieces and inserts aside.




STEP 2:

Place **STENCIL A** in your desired location. Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**. Fill in the gaps so your **STENCIL** is complete.



STEP 3:

Align **STENCIL B** to the painted pavement, using the etch mark. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**. Fill in the gaps so your **STENCIL** is complete.

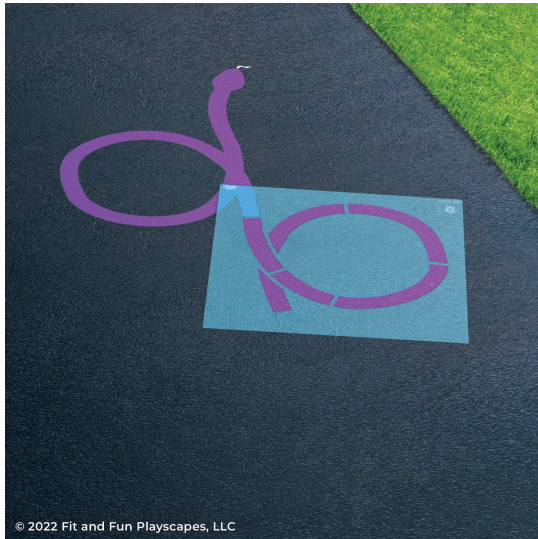

STEP 4:

After the pavement and **STENCIL B** are fully dry, flip **STENCIL B** and align using the etch mark. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**. Fill in the gaps so your **STENCIL** is complete.



STEP 5:

Align **STENCIL C** to the painted pavement, using the etch marks. Paint **STENCIL C**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL C**. Fill in the gaps so your **STENCIL** is complete.




YOU SUCCEEDED!

You finished painting the first layer of Tiptoe Snake. Your painted Tiptoe Snake should look like the image to the left.



TO PAINT THE SECOND LAYER:

Place the eyes and dot pieces over the painted areas. Paint each piece. Repeat 1-2 more times to achieve desired vividness, drying after each application. Remove all stencil inserts.

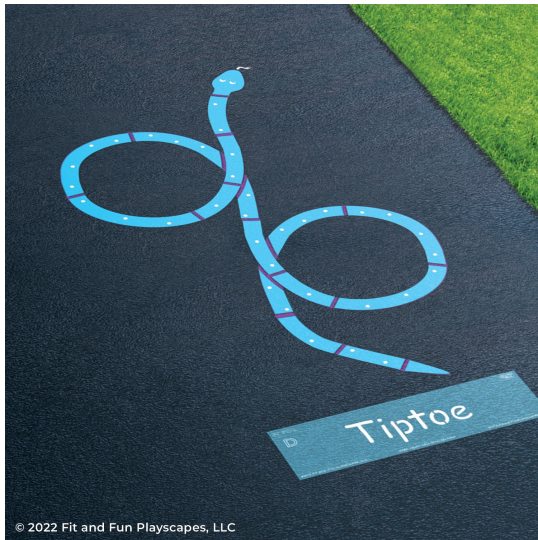

PAINT TIPTOE:

Lastly, paint the word "Tiptoe" anywhere you would like. (For example, you can put the word above, or to the left/right of the illustration.) Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

CONGRATULATIONS!!!

YOU FINISHED PAINTING TIPTOE SNAKE

YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Tiptoe Snake should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684!

VISIT OUR WEBSITE AT WWW.FITANDFUNPLAYSCAPES.COM