



ST 5103 JUMP LOGS

APPLICATION INSTRUCTIONS


SIZE

approx. 2 feet 6 inches wide, length varies

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces & 2 inserts)

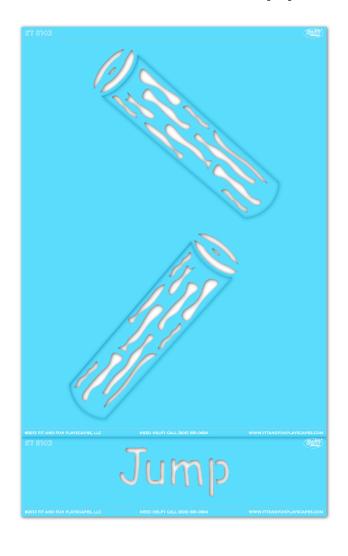

BEFORE YOU START PAINTING: Please completely read the General Instructions & prepare your surfaces as recommended.



STEP 1:

Remove the log detail inserts from **STENCIL A** then put aside

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)



STEP 2:

Place STENCIL~A in your desired location.



STEP 3:

Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**.



STEP 4:

Place the log detail inserts on top of the painted logs.



STEP 5:

Paint the log details. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove the log detail inserts. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.



TO MAKE LONGER:

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24 hours before use.**

CONGRATULATIONS!!!

YOU FINISHED PAINTING JUMP LOGS YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Jump Logs should look like the image below.



Have any questions? We're here to help – call us at (800) 681-0684!