



ST 5500 NATURE MOTOR SENSORY PATHWAY STARTER PACKAGE APPLICATION INSTRUCTIONS

STENCILS INCLUDED IN YOUR PACKAGE: 10 Stencils

ST 5096 Bear Crawl | ST 5097 Elephant Walk

ST 5098 Leap Frog | ST 5099 Arrow, Shoe & Hand Prints

ST 5100 March Ants | ST 5101 Crab Crawl

ST 5102 Tiptoe Snake | ST 5103 Jump Logs®

ST 5104 Step Stones | ST 5105 Balance Tightrope





ST 5096 BEAR CRAWL

APPLICATION INSTRUCTIONS

SIZE

approx. 2 feet 7 inches wide, length varies

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (4 pieces)





STEP 1:

Separate the word and single paw print pieces along the perforations. (For example, you can put the word above, or to the left/right of the illustration and the single paw prints wherever you would like.)

Layout your **STENCIL** in your desired location.



STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.



TO MAKE LONGER:

hours before use.

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24**

YOU FINISHED PAINTING BEAR CRAWL YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Bear Crawl should look similar to the image below.







ST 5097 ELEPHANT WALK

APPLICATION INSTRUCTIONS

SIZE

approx. 3 feet 4 inches wide, length varies

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (4 pieces)





STEP 1:

Separate the word and single footprint pieces along the perforations. (For example, you can put the word above, or to the left/right of the illustration and the single footprints wherever you would like.)

Layout your **STENCIL** in your desired location.



STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.



TO MAKE LONGER:

hours before use.

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24**

YOU FINISHED PAINTING ELEPHANT WALK YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Elephant Walk should look similar to the image below.







ST 5098 LEAP FROG

APPLICATION INSTRUCTIONS

SIZE

approx. 2 feet 2 inches wide, length varies

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (4 pieces)





STEP 1:

Separate the word and single footprint pieces along the perforations. (For example, you can put the word above, or to the left/right of the illustration and the single footprints wherever you would like.)


Layout your **STENCIL** in your desired location.



STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

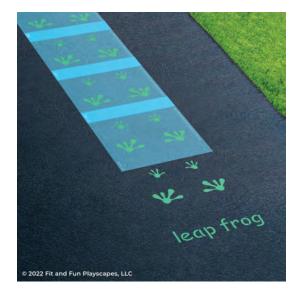

TO MAKE LONGER:


hours before use.

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24**

YOU FINISHED PAINTING LEAP FROG YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Leap Frog should look similar to the image below.



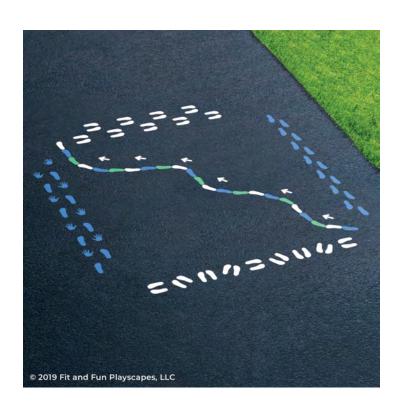



ST 5099 ARROW, SHOE & HAND PRINTS

APPLICATION INSTRUCTIONS


SIZE

Width varies from 1-3 inches

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (6 pieces)

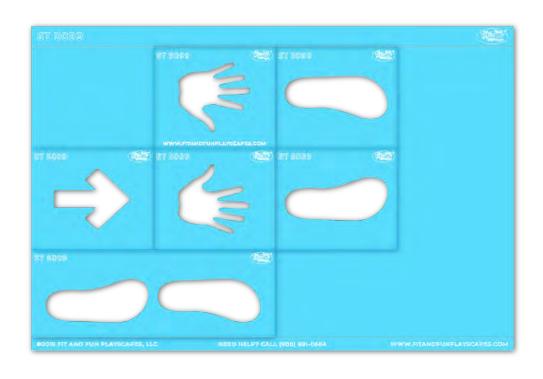

STEP 1:


Separate the pieces along the perforations, if desired. For example, you can keep the handprints or footprints next to each other if you'd like.

STEP 2:

Paint each **STENCIL** how you would like. You can repeat stencils to make your own pattern. Repeat 1-2 more times to achieve desired vividness, drying after each application.

Then remove your **STENCILS**.

Allow the paint to dry for a minimum of 24 hours before use.

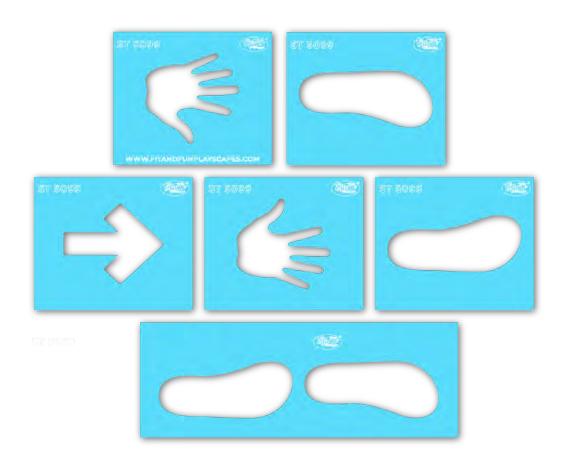

YOU FINISHED PAINTING ARROW, SHOE & HAND PRINTS YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Arrow, Shoe & Hand Prints should look similar to the image below.



Have any questions? We're here to help – call us at (800) 681-0684!

VISIT OUR WEBSITE AT WWW.FITANDFUNPLAYSCAPES.COM

THIS INFORMATION IS COPYRIGHT MATERIAL. ALL RIGHTS ARE RESERVED. © 2022 FIT AND FUN PLAYSCAPES, LLC.





ST 5100 MARCH ANTS

APPLICATION INSTRUCTIONS


SIZE

approx. 2 feet 5 inches wide, length varies

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces)

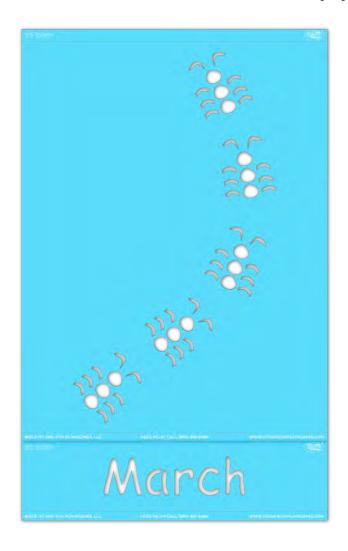



STEP 1:

Layout your STENCIL in your desired location.

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)



STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.



TO MAKE LONGER:


hours before use.

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Flip and align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24**

YOU FINISHED PAINTING MARCH ANTS YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished March Ants should look like the image below.



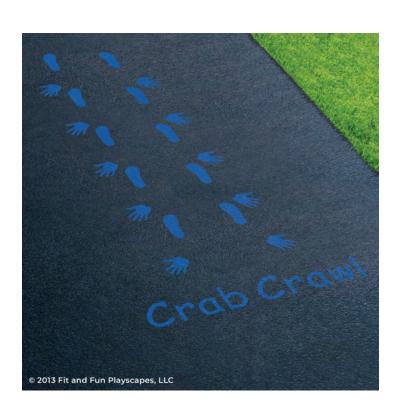



ST 5101 CRAB CRAWL

APPLICATION INSTRUCTIONS


SIZE

approx. 3 feet wide x 7 feet 3 inches long

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces)

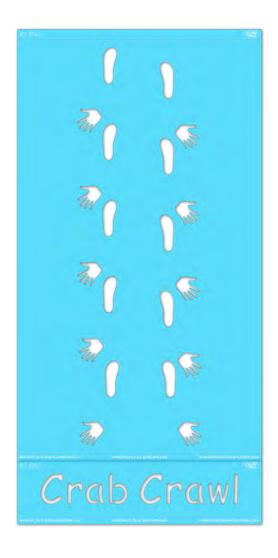



STEP 1:

Layout your STENCIL in your desired location.

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)



STEP 2:


Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

YOU FINISHED PAINTING CRAB CRAWL YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Crab Crawl should look like the image below.



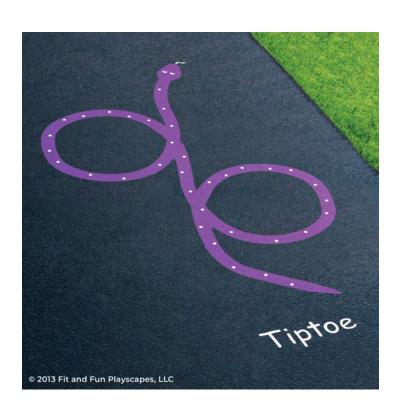



ST 5102 TIPTOE SNAKE

APPLICATION INSTRUCTIONS


SIZE

approx. 5 feet wide x 10 feet long

PAINTERS & TIME

2 painters for 1-2 hrs

INCLUDED IN THE BOX: 1 Stencil Sheet (4 pieces & multiple inserts)

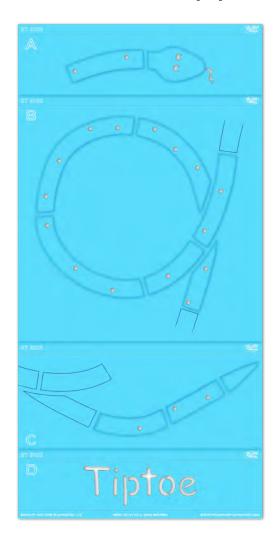



STEP 1:

Separate **STENCILS A-D** along the perforation.

Remove the head and body inserts from **STENCIL A**, body inserts from **STENCIL B** and tail inserts from **STENCIL C**. Then put stencil pieces and inserts aside.



STEP 2:

Place **STENCIL A** in your desired location. Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**. Fill in the gaps so your **STENCIL** is complete.



STEP 3:

Align **STENCIL B** to the painted pavement, using the etch mark. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**. Fill in the gaps so your **STENCIL** is complete.



STEP 4:

After the pavement and **STENCIL B** are fully dry, flip **STENCIL B** and align using the etch mark. Paint **STENCIL B**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL B**. Fill in the gaps so your **STENCIL** is complete.



STEP 5:

Align **STENCIL C** to the painted pavement, using the etch marks. Paint **STENCIL C**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL C**. Fill in the gaps so your **STENCIL** is complete.



YOU SUCCEEDED!

You finished painting the first layer of Tiptoe Snake. Your painted Tiptoe Snake should look like the image to the left.



TO PAINT THE SECOND LAYER:

Place the eyes and dot pieces over the painted areas. Paint each piece. Repeat 1-2 more times to achieve desired vividness, drying after each application. Remove all stencil inserts.



PAINT TIPTOE:

Lastly, paint the word "Tiptoe" anywhere you would like. (For example, you can put the word above, or to the left/right of the illustration.) Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

YOU FINISHED PAINTING TIPTOE SNAKE

YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Tiptoe Snake should look like the image below.







ST 5103 JUMP LOGS

APPLICATION INSTRUCTIONS


SIZE

approx. 2 feet 6 inches wide, length varies

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces & 2 inserts)

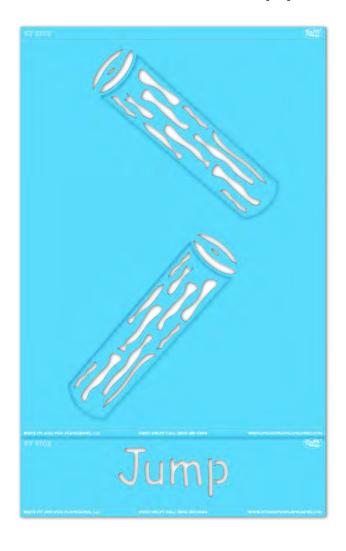



STEP 1:

Remove the log detail inserts from **STENCIL A** then put aside

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)



STEP 2:

Place **STENCIL A** in your desired location.



STEP 3:

Paint **STENCIL A**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove **STENCIL A**.



STEP 4:

Place the log detail inserts on top of the painted logs.



STEP 5:

Paint the log details. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove the log detail inserts. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.



TO MAKE LONGER:

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24 hours before use.**

YOU FINISHED PAINTING JUMP LOGS YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Jump Logs should look like the image below.







ST 5104 STEP STONES

APPLICATION INSTRUCTIONS


SIZE

approx. 3 feet wide, length varies

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces)

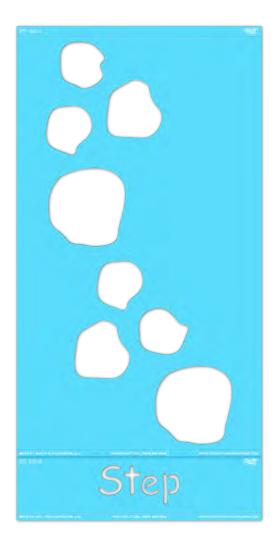



STEP 1:

Layout your **STENCIL** in your desired location.

Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)



STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.




TO MAKE LONGER:

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24 hours before use.**

YOU FINISHED PAINTING STEP STONES YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Step Stones should look like the image below.



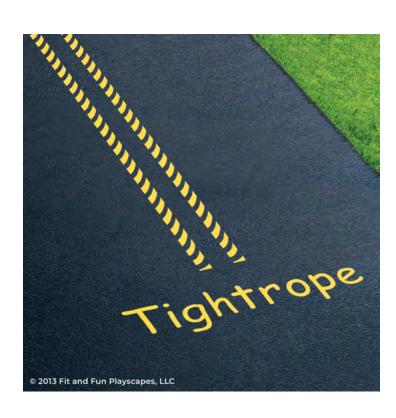



ST 5105 BALANCE TIGHTROPE

APPLICATION INSTRUCTIONS


SIZE


approx. 2 feet 8 inches wide, length varies

PAINTERS & TIME

1-2 painters for less than 1 hr

INCLUDED IN THE BOX: 1 Stencil Sheet (2 pieces)

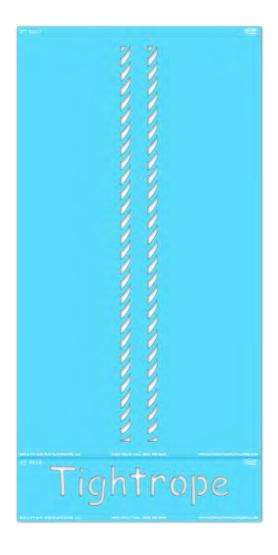


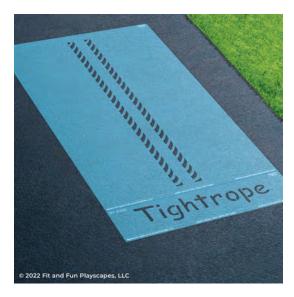

STEP 1:

Layout your **STENCIL** in your desired location.


Separate the word along the perforation if you'd like. (For example, you can put the word above, or to the left/right of the illustration.)

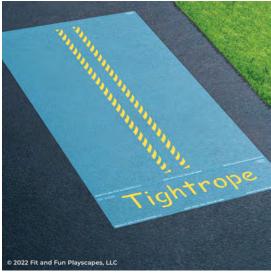

STEP 2:

Paint your **STENCIL**. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete.

Allow the paint to dry for a minimum of 24 hours before use.

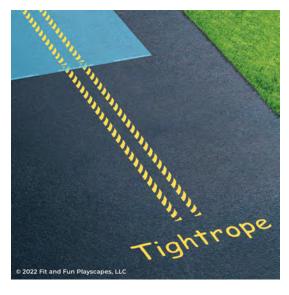

TO MAKE LONGER:

First, ensure that your **STENCIL** and pavement are completely dry. Separate the word along the perforation. Align your **STENCIL** with the painted pavement and paint. Repeat 1-2 more times to achieve desired vividness, drying after each application. Then remove your **STENCIL**. Fill in the gaps so your **STENCIL** is complete. Continue as long as you'd like. **Allow the paint to dry for a minimum of 24 hours before use.**


YOU FINISHED PAINTING BALANCE TIGHTROPE YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Balance Tightrope should look like the image below.



YOU FINISHED PAINTING THE NATURE MOTOR SENSORY STARTER PACKAGE YOU DID IT! GIVE YOURSELVES A PAT ON THE BACK!

Your finished Nature Motor Sensory Starter Package should look like the image below.

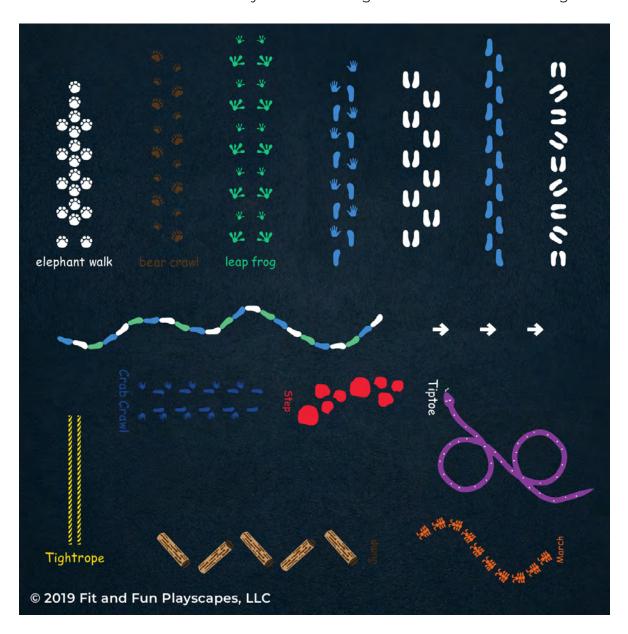

Have any questions? We're here to help - call us at (800) 681-0684!

VISIT OUR WEBSITE AT WWW.FITANDFUNPLAYSCAPES.COM