


WineRacks.com  
 Phone 888.687.2517  
 Fax 845.658.5309

8\_5-250-5025-3975

# 11 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS

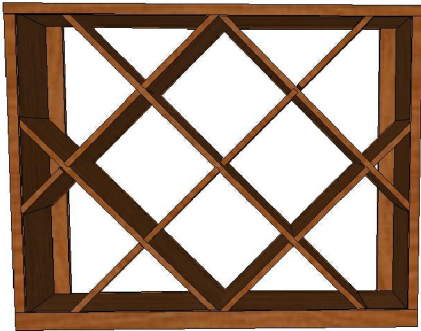


(1) 50¼" X 1¼" Face Trim

---


(2) 36¼" X 1¼" Face Trim

---


(1) 50¼" X 2¼" Face Trim




(2) 39¾" x  
11½" Sides




(1) Top &  
(1) Bottom  
49½" x 11  
½"



(1) Left Cleat  
& (1) Right  
Cleat




(4) 34½" x  
11⅛"  
Shelves




(2) 53⅞" x  
11⅛"  
Shelves

**PARTS LIST**


---

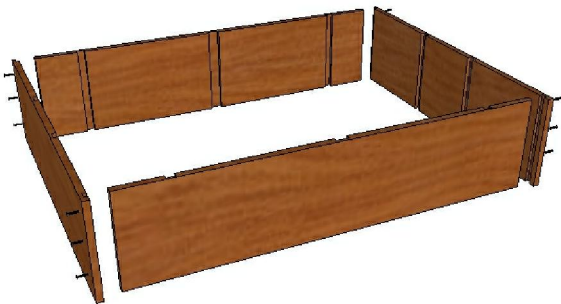

**STEP 1.**  
 ATTACH (2) SIDES TO THE TOP & BOTTOM  
 w/ SCREWS. ENSURE SLOTS ON SIDES  
 ALIGN.

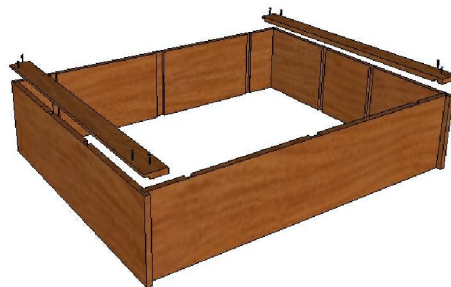

**STEP 2.**  
 ATTACH (1) LEFT & (1) RIGHT CLEAT w/  
 SCREWS

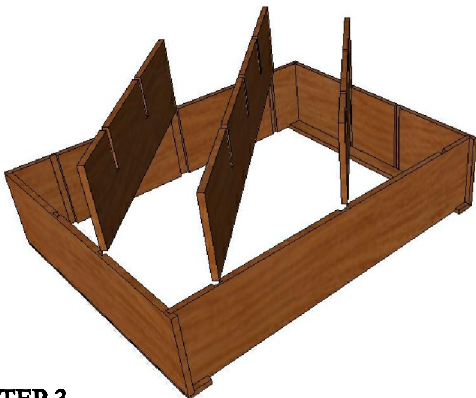

**STEP 3.**  
 FLIP BIN OVER. SLIDE (2) SHORT SHELVES,  
 SHORT SHELVES TO BE REVERSED FROM ONE  
 AN OTHER & (1) LONG SLELF INTO SLOTS AS  
 SHOWN. ENSURE SHELF NOTCHES FACE UP  
 AND ALIGN.



**STEP 4.**  
 SLIDE (2) SHORT SHELVES, SHORT SHELVES TO  
 BE REVERSED FROM EACH OTHER & (1) LONG  
 SLELF INTO SLOTS AS SHOWN. ENSURE SHELF  
 NOTCHES FACE DOWN.

WineRacks.com  
Phone 888.687.2517  
Fax 845.658.5309

8\_5-250-5025-3975

## 11 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS



### STEP 5.

ATTACH (1)  $2\frac{1}{4}$ " x  $50\frac{1}{2}$ " FACE TRIM TO  
BOTTOM OF BIN, (1)  $1\frac{1}{4}$ " X  $50\frac{1}{2}$ " FACE  
TRIM TO TOP OF BIN AND (2)  $1\frac{1}{4}$ " X  $36\frac{1}{4}$ "  
FACE TRIMS TO SIDES w/ FINISH NAILS.