


WineRacks.com
 Phone 888.687.2517
 Fax 845.658.5309

8_5-250-5475-3975

12 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS

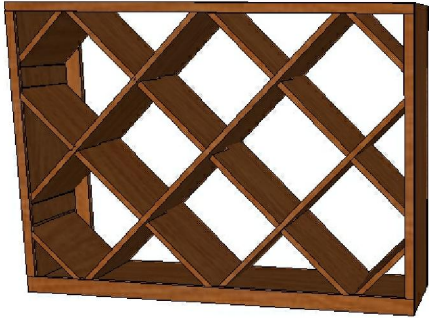

(1) 54³/₄" x 1¹/₄" Face Trim

(2) 36¹/₄" x 1¹/₄" Face Trim

(1) 54³/₄" x 2¹/₄" Face Trim

(4) 10³/₁₆" x 11¹/₈" Shelves

(2) 39³/₄" x 11¹/₂" Sides


(1) Top & (1) Bottom 54" x 11¹/₂"

(1) Left Cleat & (1) Right Cleat


(4) 37¹¹/₁₆" x 11¹/₈" Shelves

(2) 53¹/₈" x 11¹/₈" Shelves

PARTS LIST

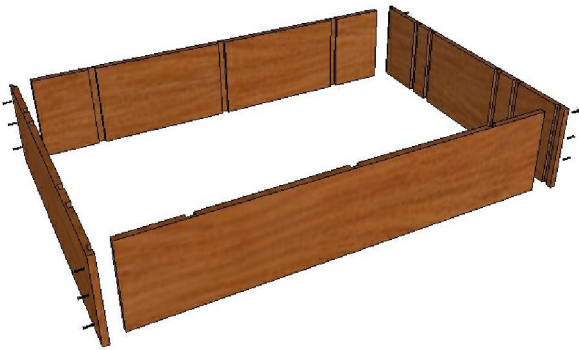

STEP 1.
 ATTACH (2) SIDES TO THE TOP & BOTTOM w/ SCREWS. ENSURE SLOTS ON SIDES ALIGN.

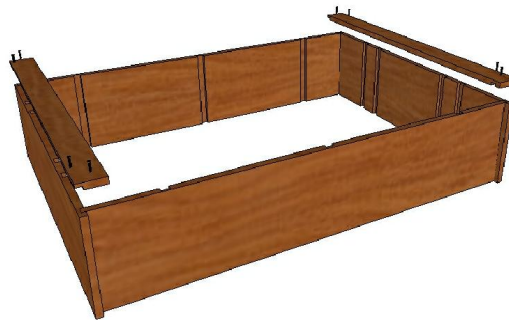

STEP 2.
 ATTACH (1) LEFT & (1) RIGHT CLEAT w/ SCREWS


WineRacks.com
Phone 888.687.2517
Fax 845.658.5309

8_5-250-5475-3975

12 COLUMN COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS



STEP 3.
FLIP BIN OVER. SLIDE (2) SHORT
SHELVES, (2) MEDIUM LENGTH SHELVES
& (1) LONG SLELF INTO SLOTS AS SHOWN.
ENSURE SHELF NOTCHES FACE UP AND
ALIGN.

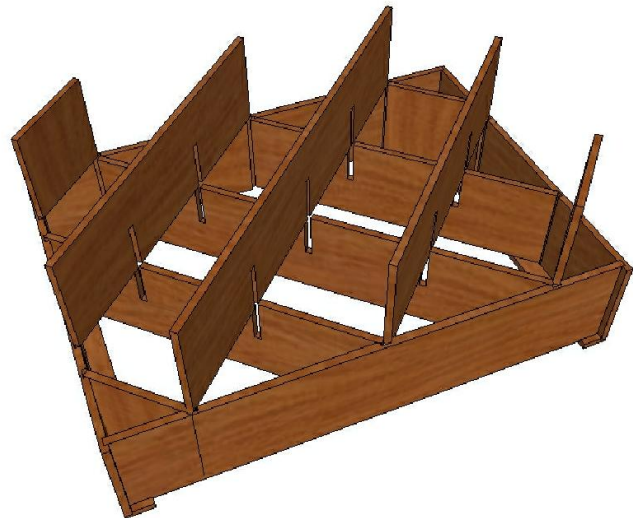

STEP 4.
SLIDE (2) SHORT SHELVES, (2) MEDIUM
LENGHT SHELVES & (1) LONG SLELF INTO
SLOTS AS SHOWN. ENSURE SHELF
NOTCHES FACE DOWN.



STEP 5.
ATTACH (1) 2¼" x 54¾" FACE TRIM TO
BOTTOM OF BIN, (1) 1¼" X 54¾" FACE
TRIM TO TOP OF BIN AND (2) 1¼" X 36¼"
TO SIDES w/ FINISH NAILS.