












WineRacks.com
 Phone 888.687.2517
 Fax 845.658.5309

13 COLOUMN BASE COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS




PARTS LIST

 14" LONG SHELF QTY: 4	 58½" LONG SHELF QTY: 2	 TOP / BOTTOM SHELF QTY: 1 ea.	 SIDE SHELF QTY: 2	 REAR CLEATS QTY: 1	 1¼" x 59¼" TOP TRIM QTY: 1	 1¼" x 36¼" SIDE TRIM QTY: 2	 2½" x 59¼" BOTTOM TRIM QTY: 1
			 40⅞" LONG SHELF QTY: 4				
		 SIDE SHELF QTY: 2	 REAR CLEATS QTY: 1				1 LEFT, 1 RIGHT


WineRacks.com
Phone 888.687.2517
Fax 845.658.5309

13 COLOUMN BASE COMPOUND DIAMOND BIN ASSEMBLY INSTRUCTIONS (cont.)

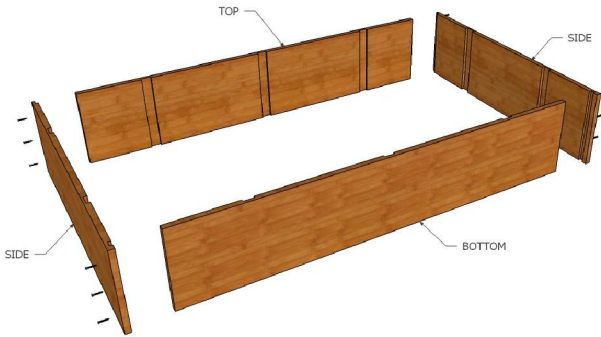


STEP 1.
ATTACH TOP AND BOTTOM TO BOTH SIDES
WITH (6) SCREWS AS SHOWN

STEP 2.
ATTACH LEFT AND RIGHT CLEATS TO BACK
OF BIN WITH GLUE AND SCREWS AS SHOWN

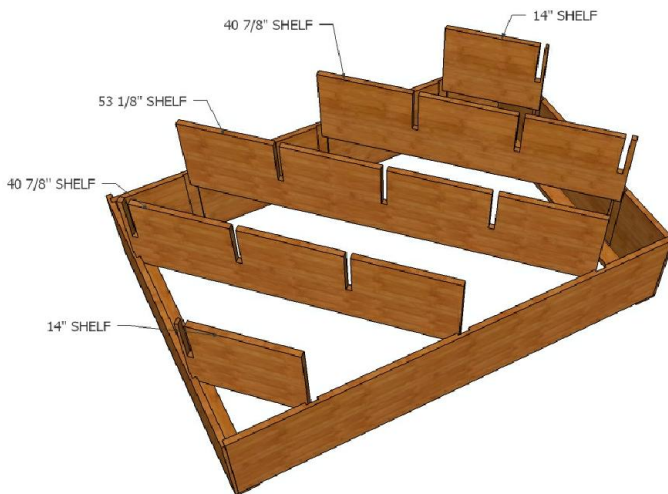

STEP 3.
FLIP BIN OVER. LOCATE (1) 58½" LONG SHELF, (2)
40 7/8" LONG SHELVES AND (2) 14" LONG SHELVES.
SLIDE SHELVES INTO SLOTS AS SHOWN WITH
SHELF NOTCHES FACING UPWARD.

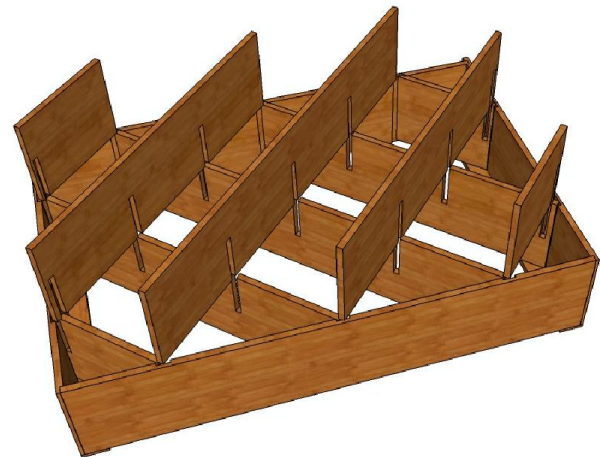

STEP 4.
LOCATE REMAINING (1) 58½" LONG SHELF (2) 40 7/8"
LONG SHELVES AND (2) 14" LONG SHELVES. SLIDE
SHELVES INTO SLOTS AS SHOWN WITH SHELF
NOTCHES FACING DOWNWARD.

STEP 5.
ATTACH FACE TRIM TO FRONT OF
BIN W/ NAILS. SET BIN UPRIGHT.

