Red Yellow BLK


TIE-FAST KNOT TYER SOLVES FLY FISHERMAN'S NAIL KNOT PROBLEMS

NAIL KNOT & NEEDLE NAIL KNOT: The NAIL KNOT is the most effective way to tie any size monofilament to your fly line. It is a smooth and secure knot that easily passes in and out of the rod guides. With this knot, the harder you pull the better it "GRYPS" and holds.


1 Place tool in palm of either hand and grasp tightly with fingers. Place thumb on THUMB PAD. The TIP should be in perfect focus.
2 Place leader between GUIDE thumb pad through CHANNEL and TIPS/SLOT so that line extends approximately 6 inches beyond TIPS. Use thumb to secure line over PAD.
3 Pull short line downward into SLOT and wrap a tight coil of 4-5 turns. Wrap back around Tyer TIPS towards thumb using forefinger to hold turns in place.
4 From the thumb side, thread short line back into CHANNEL under all turns and out through slotted TIPS.
5 Insert fly line under wraps and give "tag end" a light jerk. This causes knot to slide off Tyer onto fly line. Inspect and adjust wrap before securing knot completely. Trim off excess.

NAIL KNOT SPLICE & TAPERED LEADERS: The "nail knot splice" is the perfect knot to join leaders. With this knot the tag end is held by 3 full wraps allowing you to drop to 6/1000 in transition without knot failure. Fewer transitions mean better casting and stronger leaders with less knot failure. The nail knot splice is easier to tie, is more streamline, and is stronger than any other splice.

1 Same as #1 of above.
2 Overlap leaders 6-8 inches. Place line between GUIDE pad through CHANNEL and TIPS/SLOT so that tag end extends approximately 4 inches beyond TIPS. Use thumb to secure lines over PAD.
3 Pull short line downward into SLOT and wrap a tight coil of 3 turns. Wrap back around Tyer TIPS towards thumb using forefinger to hold turns in place.
4 From thumb side, thread short line back into CHANNEL under all turns and out through slotted TIPS and give a light jerk. This causes knot to slide off Tyer onto line. Pull "tag end" until knot is snug (not tight) on line.
5 Remove leaders from the tool and place them back in the tool in the exact opposite configuration. Repeat steps 3 & 4.
6 Slide the two knots together by slowly pulling on both leaders in opposite directions. Inspect and adjust wraps before securing knot completely. Trim off excess.

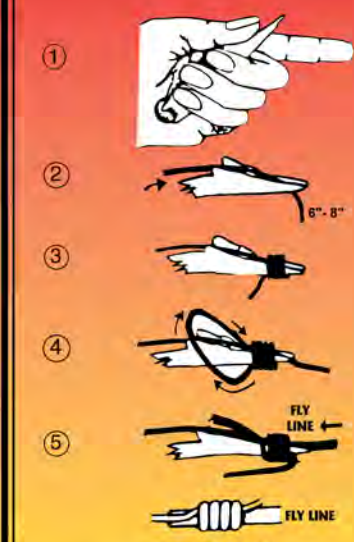

NAIL KNOTS

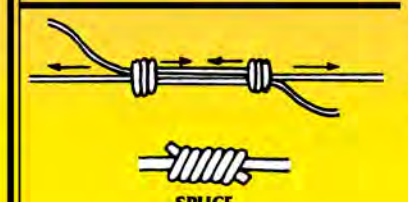

SPLICE

TIE-FAST
Knot Tyer











MANUFACTURED BY:
SIERRA STREAM & MOUNTAIN
P.O. BOX 7693
CHICO, CA 95927
www. TIE-FAST.com

TIE-FAST
Knot Tyer

Easy • Fast • Safe • Sure
FULL INSTRUCTIONS ENCLOSED
FOR FULL VIDEO INSTRUCTIONS
VISIT: WWW.TIE-FAST.COM

Proclamied by experts ...
"The tool works ... "Fast, clean, solid, in seconds!" ... "A necessity when out in the middle of a stream."


⚠ ***WARNING:*** Cancer
www.P65Warnings.ca.gov

MADE IN USA WITH GLOBALLY SOURCED MATERIALS


0 99123 08901 6

FR901
ITEM# F101

TIE-FAST KNOT TYER
HOLDING POSITION AND NOMENCLATURE

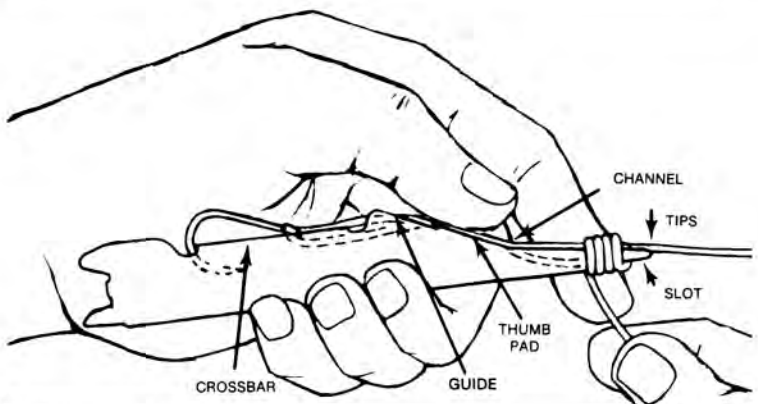

END TIE: USING BASIC GRYP-KNOT

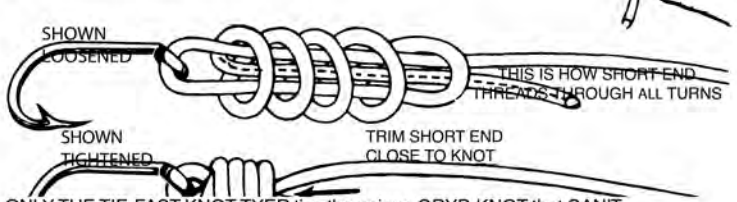

ONLY THE TIE-FAST KNOT TYER ties the unique GRYP-KNOT that CAN'T come untied because the end is gripped by ALL turns of the knot. This means that the greater the tension applied, the tighter the grip. GRYP-KNOTS are far superior to clinch, blood and other commonly used knots which actually have only one turn holding their ends.

KNOT TYING INSTRUCTIONS

END TIE: USING BASIC GRYP-KNOT


1 Thread line through eye of hook and double back on itself about 8 inches.
2 Place tool in palm of either hand and grasp tightly with fingers. Place thumb on THUMB PAD. The TIP should be in perfect focus.
3 Place point of hook under CROSSBAR with eye towards TIPS of Tyer. Place lines between GUIDE through CHANNEL and TIPS/SLOT so that short line extends approximately 6 inches beyond TIPS. Use thumb to secure lines over PAD.
4 Pull short line downward into SLOT and wrap a tight coil of 4-5 turns. Wrap back around Tyer TIPS towards thumb using forefinger to hold turns in place.
5 From thumb side, thread short line back into CHANNEL under all turns and out through slotted TIPS. Give short line a light jerk. This causes knot to slide off Tyer onto line. Pull "tag end" until knot is snug (not tight) on line.
6 Pull main line to slide knot back to eye. Again pull "tag end" to secure knot completely. Trim off excess.

LOOSE TIE: Tie same as End Tie except secure knot about 1/4 inch form eye. Doing so provides livelier action for Flies,Lures and Live Bait.

LURE TIE: Tie same as End Tie except after threading line through eye of lure, hang lure off to one side Tyer and place lines, as with the End Tie, between GUIDE and through CHANNEL & TIPS/SLOT.

SHANK TIE:

1 Thread line downward through eye of hook about 8 inches.
2 WITHOUT doubling line back, place both hood shank and line in CHANNEL with point of hook downward between TIPS leaving the 8 inches of line extended beyond the TIPS.
3 Tie basic GRYP-KNOT around both Tyer and shank of hook using the same wrapping procedures as described above on the End Tie. After giving "tag end" a light jerk to transfer knot onto hook, hook will slide off Tyer with knot. Slide knot to eye and tighten.

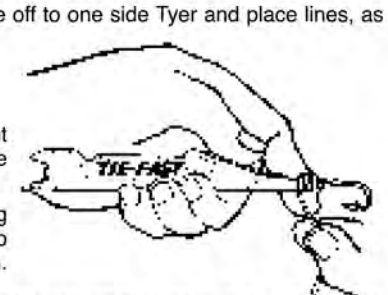

MOOCHING RIGS: Tie same as Shank Tie. Tie upper hook first, the line should be threaded far enough through eye of the first hook to allow for shank tying and spacing of additional hooks desired. NOTE: To tie a sliding hook, cut a 6 to 8-inch working piece and tie the shank tie around hook and main line with the working piece.