







DM-10

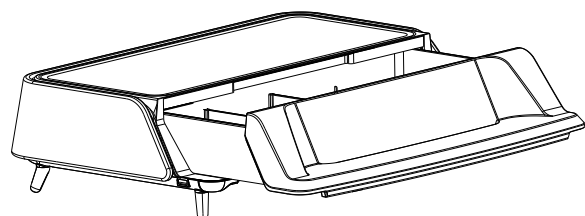

No.	Workstation	No.	Feet
A	 x1	B	 x4
No.	Magnet Pins	No.	Adapter
C	 x4	D	 x1

TOOLS




UV disinfection lamp precautions

1. When the UV disinfection lamp is turned on, please keep the distance of 1.5 ft or more with the product. Otherwise, it may cause damage to your eyes or skin.
2. Do not turn on the UV light on a transparent or reflective desktop surface.
3. Do not flip and move the product while UV lamp is on.
4. Children are prohibited from accessing and using UV sterilization lamps.

CE, >99% Sterilization Rate Confirmed by TUV SUD Products Testing



Table cover size:

Attention! Please make sure the base is safely placed on the desktop.

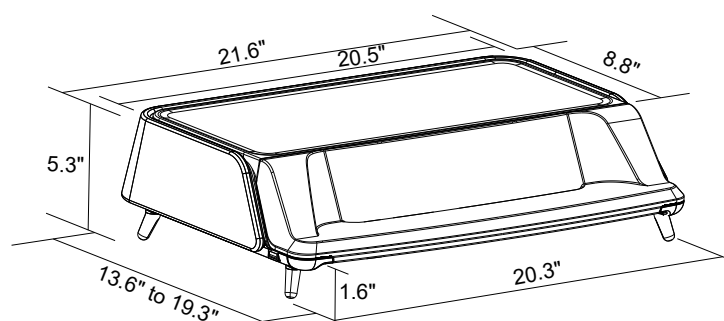

STEP 1

Attention: Hold onto the panel securely when moving the workstation.

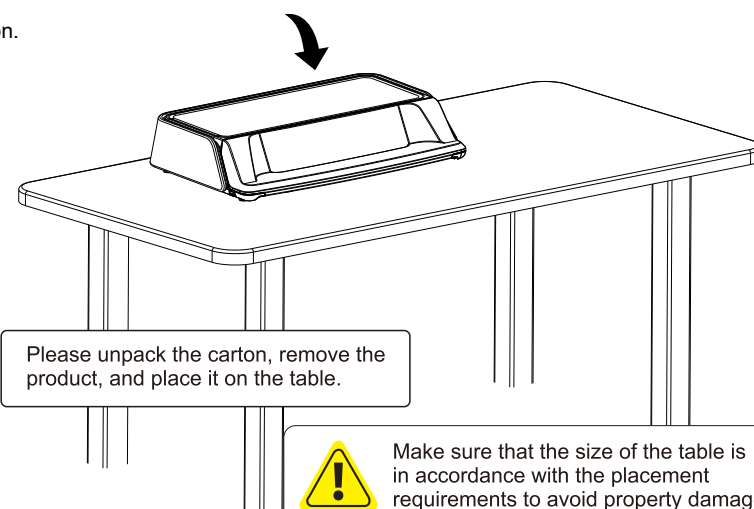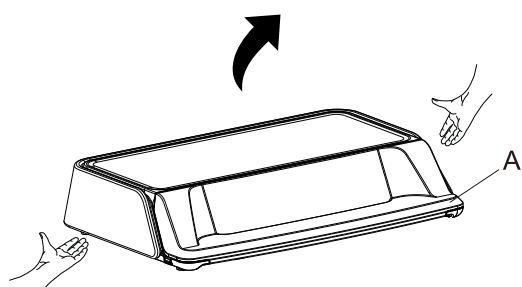


Please unpack the carton, remove the product, and place it on the table.



Make sure that the size of the table is in accordance with the placement requirements to avoid property damage and/or personal injury.

STEP 2


Mounting feet

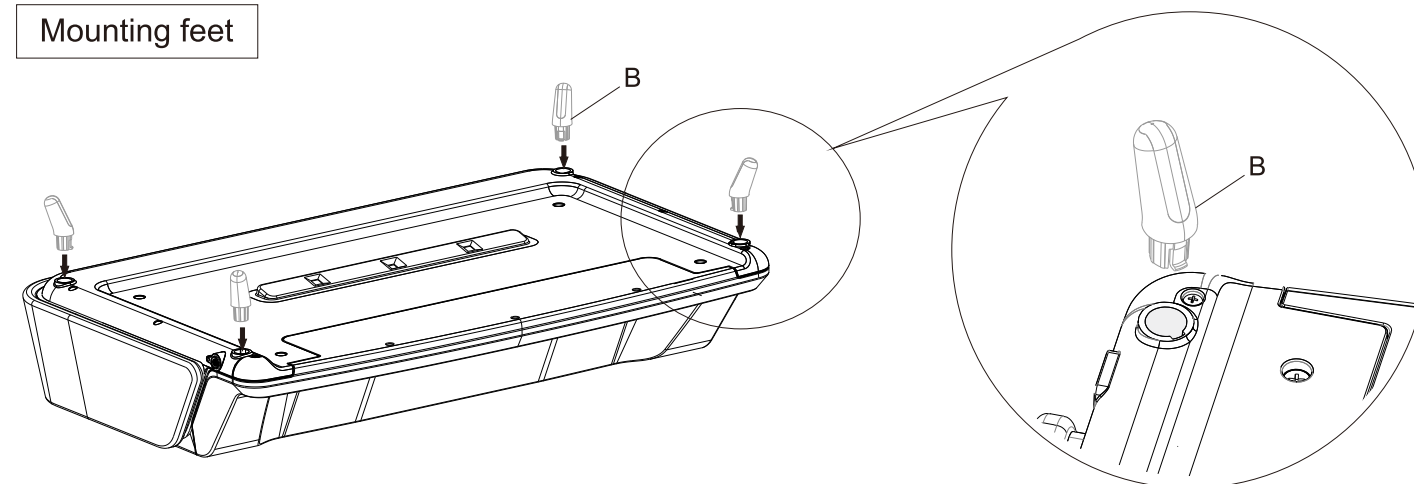


STEP 3

Adjust the position of the partition


Pull out the drawer

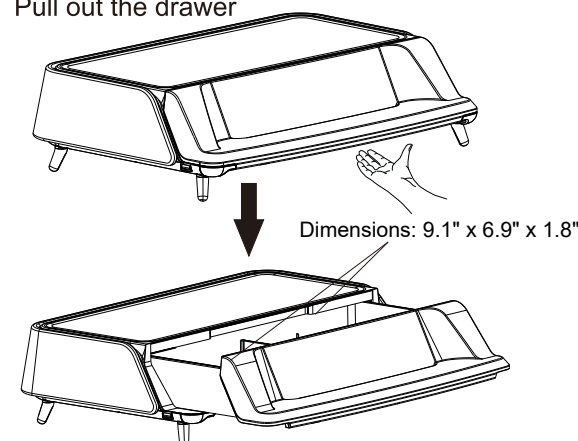


The partition can be installed in two positions, depending on your preference.

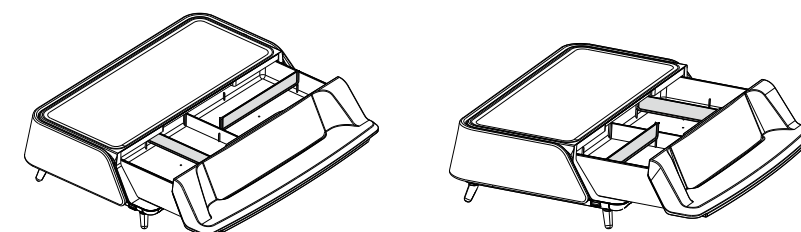



Place monitor on the workstation

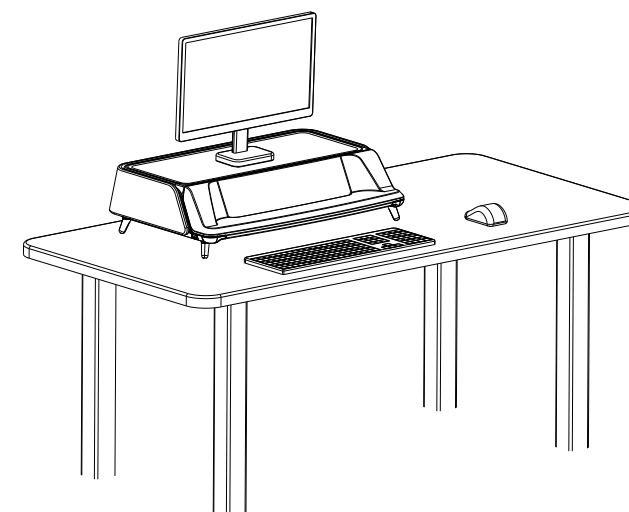

Install the magnetic pins

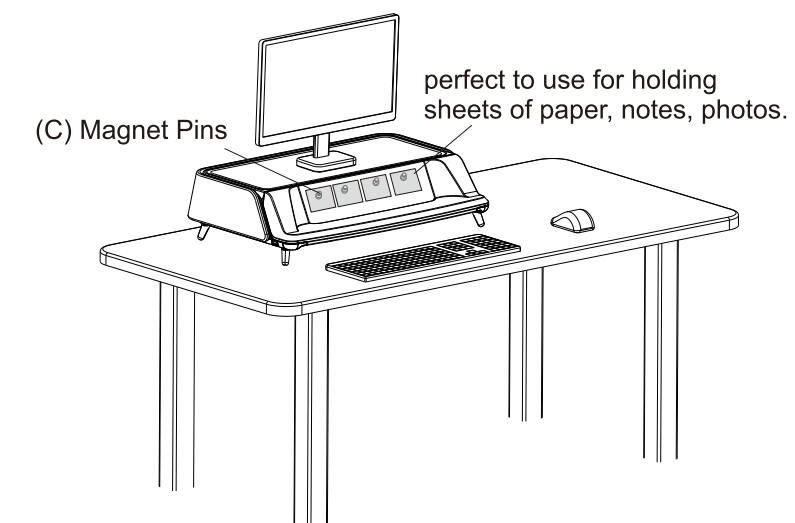


Function Description

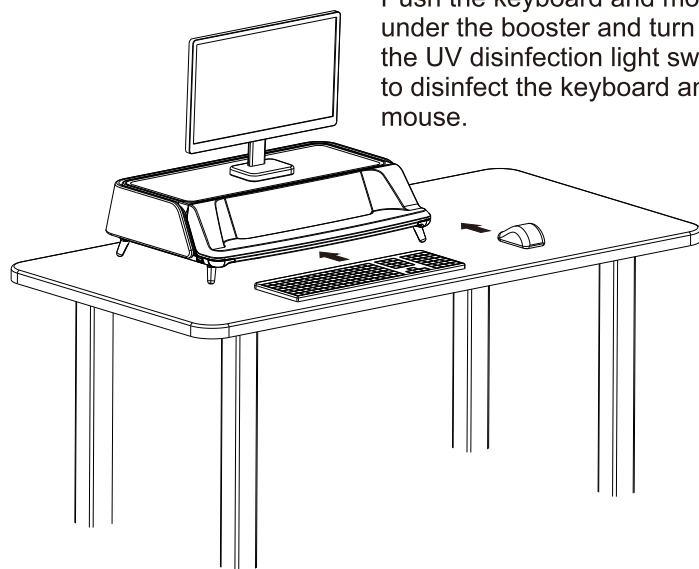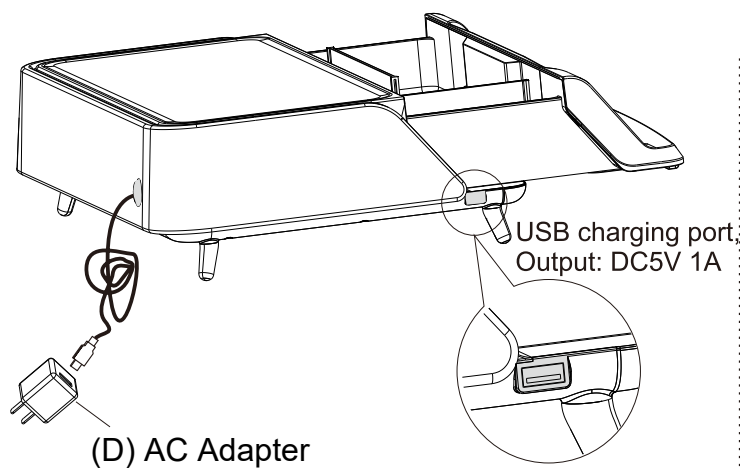

UV sterilization lamp function description

1. After pressing the UV light switch for 15 seconds, the USB disinfection light is turned on.
2. The UV sterilization lamp will automatically turn off after 10 minutes.
3. When the product is turned on or tilted, the UV disinfection lamp is automatically turned off; Return the workstation to the normal horizontal position before turning on the UV sterilization lamp.

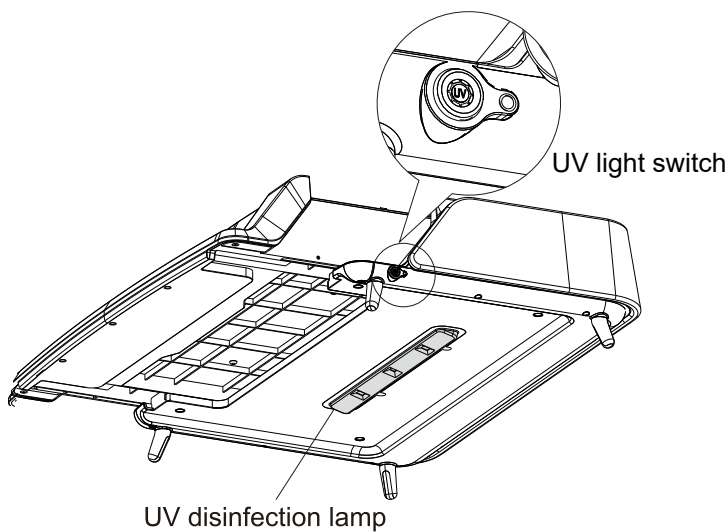

**Have any queries?
Our expert engineers are here to help!**



Progressivedesk.com



1-800-828-9414



sales@progressivedesk.com